

# TPE2, TPE2 D, TPE3, TPE3 D

**In-line circulator pumps**  
60 Hz, North America



<b>1. Pump data</b>	<b>3</b>	<b>18. Performance curves and technical data</b>	<b>90</b>
Introduction	3	TPE2, TPE2 D, TPE3, TPE3 D, class 125	90
Identification	5	<b>19. Weights and shipping volume</b>	<b>103</b>
<b>2. Performance range</b>	<b>6</b>	TPE2, TPE2 D, TPE3, TPE3 D	103
Performance range, TPE2 (D), TPE3 (D)	6	<b>20. Accessories</b>	<b>104</b>
Performance range, TPE2 D, TPE3 D, twin-head operation	7	Base plates	104
<b>3. Product range</b>	<b>8</b>	Insulating kits	104
<b>4. Operating conditions</b>	<b>14</b>	Sensors	105
Ambient temperature	14	External Grundfos sensors	109
Installation altitude	14	Potentiometer	110
<b>5. Pumped liquids</b>	<b>15</b>	Grundfos GO	110
Pumped liquids	15	CIU communication interface units	111
Liquid temperature	15	CIM communication interface modules	111
List of pumped liquids	15	<b>21. Minimum inlet pressure - NPSH</b>	<b>112</b>
Shaft seal for water-glycol mixture	17	TPE2, TPE2 D, TPE3, TPE3 D	113
<b>6. TPE2</b>	<b>18</b>	<b>22. Grundfos Product Center</b>	<b>114</b>
<b>7. TPE3</b>	<b>22</b>	Grundfos GO	115
<b>8. User interfaces for TPE pumps</b>	<b>26</b>		
Advanced control panel for TPE pumps	26		
Grundfos GO	31		
Description of selected functions	35		
Priority of settings	66		
Grundfos Eye	67		
Indicator lights and signal relays	68		
<b>9. Factory settings of E-pumps</b>	<b>70</b>		
<b>10. Communication</b>	<b>71</b>		
<b>11. Speed regulation</b>	<b>72</b>		
Affinity equations	72		
<b>12. Control of pumps in parallel</b>	<b>73</b>		
<b>13. Motor data</b>	<b>75</b>		
Motors	75		
Electrical data, speed-controlled motors	75		
<b>14. Installation</b>	<b>76</b>		
Mechanical installation	76		
Electrical installation	78		
<b>15. Motors with built-in VFD</b>	<b>79</b>		
Identification of functional module	84		
<b>16. Electromagnetic compatibility, EMC</b>	<b>85</b>		
Proper installation	85		
<b>17. Curve charts</b>	<b>87</b>		
How to read the curve charts	87		
Curve conditions	88		

# 1. Pump data

## Introduction

TP pumps are designed for applications such as:

- district heating systems
- heating systems
- air-conditioning systems
- district cooling systems
- water supply
- industrial processes
- industrial cooling.

The pumps are available with either standard motors (TP) or electronically speed-controlled motors (TPE, TPE2, TPE2 D, TPE3, TPE3 D).

**This product guide covers TPE2 (D) and TPE3 (D) speed-controlled pumps.**

**Please see Grundfos publication L-TP-PG-001 for TP, uncontrolled standard pump, product range and details and L-TPE-PG-01 for TPE series 1000 and 2000 speed controlled pump, product range and details.**

The pumps are all single-stage, in-line centrifugal pumps with mechanical shaft seal. The pumps are of the close-coupled type, that is, the pump and the motor are separate units.

## TPE, TPE2 and TPE3 speed-controlled pumps

We offer the following speed-controlled pumps which are based on the construction and choice of material of the TP pumps:

- TPE Series 1000 pumps without factory-fitted differential-pressure sensor
- TPE Series 2000 pumps with factory-fitted differential-pressure sensor
- TPE2 (D) pumps without built-in differential-pressure sensor and temperature sensor
- TPE3 (D) pumps with built-in differential-pressure sensor and temperature sensor.


All pumps are fitted with Grundfos permanent-magnet MLE motors with motor efficiency class IE5 according to IEC 60034-30-2. The MLE has a combined, motor and drive, efficiency above NEMA Premium Efficiency resulting in additional energy savings of 7-10 %.

### TPE2 pumps

The permanent-magnet motors have a built-in VFD, and the hydraulic components have been specially designed for optimum efficiency.

Via an external signal from a sensor or a controller, the pumps allow any configuration and control method required: constant pressure, temperature, flow or level. For further information, see page 18.

## TPE3 pumps

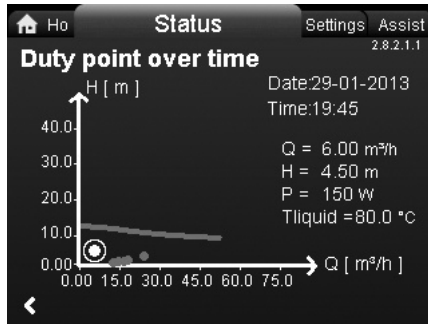

TM06 0883 1114

Fig. 1 Example of status display for TPE3 pumps

The pumps have a built-in differential-pressure sensor and temperature sensor.

The pumps are factory-set to  $AUTO_{ADAPT}$  control.

The permanent-magnet motors of the pumps have a built-in frequency converter for continuous adjustment of the pressure to the flow rate. The hydraulic components have been specially designed for optimum efficiency.

The range is recognized as a preset solution for quick and safe installation. The pumps have a color display for easy and intuitive pump setup and with full access to all functions. The pumps incorporate the following advanced functions:

- $AUTO_{ADAPT}$
- $FLOW_{ADAPT}$
- automatic night setback
- $FLOW_{LIMIT}$
- heat energy monitor
- flow rate estimation
- proportional pressure
- constant pressure
- constant differential temperature control
- constant temperature control.

For further information, see page 22.

### Why select a TPE pump

A pump with electronic speed control offers these benefits:

- energy savings
- increased comfort
- control and monitoring of pump performance
- communication with the pump.

### High-efficiency motors, IE5

TP pumps are fitted with high-efficiency motors.

The pumps are primarily fitted with motors that exceed the NEMA Premium Efficiency rating.

## Identification

### Type key for TPE2 (D), TPE3 (D)

Code	Example	TPE3	D	65	-120	-S	-A	-G	-A	-BQBE
	Pump range, electronically speed-controlled pump									
TPE2	Without built-in sensor									
TPE3	Built-in differential-pressure and temperature sensor									
	Twin-head pump									
	Nominal diameter of inlet and outlet ports, [mm]									
	Maximum head [decimeters (dm)]									
S	Built-in differential-pressure and temperature sensor									
N	Without built-in sensor									
	Code for pump version:									
A	Basic version									
X	Special version									
	Code for pipe connection:									
G	ANSI flange									
	Code for materials:									
A	Basic version									
I	Stainless steel CF8 (1.4308) pump housing and motor stool									
	Code for shaft seal including other plastic and rubber pump parts, except the neck ring									


### Codes for shaft seal

Code	Example	B	Q	B	E
	Grundfos type designation				
A	O-ring seal with fixed seal driver				
B	Rubber bellows seal				
D	O-ring seal, balanced				
G	Bellows seal with reduced seal faces				
R	O-ring seal with reduced seal faces				
	Material of rotating face				
A	Carbon, antimony-impregnated				
B	Carbon, resin-impregnated				
Q	Silicon carbide				
	Material of stationary seat				
B	Carbon, resin-impregnated				
Q	Silicon carbide				
U	Tungsten carbide				
	Material of secondary seal				
E	EPDM				
P	NBR rubber				
V	FKM				
F	FXM				

## 2. Performance range

### Performance range, TPE2 (D), TPE3 (D)


See page 90 for performance curves.

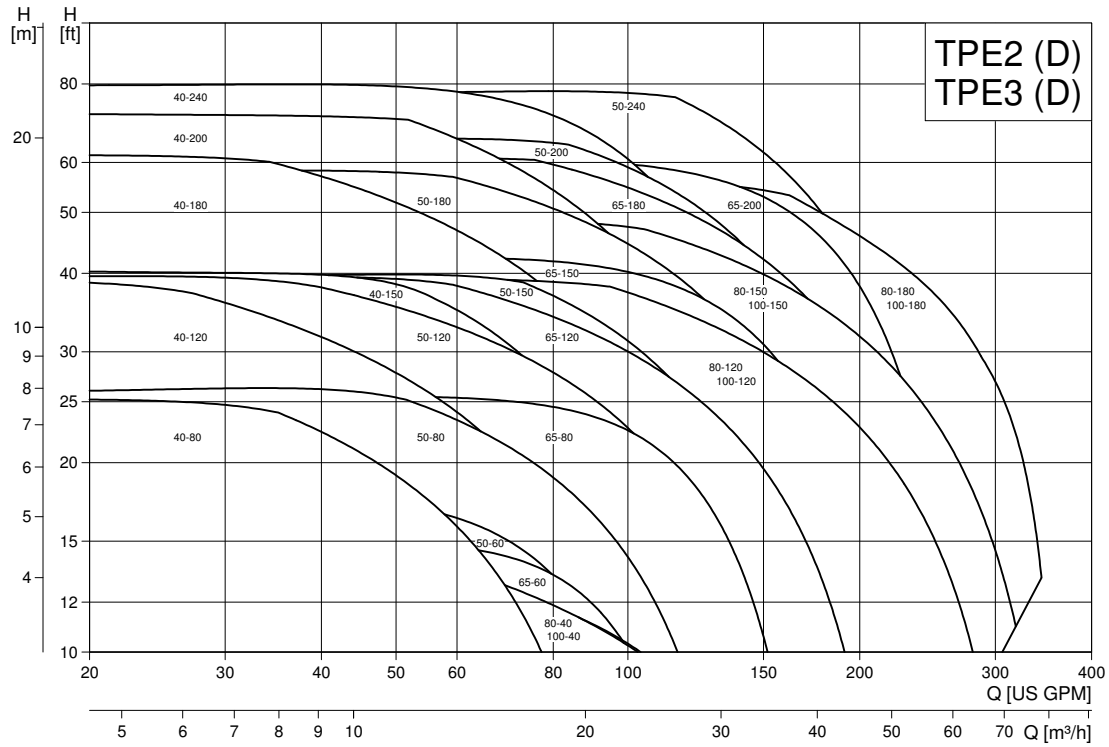

TM07 3024 4518

### Performance range, TPE2 D, TPE3 D, twin-head operation

See page 90 for performance curves.

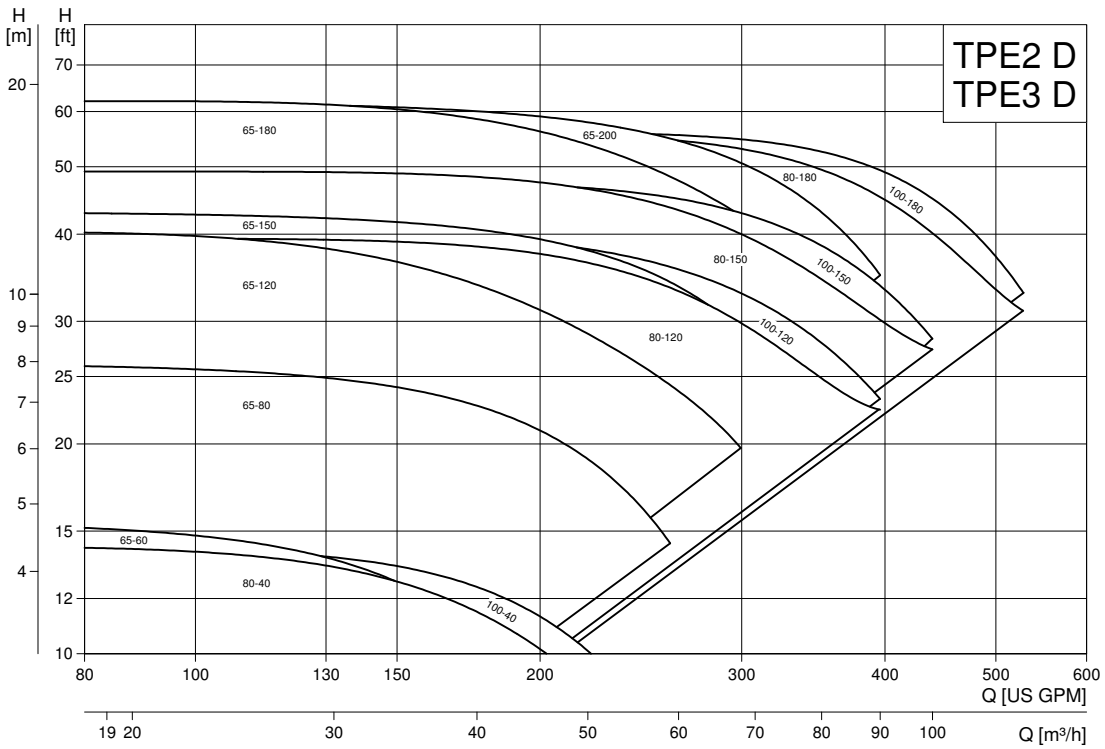

TM07 3025 4518

### 3. Product range

#### TPE2

TPE 2 without built in sensor						
Pump type	Shaft seal	Cast iron product number	Stainless steel product number	Motor		
				hp (kW)	Ph	Volt
TPE2 40-80	BQBE	99223501	99223516	0.33 (0.25)	1	240
		99223522	99223548	0.33 (0.25)	3	460
	BQQE	98817684	98817690	0.33 (0.25)	1	240
		98817707	98817713	0.33 (0.25)	3	460
TPE2 40-120	BQBE	99223504	99223517	0.5 (0.37)	1	240
		99223543	99223549	0.5 (0.37)	3	460
	BQQE	98817685	98817701	0.5 (0.37)	1	240
		98817708	98817714	0.5 (0.37)	3	460
TPE2 40-150	BQBE	99223506	99223518	0.75 (0.55)	1	240
		99223544	99223550	0.75 (0.55)	3	460
	BQQE	98817686	98817702	0.75 (0.55)	1	240
		98817709	98817715	0.75 (0.55)	3	460
TPE2 40-180	BQBE	99223509	99223519	1 (0.75)	1	240
		99223545	99223551	1 (0.75)	3	460
	BQQE	98817687	98817703	1 (0.75)	1	240
		98817710	98817716	1 (0.75)	3	460
TPE2 40-200	BQBE	99223512	99223520	1.5 (1.1)	1	240
		99223546	99223552	1.5 (1.1)	3	460
	BQQE	98817688	98817705	1.5 (1.1)	1	240
		98817711	98817717	1.5 (1.1)	3	460
TPE2 40-240	BQBE	99223514	99223521	2 (1.5)	1	240
		99223547	99223555	2 (1.5)	3	460
	BQQE	98817689	98817706	2 (1.5)	1	240
		98817712	98817718	2 (1.5)	3	460
TPE2 50-60	BQBE	99223558	99223594	0.5 (0.37)	1	240
		99223566	99223610	0.5 (0.37)	3	460
	BQQE	98817719	98817727	0.5 (0.37)	1	240
		98817721	98817739	0.5 (0.37)	3	460
TPE2 50-80	BQBE	99223560	99223597	0.5 (0.37)	1	240
		99223569	99223613	0.5 (0.37)	3	460
	BQQE	98817720	98817728	0.5 (0.37)	1	240
		98817722	98817741	0.5 (0.37)	3	460
TPE2 50-120	BQBE	99223563	99223599	0.75 (0.55)	1	240
		99223571	99223616	0.75 (0.55)	3	460
	BQQE	98817723	98817729	0.75 (0.55)	1	240
		98817734	98817742	0.75 (0.55)	3	460
TPE2 50-150	BQBE	99223574	99223602	1 (0.75)	1	240
		99223586	99223619	1 (0.75)	3	460
	BQQE	98817724	98817730	1 (0.75)	1	240
		98817735	98817744	1 (0.75)	3	460
TPE2 50-180	BQBE	99223577	99223605	1.5 (1.1)	1	240
		99223588	99223622	1.5 (1.1)	3	460
	BQQE	98817725	98817731	1.5 (1.1)	1	240
		98817736	98817745	1.5 (1.1)	3	460
TPE2 50-200	BQBE	99223580	99223608	2 (1.5)	1	240
		99223591	99223636	2 (1.5)	3	460
	BQQE	98817726	98817732	2 (1.5)	1	240
		98817737	98817746	2 (1.5)	3	460
TPE2 50-240	BQBE	99223583	99223638	3 (2.2)	3	460
	BQQE	98817738	98817747	3 (2.2)	3	460
TPE2 65-60	BQBE	99223641	99223665	0.5 (0.37)	1	240
		99223679	99223696	0.5 (0.37)	3	460
	BQQE	98817748	98817753	0.5 (0.37)	1	240
		98817758	98817766	0.5 (0.37)	3	460
TPE2 65-80	BQBE	99223654	99223668	0.75 (0.55)	1	240
		99223682	99223699	0.75 (0.55)	3	460
	BQQE	98817749	98817754	0.75 (0.55)	1	240
		98817760	98817767	0.75 (0.55)	3	460



TPE 2 without built in sensor						
Pump type	Shaft seal	Cast iron product number	Stainless steel product number	Motor		
				hp (kW)	Ph	Volt
TPE2 65-120	BQBE	99223657	99223671	1 (0.75)	1	240
		99223685	99223702	1 (0.75)	3	460
	BQQE	98817750	98817755	1 (0.75)	1	240
		98817761	98817768	1 (0.75)	3	460
TPE2 65-150	BQBE	99223660	99223673	1.5 (1.1)	1	240
		99223688	99223705	1.5 (1.1)	3	460
	BQQE	98817751	98817756	1.5 (1.1)	1	240
		98817763	98817769	1.5 (1.1)	3	460
TPE2 65-180	BQBE	99223662	99223676	2 (1.5)	1	240
		99223690	99223707	2 (1.5)	3	460
	BQQE	98817752	98817757	2 (1.5)	1	240
		98817764	98817770	2 (1.5)	3	460
TPE2 65-200	BQBE	99223693	99223711	3 (2.2)	3	460
	BQQE	98817765	98817781	3 (2.2)	3	460
TPE2 80-40	BQBE	99223723	99223863	0.33 (0.25)	1	240
		99223731	99223871	0.33 (0.25)	3	460
	BQQE	98817782	98817834	0.33 (0.25)	1	240
		98817785	98817838	0.33 (0.25)	3	460
TPE2 80-120	BQBE	99223726	99223866	1.5 (1.1)	1	240
		99223733	99223874	1.5 (1.1)	3	460
	BQQE	98817783	98817835	1.5 (1.1)	1	240
		98817786	98817839	1.5 (1.1)	3	460
TPE2 80-150	BQBE	99223729	99223869	2 (1.5)	1	240
		99223754	99223877	2 (1.5)	3	460
	BQQE	98817784	98817837	2 (1.5)	1	240
		98817787	98817840	2 (1.5)	3	460
TPE2 80-180	BQBE	99223757	99223880	3 (2.2)	3	460
	BQQE	98817788	98817841	3 (2.2)	3	460
TPE2 100-40	BQBE	99223736	99223883	0.33 (0.25)	1	240
		99223760	99223892	0.33 (0.25)	3	460
	BQQE	98817789	98817844	0.33 (0.25)	1	240
		98817794	98817847	0.33 (0.25)	3	460
TPE2 100-120	BQBE	99223739	99223886	1.5 (1.1)	1	240
		99223763	99223904	1.5 (1.1)	3	460
	BQQE	98817791	98817845	1.5 (1.1)	1	240
		98817795	98817848	1.5 (1.1)	3	460
TPE2 100-150	BQBE	99223741	99223888	2 (1.5)	1	240
		99223765	99223907	2 (1.5)	3	460
	BQQE	98817793	98817846	2 (1.5)	1	240
		98817796	98817849	2 (1.5)	3	460
TPE2 100-180	BQBE	99223768	99223910	3 (2.2)	3	460
	BQQE	98817797	98817850	3 (2.2)	3	460

## TPE 2 D

TPE 2 D without built in sensor						
Pump type	Shaft seal	Cast iron product number	Stainless steel product number	Motor		
				hp (kW)	Ph	Volt
TPE2 D 65-60	BQBE	99223771	-	0.5 (0.37)	1	240
		99223813	-	0.5 (0.37)	3	460
	BQQE	98817798	-	0.5 (0.37)	1	240
		98817810	-	0.5 (0.37)	3	460
TPE2 D 65-80	BQBE	99223774	-	0.75 (0.55)	1	240
		99223816	-	0.75 (0.55)	3	460
	BQQE	98817799	-	0.75 (0.55)	1	240
		98817811	-	0.75 (0.55)	3	460
TPE2 D 65-120	BQBE	99223777	-	1 (0.75)	1	240
		99223819	-	1 (0.75)	3	460
	BQQE	98817800	-	1 (0.75)	1	240
		98817812	-	1 (0.75)	3	460
TPE2 D 65-150	BQBE	99223780	-	1.5 (1.1)	1	240
		99223822	-	1.5 (1.1)	3	460
	BQQE	98817801	-	1.5 (1.1)	1	240
		98817814	-	1.5 (1.1)	3	460
TPE2 D 65-180	BQBE	99223782	-	2 (1.5)	1	240
		99223825	-	2 (1.5)	3	460
	BQQE	98817802	-	2 (1.5)	1	240
		98817816	-	2 (1.5)	3	460
TPE2 D 65-200	BQBE	99223827	-	3 (2.2)	3	460
	BQQE	98817817	-	3 (2.2)	3	460
TPE2 D 80-40	BQBE	99223785	-	0.33 (0.25)	1	240
		99223831	-	0.33 (0.25)	3	460
	BQQE	98817803	-	0.33 (0.25)	1	240
		98817818	-	0.33 (0.25)	3	460
TPE2 D 80-120	BQBE	99223788	-	1.5 (1.1)	1	240
		99223834	-	1.5 (1.1)	3	460
	BQQE	98817804	-	1.5 (1.1)	1	240
		98817819	-	1.5 (1.1)	3	460
TPE2 D 80-150	BQBE	99223791	-	2 (1.5)	1	240
		99223837	-	2 (1.5)	3	460
	BQQE	98817806	-	2 (1.5)	1	240
		98817820	-	2 (1.5)	3	460
TPE2 D 80-180	BQBE	99223840	-	3 (2.2)	3	460
	BQQE	98817821	-	3 (2.2)	3	460
TPE2 D 100-40	BQBE	99223804	-	0.33 (0.25)	1	240
		99223842	-	0.33 (0.25)	3	460
	BQQE	98817807	-	0.33 (0.25)	1	240
		98817822	-	0.33 (0.25)	3	460
TPE2 D 100-120	BQBE	99223807	-	1.5 (1.1)	1	240
		99223855	-	1.5 (1.1)	3	460
	BQQE	98817808	-	1.5 (1.1)	1	240
		98817823	-	1.5 (1.1)	3	460
TPE2 D 100-150	BQBE	99223810	-	2 (1.5)	1	240
		99223858	-	2 (1.5)	3	460
	BQQE	98817809	-	2 (1.5)	1	240
		98817824	-	2 (1.5)	3	460
TPE2 D 100-180	BQBE	99223860	-	3 (2.2)	3	460
	BQQE	98817825	-	3 (2.2)	3	460

## TPE 3

TPE 3 with built in differential pressure and temperature sensor						
Pump type	Shaft seal	Cast iron product number	Stainless steel product number	Motor		
				hp (kW)	Ph	Volt
TPE3 40-80	BQBE	99223923	99223939	0.33 (0.25)	1	240
		99223957	99223973	0.33 (0.25)	3	460
	BQQE	98819499	98819518	0.33 (0.25)	1	240
		98819536	98819564	0.33 (0.25)	3	460
TPE3 40-120	BQBE	99223926	99223942	0.5 (0.37)	1	240
		99223959	99223975	0.5 (0.37)	3	460
	BQQE	98819500	98819519	0.5 (0.37)	1	240
		98819537	98819565	0.5 (0.37)	3	460
TPE3 40-150	BQBE	99223928	99223945	0.75 (0.55)	1	240
		99223962	99223978	0.75 (0.55)	3	460
	BQQE	98819501	98819520	0.75 (0.55)	1	240
		98819538	98819566	0.75 (0.55)	3	460
TPE3 40-180	BQBE	99223931	99223948	1 (0.75)	1	240
		99223965	99223981	1 (0.75)	3	460
	BQQE	98819502	98819521	1 (0.75)	1	240
		98819539	98819567	1 (0.75)	3	460
TPE3 40-200	BQBE	99223934	99223951	1.5 (1.1)	1	240
		99223967	99223983	1.5 (1.1)	3	460
	BQQE	98819503	98819522	1.5 (1.1)	1	240
		98819540	98819568	1.5 (1.1)	3	460
TPE3 40-240	BQBE	99223937	99223954	2 (1.5)	1	240
		99223970	99223986	2 (1.5)	3	460
	BQQE	98819504	98819523	2 (1.5)	1	240
		98819541	98819569	2 (1.5)	3	460
TPE3 50-60	BQBE	99223989	99224022	0.5 (0.37)	1	240
		99224007	99224048	0.5 (0.37)	3	460
	BQQE	98819590	98819609	0.5 (0.37)	1	240
		98819625	98819646	0.5 (0.37)	3	460
TPE3 50-80	BQBE	99223991	99224025	0.5 (0.37)	1	240
		99224009	99224051	0.5 (0.37)	3	460
	BQQE	98819591	98819610	0.5 (0.37)	1	240
		98819626	98819647	0.5 (0.37)	3	460
TPE3 50-120	BQBE	99224004	99224027	0.75 (0.55)	1	240
		99224012	99224054	0.75 (0.55)	3	460
	BQQE	98819592	98819611	0.75 (0.55)	1	240
		98819627	98819648	0.75 (0.55)	3	460
TPE3 50-150	BQBE	99224014	99224030	1 (0.75)	1	240
		99224038	99224057	1 (0.75)	3	460
	BQQE	98819593	98819612	1 (0.75)	1	240
		98819628	98819649	1 (0.75)	3	460
TPE3 50-180	BQBE	99224017	99224033	1.5 (1.1)	1	240
		99224041	99224059	1.5 (1.1)	3	460
	BQQE	98819594	98819613	1.5 (1.1)	1	240
		98819629	98819650	1.5 (1.1)	3	460
TPE3 50-200	BQBE	99224020	99224035	2 (1.5)	1	240
		99224043	99224062	2 (1.5)	3	460
	BQQE	98819595	98819614	2 (1.5)	1	240
		98819630	98819651	2 (1.5)	3	460
TPE3 50-240	BQBE	99224046	99224065	3 (2.2)	3	460
	BQQE	98819631	98819652	3 (2.2)	3	460
TPE3 65-60	BQBE	99224067	99224107	0.5 (0.37)	1	240
		99224091	99224126	0.5 (0.37)	3	460
	BQQE	98819666	98819694	0.5 (0.37)	1	240
		98819709	98819728	0.5 (0.37)	3	460
TPE3 65-80	BQBE	99224071	99224108	0.75 (0.55)	1	240
		99224104	99224127	0.75 (0.55)	3	460
	BQQE	98819667	98819695	0.75 (0.55)	1	240
		98819710	98819729	0.75 (0.55)	3	460

TPE 3 with built in differential pressure and temperature sensor						
Pump type	Shaft seal	Cast iron product number	Stainless steel product number	Motor		
				hp (kW)	Ph	Volt
TPE3 65-120	BQBE	99224083	99224109	1 (0.75)	1	240
		99224112	99224131	1 (0.75)	3	460
	BQQE	98819668	98819696	1 (0.75)	1	240
		98819711	98819730	1 (0.75)	3	460
TPE3 65-150	BQBE	99224086	99224110	1.5 (1.1)	1	240
		99224123	99224161	1.5 (1.1)	3	460
	BQQE	98819682	98819697	1.5 (1.1)	1	240
		98819712	98819731	1.5 (1.1)	3	460
TPE3 65-180	BQBE	99224089	99224111	2 (1.5)	1	240
		99224124	99224173	2 (1.5)	3	460
	BQQE	98819683	98819698	2 (1.5)	1	240
		98819713	98819732	2 (1.5)	3	460
TPE3 65-200	BQBE	99224125	99224175	3 (2.2)	3	460
	BQQE	98819714	98819733	3 (2.2)	3	460
TPE3 80-40	BQBE	99224178	99224179	0.33 (0.25)	1	240
		99224184	99224185	0.33 (0.25)	3	460
	BQQE	98819743	98819903	0.33 (0.25)	1	240
		98819748	98819908	0.33 (0.25)	3	460
TPE3 80-120	BQBE	99224180	99224181	1.5 (1.1)	1	240
		99224186	99224187	1.5 (1.1)	3	460
	BQQE	98819749	98819909	1.5 (1.1)	3	460
		98819756	98819916	1.5 (1.1)	1	240
TPE3 80-150	BQBE	99224182	99224183	2 (1.5)	1	240
		99224188	99224189	2 (1.5)	3	460
	BQQE	98819750	98819910	2 (1.5)	3	460
		98819757	98819917	2 (1.5)	1	240
TPE3 80-180	BQBE	99224190	99224191	3 (2.2)	3	460
	BQQE	98819751	98819911	3 (2.2)	3	460
TPE3 100-40	BQBE	99224203	99224192	0.33 (0.25)	1	240
		99224209	99224208	0.33 (0.25)	3	460
	BQQE	98819764	98819924	0.33 (0.25)	1	240
		98819774	98819934	0.33 (0.25)	3	460
TPE3 100-120	BQBE	99224205	99224204	1.5 (1.1)	1	240
		99224211	99224210	1.5 (1.1)	3	460
	BQQE	98819765	98819925	1.5 (1.1)	1	240
		98819775	98819935	1.5 (1.1)	3	460
TPE3 100-150	BQBE	99224207	99224206	2 (1.5)	1	240
		99224214	99224212	2 (1.5)	3	460
	BQQE	98819766	98819926	2 (1.5)	1	240
		98819776	98819936	2 (1.5)	3	460
TPE3 100-180	BQBE	99224128	99224213	3 (2.2)	3	460
	BQQE	98819777	98819937	3 (2.2)	3	460

## TPE 3 D

TPE 3 D with built in differential pressure and temperature sensor						
Pump type	Shaft seal	Cast iron product number	Stainless steel product number	Motor		
				hp (kW)	Ph	Volt
TPE2 D 65-60	BQBE	99223771	-	0.5 (0.37)	1	240
		99223813	-	0.5 (0.37)	3	460
	BQQE	98817798	-	0.5 (0.37)	1	240
		98817810	-	0.5 (0.37)	3	460
TPE2 D 65-80	BQBE	99223774	-	0.75 (0.55)	1	240
		99223816	-	0.75 (0.55)	3	460
	BQQE	98817799	-	0.75 (0.55)	1	240
		98817811	-	0.75 (0.55)	3	460
TPE2 D 65-120	BQBE	99223777	-	1 (0.75)	1	240
		99223819	-	1 (0.75)	3	460
	BQQE	98817800	-	1 (0.75)	1	240
		98817812	-	1 (0.75)	3	460
TPE2 D 65-150	BQBE	99223780	-	1.5 (1.1)	1	240
		99223822	-	1.5 (1.1)	3	460
	BQQE	98817801	-	1.5 (1.1)	1	240
		98817814	-	1.5 (1.1)	3	460
TPE2 D 65-180	BQBE	99223782	-	2 (1.5)	1	240
		99223825	-	2 (1.5)	3	460
	BQQE	98817802	-	2 (1.5)	1	240
		98817816	-	2 (1.5)	3	460
TPE2 D 65-200	BQBE	99223827	-	3 (2.2)	3	460
	BQQE	98817817	-	3 (2.2)	3	460
TPE2 D 80-40	BQBE	99223785	-	0.33 (0.25)	1	240
		99223831	-	0.33 (0.25)	3	460
	BQQE	98817803	-	0.33 (0.25)	1	240
		98817818	-	0.33 (0.25)	3	460
TPE2 D 80-120	BQBE	99223788	-	1.5 (1.1)	1	240
		99223834	-	1.5 (1.1)	3	460
	BQQE	98817804	-	1.5 (1.1)	1	240
		98817819	-	1.5 (1.1)	3	460
TPE2 D 80-150	BQBE	99223791	-	2 (1.5)	1	240
		99223837	-	2 (1.5)	3	460
	BQQE	98817806	-	2 (1.5)	1	240
		98817820	-	2 (1.5)	3	460
TPE2 D 80-180	BQBE	99223840	-	3 (2.2)	3	460
	BQQE	98817821	-	3 (2.2)	3	460
TPE2 D 100-40	BQBE	99223804	-	0.33 (0.25)	1	240
		99223842	-	0.33 (0.25)	3	460
	BQQE	98817807	-	0.33 (0.25)	1	240
		98817822	-	0.33 (0.25)	3	460
TPE2 D 100-120	BQBE	99223807	-	1.5 (1.1)	1	240
		99223855	-	1.5 (1.1)	3	460
	BQQE	98817808	-	1.5 (1.1)	1	240
		98817823	-	1.5 (1.1)	3	460
TPE2 D 100-150	BQBE	99223810	-	2 (1.5)	1	240
		99223858	-	2 (1.5)	3	460
	BQQE	98817809	-	2 (1.5)	1	240
		98817824	-	2 (1.5)	3	460
TPE2 D 100-180	BQBE	99223860	-	3 (2.2)	3	460
	BQQE	98817825	-	3 (2.2)	3	460

## 4. Operating conditions

### System and test pressures

Pressure	System pressure		Test pressure	
	[bar]	[PSI]	[bar]	[PSI]
PN 10	10	145	16	232

### Sound pressure level

The selection of TPE pumps will reduce the noise at partial load as the motor and, consequently, the motor fan run at a lower speed. Possible flow noise from control valves is also reduced at partial load in the case of the TPE, TPE2, and TPE3 pumps.

See "Sound pressure level" on page 81.

### Ambient temperature

MLE motors: 0.33 - 3 hp (0,25 - 2,2 kW), 2 and 4-pole	-4 to 122 °F (-20 to +50 °C)
Storage	Down to 22 °F (-30 °C)

### Installation altitude

#### Pump with Grundfos MLE motor

Installation altitude is the height above sea level of the installation site.

Motors installed up to 3280 ft (1000 m) above sea level can be loaded 100 %.

The motors can be installed up to 11,480 ft (3500 m) above sea level.

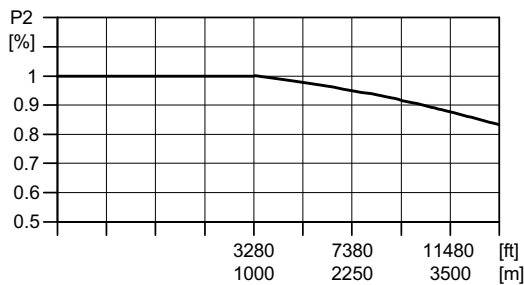


Fig. 2 Motor output power in relation to altitude

In order to maintain the galvanic isolation, you must adapt the supply voltage to the altitude:

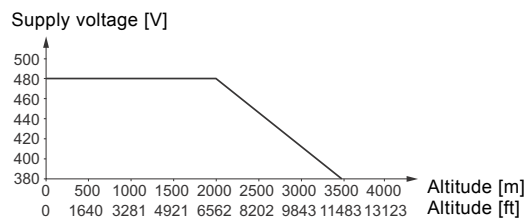


Fig. 3 Supply voltage for three-phase motor in relation to altitude

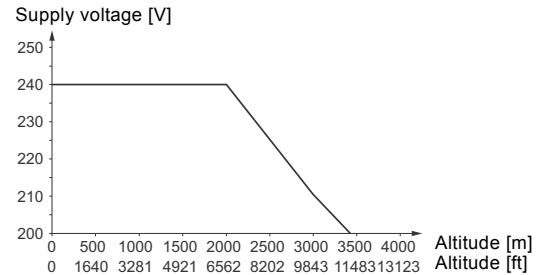


Fig. 4 Supply voltage for single-phase motor in relation to altitude

#### Note:

Motors installed more than 3280 ft (1000 m) above sea level must not be fully loaded due to the low density and consequent low cooling effect of the air.

If the motor is to operate at ambient temperatures between 122 and 140 °F (50 and 60 °C), select an oversized motor. Contact Grundfos.

## 5. Pumped liquids

### Pumped liquids

The pump is suitable for thin, clean, non-aggressive and non-flammable liquids, not containing solid particles or fibres that may attack the pump mechanically or chemically. See [List of pumped liquids](#) on page 15.

#### Examples

- Central heating system water. The water must meet the requirements of accepted standards on water quality in heating systems:
- cooling liquids
- domestic hot water
- industrial liquids
- softened water.

If glycol or another antifreeze agent is added to the pumped liquid, the pump must have a shaft seal of the BQQE type. See [Shaft seal for water-glycol mixture](#) on page 17.

The pumping of liquids with density and/or kinematic viscosity higher than that of water will have the following effects:

- a considerable pressure drop
- a drop in hydraulic performance
- a rise in power consumption.

In such cases, fit the pump with a bigger motor. If in doubt, contact Grundfos.

If the water contains mineral or synthetic oils or chemicals, or if liquids other than water are pumped, choose the O-rings accordingly.

### Liquid temperature

Liquid temperature: -13 to 248 °F (-25 to +120 °C).

Please note that shaft seals operating close to their maximum temperature will require regular maintenance or replacement.

Pump type	Shaft seal	Temperature
TPE2, TPE3	BQBE	32 to 248 °F (0 to +120 °C) <sup>1)</sup>
	BQQE	-13 to 248 °F (-25 to +120 °C)

<sup>1)</sup> 284 °F (140 °C) for a short period.

Depending on the type of cast-iron version and the pump application, the maximum liquid temperature may be limited by local regulations and laws.

### List of pumped liquids

TP pumps are designed for circulation systems with constant flow rate; TPE2, TPE2D, TPE3, TPE3D, TPE pumps for systems with variable flow rate.

Thanks to their design, you can use these pumps in a wider liquid temperature range than pumps of the canned rotor type.

A number of typical liquids are listed below.

You can use other pump versions, but we consider the ones listed below to be the best choices.

The list is intended as a general guide only, and it cannot replace actual testing of the pumped liquids and pump materials under specific working conditions. Use the list with some caution as factors such as concentration of the pumped liquid, liquid temperature or pressure may affect the chemical resistance of a specific pump version.

#### Legend

<b>A</b>	May contain additives or impurities that can cause shaft seal problems.
<b>B</b>	The density and/or viscosity differ from those of water. Consider this when calculating motor and pump performance.
<b>C</b>	The liquid must be oxygen-free (anaerobic).
<b>D</b>	Risk of crystallization or precipitation in the shaft seal.
<b>E</b>	Insoluble in water.
<b>F</b>	The shaft seal rubber parts must be replaced with FKM rubber.
<b>G</b>	Bronze housing or impeller required.
<b>H</b>	Risk of ice formation on the standby pump. The risk only applies to TP, TPE Series 200 pumps.

Pumped liquids	Notes	Additional information	Shaft seal
			TPE2, TPE3
<b>Water</b>			
Groundwater		< 248 °F (120 °C)	BQBE BQQE
		> 248 °F (120 °C)	
Boiler-feed water		< 248 °F (120 °C)	BQBE BQQE
District-heating water		< 248 °F (120 °C)	BQBE BQQE
Condensate		< 248 °F (120 °C)	BQBE BQQE
		> 248 °F (120 °C)	
Softened water	C	< 248 °F (120 °C)	BQBE BQQE
Brackish water	G	pH > 6.5, 104 °F (40 °C), 1000 ppm Cl <sup>-</sup>	BQBE BQQE
<b>Coolants</b>			
Ethylene glycol	B, D, H	< 248 °F (120 °C)	BQQE
Glycerine (glycerol)	B, D, H	< 248 °F (120 °C)	BQQE
Potassium acetate	B, D, C, H	< 248 °F (120 °C)	BQQE
Potassium formate	B, D, C, H	< 248 °F (120 °C)	BQQE
Propylene glycol	B, D, H	< 248 °F (120 °C)	BQQE
Brine sodium chloride	B, D, C, H	< 41 °F (5 °C), 30 %	BQQE
<b>Synthetic oils</b>			
Silicone oil	B, E		BQBE BQQE
<b>Vegetable oils</b>			
Corn oil	B, F, E		BUBV <sup>(2) + 3)</sup> BQQV <sup>(2) + 3)</sup>
Olive oil	B, F, E	< 176 °F (80 °C)	BUBV <sup>(2) + 3)</sup> BQQV <sup>(2) + 3)</sup>
Peanut oil	B, F, E		BUBV <sup>(2) + 3)</sup> BQQV <sup>(2) + 3)</sup>
Rapeseed oil	D, B, F, E		BUBV <sup>(2) + 3)</sup> BQQV <sup>(2) + 3)</sup>
Soybean oil	B, F, E		BUBV <sup>(2) + 3)</sup> BQQV <sup>(2) + 3)</sup>

Pumped liquids	Notes	Additional information	Shaft seal
			TPE2, TPE3
<b>Cleaning agents</b>			
Soap (salts of fatty acids)	A, E, (F)	< 176 °F (80 °C)	BQQE (BQQV) <sup>2)</sup>
Alkaline degreasing agent	A, E, (F)	< 176 °F (80 °C)	BQQE (BQQV) <sup>2)</sup>
<b>Oxidants</b>			
Hydrogen peroxide		< 104 °F (40 °C), < 2 %	BQBE BQQE
<b>Salts</b>			
Ammonium bicarbonate	A	< 68 °F (20 °C), < 15 %	BQQE
Calcium acetate	A, B	< 68 °F (20 °C), < 30 %	BQQE
Potassium bicarbonate	A	< 68 °F (20 °C), < 20 %	BQQE
Potassium carbonate	A	< 68 °F (20 °C), < 20 %	BQQE
Potassium permanganate	A	< 68 °F (20 °C), < 10 %	BQQE
Potassium sulphate	A	< 68 °F (20 °C), < 20 %	BQQE
Sodium acetate	A	< 68 °F (20 °C), < 100 %	BQQE
Sodium bicarbonate	A	< 68 °F (20 °C), < 2 %	BQQE
Sodium carbonate	A	< 68 °F (20 °C), < 20 %	BQQE
Sodium nitrate	A	< 32 °F (0 °C), < 40 %	BQQE
Sodium nitrite	A	< 68 °F (20 °C), < 40 %	BQQE
Sodium phosphate (di)	A	< 212 °F (100 °C), < 30 %	BQQE
Sodium phosphate (tri)	A	< 194 °F (90 °C), < 20 %	BQQE
Sodium sulphate	A	< 68 °F (20 °C), < 20 %	BQQE
Sodium sulphite	A	< 68 °F (20 °C), < 1 %	BQQE
<b>Alkalis</b>			
Ammonium hydroxide		< 212 °F (100 °C), < 30 %	BQQE
Calcium hydroxide	A	< 212 °F (100 °C), < 10 %	BQQE
Potassium hydroxide	A	< 68 °F (20 °C), < 20 %	BQQE
Sodium hydroxide	A	< 104 °F (40 °C), < 20 %	BQQE

1) Do not use BAQE for potable water. For potable water, we recommend that you use a BQBE shaft seal.


2) The shaft seal is not standard, but is available on request.

3) Applies only for TPE2.


4) Do not use for potable water.



## Shaft seal for water-glycol mixture

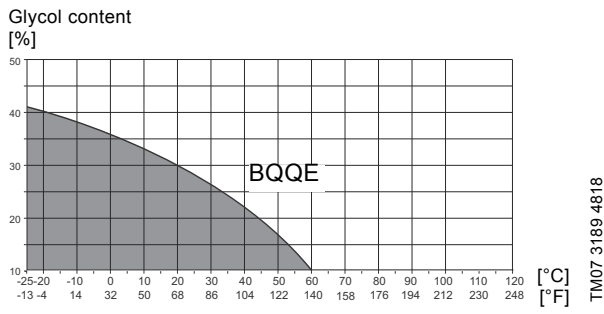

**Fig. 5** Operating range of EPDM shaft seals

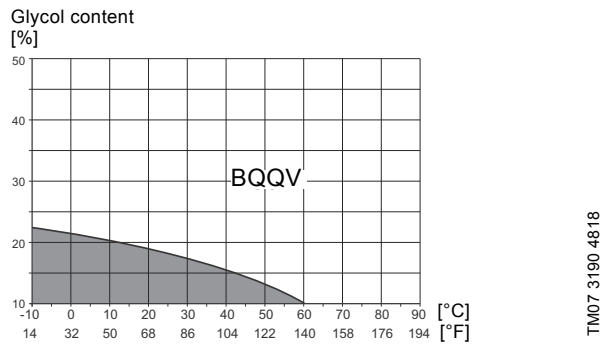

**Fig. 6** Operating range of FKM shaft seals

## 6. TPE2



Fig. 7 TPE2 and TPE2 D pumps

### Technical data

Flow rate:	Up to 528 GPM (120 m <sup>3</sup> /h)
Head:	Up to 82 ft (25 m)
Liquid temperature:	-13 to 248 °F (-25 to +120 °C) (284 °F (140 °C) for a short period)
Maximum operating pressure:	232 psi (16 bar)
Motor sizes, single-phase:	0.33 to 2 hp (0.25 to 1.5 kW)
Motor sizes, three-phase:	0.33 to 3 hp (0.25 to 2.2 kW)

### Construction

Via an external signal from a sensor or a controller, the pumps allow any configuration and control method required, such as constant pressure, temperature, flow rate or level.

The permanent-magnet motor has a built-in frequency converter for continuous adjustment of the pressure to the flow rate. All pumps are fitted with Grundfos permanent-magnet MLE motors that have motor efficiency class IE5 according to IEC 60034-30-2.

The range is a preset solution for quick and safe installation.

The pumps are available as single-head, TPE2, and twin-head, TPE2 D.

The pumps have Class 125 flanges.

The pumps are fitted with an unbalanced mechanical shaft seal.

The power head (motor, pump head and impeller) and pump housing are held together by a specially designed clamp. The clamp allows a fast repositioning of the pump housing and fast service of the pump.

The twin-head pumps are designed with two parallel power heads. A flap valve in the common outlet port is opened by the flow of the pumped liquid and prevents backflow of liquid into the idle pump head.

As radial and axial forces are absorbed by the fixed bearing in the motor drive-end, the pump requires no bearing.

TM07 3079 4518 - TM07 3080 4518

Pumps with stainless-steel pump housing, version I, are suitable for circulation of domestic hot water.

### Materials

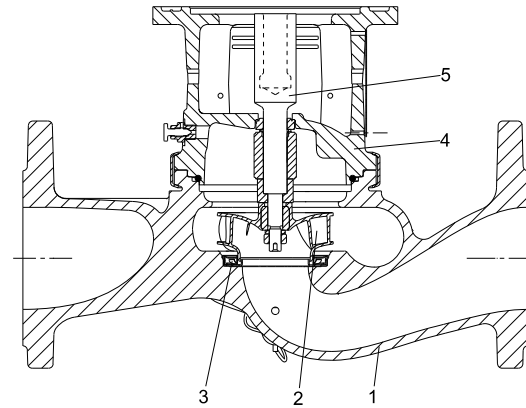


Fig. 8 Sectional drawing of a TPE2 pump

TM05 8200 2113

### Material specification

Pos.	Component	Material	EN/DIN (ASTM/AISI)
1	Pump housing	Cast iron EN-GJL-250 Stainless steel	EN1561 (ASTM A48 CL 40B) EN 1.4308 (CF8)
2	Impeller	Composite PES-GF30	
3	Neck ring	Stainless steel	EN 1.4404 (316/316L)
4	Pump head/motor stool	Cast iron EN-GJL-250 Stainless steel	EN1561 (ASTM A48 CL 40B) EN 1.4308 (CF8)
	Secondary seals	EPDM	
	Rotating seal face	Tungsten carbide	
	Stationary seat	Carbon (resin-impregnated) Tungsten carbide	
5	Stub shaft	Stainless steel	EN 1.4404 (316/316L)

### Applications

The pumps have integrated speed control for automatic adaptation of performance to current conditions.

The energy consumption is thus kept at a minimum.

The pumps can operate at any duty point within the range between minimum and maximum speed.

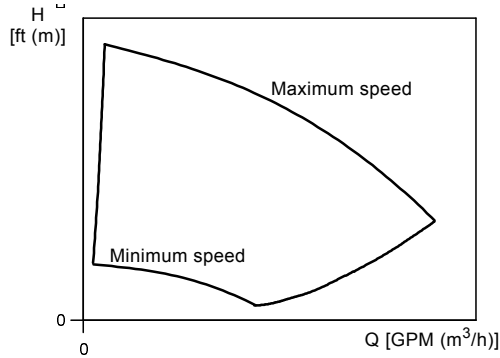


Fig. 9 Duty range of TPE2

Depending on the application, the pumps offer energy savings, increased comfort or improved processing. The pumps can be fitted with sensor types meeting the requirements mentioned in 20. *Accessories* on page 104.

### Constant curve

The pumps are factory-set to constant-curve control mode.


#### System application

In systems with relatively large pressure losses in the distribution pipes and in air-conditioning and cooling systems.

- Two-pipe heating systems with thermostatic valves and the following:
  - very long distribution pipes
  - strongly throttled pipe balancing valves
  - differential-pressure regulators
- large pressure losses in those parts of the system through which the total quantity of water flows, for example, boiler, heat exchanger and distribution pipe up to the first branching
- primary circuit pumps in systems with large pressure losses in the primary circuit
- air-conditioning systems with the following:
  - heat exchangers (fan coils)
  - cooling ceilings
  - cooling surfaces.

#### Select this control mode


**Constant differential-pressure with differential pressure sensor located in the system**

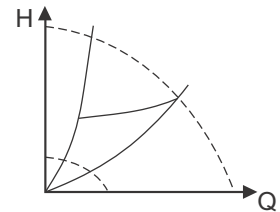

In systems with relatively small pressure losses in the distribution pipes.


- Two-pipe heating systems with thermostatic valves and the following:
  - sized for natural circulation
  - small pressure losses in those parts of the system through which the total quantity of water flows, for example, boiler, heat exchanger and distribution pipe up to the first branching, or modified to a high differential temperature between flow pipe and return pipe, for example, district heating.
- Underfloor heating systems with thermostatic valves.
- One-pipe heating systems with thermostatic valves or pipe balancing valves.
- Primary circuit pumps in systems with small pressure losses in the primary circuit.

#### Constant differential pressure

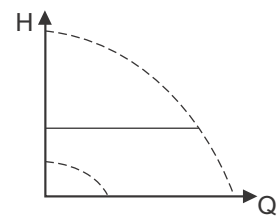

In pressure boosting systems.

#### Constant pressure

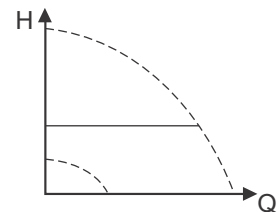


**System application****Select this control mode**

In systems with a fixed system characteristic.

Examples:


- one-pipe heating systems
- boiler shunts
- systems with three-way valves
- domestic hot-water circulation.

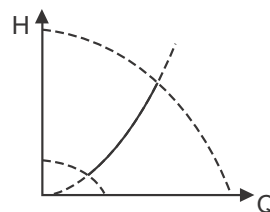**Constant temperature and constant differential temperature**

If an external controller is installed, the pump is able to change from one constant curve to another, depending on the value of the external signal.

The pump can also be set to operate according to the maximum or minimum curve, like an uncontrolled pump:


- Use the maximum curve mode in periods in which a maximum flow rate is required. This operating mode is, for instance, suitable for hot-water priority.
- Use the minimum curve mode in periods where a minimum flow rate is required. This operating mode is, for instance, suitable for manual night setback instead of automatic night setback.

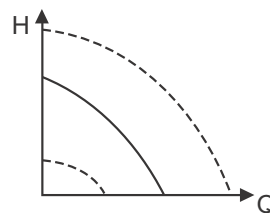**Constant curve**

In systems requiring a constant flow rate, independent of pressure drop.

Examples:


- chillers for air-conditioning
- heating surfaces
- cooling surfaces.

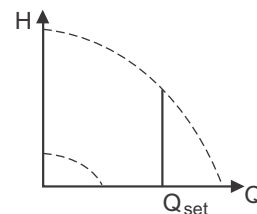**Constant flow rate**

In systems requiring a constant tank level, independently of the flow rate.

Examples:

- process water tanks
- boiler condensate tanks.

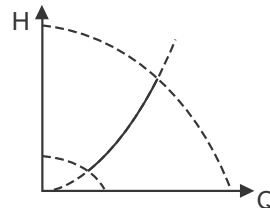**Constant level**

In systems with pumps operating in parallel.

The multipump function enables the control of single-head pumps connected in parallel (two to four pumps) and twin-head pumps without the use of external controllers. The pumps in a multipump system communicate with each other via the wireless GENI air connection or the wired GENI connection.

**"Assist" menu  
"Multipump setup"**

## Multipump system

The multipump function enables the control of single-head pumps connected in parallel or twin-head pumps without the use of external controllers. The pumps in a multipump system communicate with each other via the wireless GENlair connection or the wired GENI connection.

You set a multipump system via a selected pump - the master pump which is the first selected pump.

If you configure two pumps in the system with an outlet-pressure sensor, both pumps can function as master pumps and take over the master pump function if the other fails. This provides additional redundancy in the multipump system.

You can connect all Grundfos pumps with a wireless GENlair connection to the multipump system.

The multipump functions are described in the following sections.

### Alternating operation

Alternating operation functions as a duty-standby operating mode and is possible with two pumps of same size and type connected in parallel. The main purpose of the function is to ensure an even amount of running hours and to ensure that the standby pump takes over if the running pump stops due to an alarm. Each pump requires a non-return valve in series with the pump.

You can choose between two alternating operation modes:

- Alternating operation, time.  
Pump changeover to the other is based on time.
- Alternating operation, energy.  
Pump changeover to the other is based on energy consumption.  
If the duty pump fails, the other pump takes over automatically.  
Only one pump is operating at a time. The change from one pump to the other depends on time or energy. If a pump fails, the other pump takes over automatically.

Pump system:

- Twin-head pump.
- Two single-head pumps connected in parallel.  
The pumps must be of the same type and size. Each pump requires a non-return valve in series with the pump.

### Backup operation

Backup operation is possible with two same size and type pumps connected in parallel. Each pump requires a non-return valve in series with the pump.

One pump is operating continuously. The backup pump is operated for a short time each day to prevent seizing up. If the duty pump stops due to a fault, the backup pump starts automatically.

Pump system:

- Twin-head pump.
- Two single-head pumps connected in parallel.  
The pumps must be of the same type and size. Each pump requires a non-return valve in series with the pump.

### Cascade operation

Cascade operation ensures that the pump performance is automatically adapted to the consumption by switching pumps on or off. As a result, the system runs as energy-efficiently as possible with a constant pressure and a limited number of pumps.

When a twin-head pump is running in constant-pressure control mode, the second pump head starts at 90 % and stops at 50 % performance.

All pumps in operation will run at equal speed. Pump changeover is automatic and depends on energy, operating hours and fault.

Pump system:

- Twin-head pump.
- Two to four single-head pumps connected in parallel. The pumps must be of the same type and size. Each pump requires a non-return valve in series with the pump.

Set the control mode to "Const. pressure" or "Const. curve".

### Control options

Communication with the pumps is possible via a central building management system, Grundfos GO or control panel.

The purpose of controlling TPE2 pumps is to monitor and control the pressure, temperature, flow rate and liquid level of the system.

For further information on control options of TPE2 pumps, see page 71.

## 7. TPE3



Fig. 10 TPE3 and TPE3 D pumps

### Technical data

Flow rate:	Up to 528 GPM (120 m <sup>3</sup> /h)
Head:	Up to 82 ft/25 m
Liquid temperature:	-13 to 248 °F (-25 to +120 °C) (284 °F (140 °C)) for a short period
Maximum operating pressure:	232 psi (16 bar)
Motor sizes, single-phase:	0.33 to 2 hp (0.25 to 1.5 kW)
Motor sizes, three-phase:	0.33 to 3 hp (0.25 to 2.2 kW)

### Construction

The pumps have built-in differential-pressure and temperature sensor.

The permanent-magnet motor has a built-in frequency converter for continuous adjustment of the pressure to the flow rate. All pumps are fitted with Grundfos permanent-magnet MLE motors that have motor efficiency class IE5 according to IEC 60034-30-2.

The range is a preset solution for quick and safe installation.

The pump has a color display for easy and intuitive pump setup and with full access to all functions.

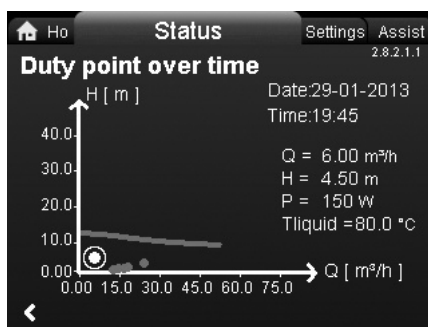


Fig. 11 Example of status display for TPE3 pumps

The pumps are available as single-head, TPE3, and twin-head, TPE3 D, pumps.

The pumps have Class 125 flanges.

The pumps are fitted with an unbalanced mechanical shaft seal.

The power head (motor, pump head and impeller) and pump housing are held together by a specially designed clamp. The clamp allows fast repositioning of the pump housing and fast service of the pump.

The twin-head pumps are designed with two parallel power heads. A flap valve in the common outlet port is opened by the flow of the pumped liquid and prevents backflow of liquid into the idle pump head.

As radial and axial forces are absorbed by the fixed bearing in the motor drive-end, the pump requires no bearing.

Pumps with stainless-steel pump housing, version I, are suitable for circulation of domestic hot water.

### Materials

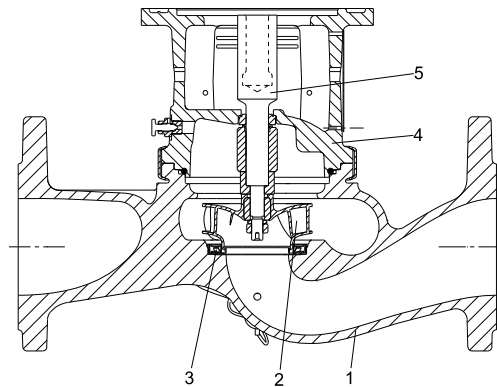


Fig. 12 Sectional drawing of a TPE3 pump

### Material specification

Pos.	Component	Material	EN/DIN (ASTM/AISI)
1	Pump housing	Cast iron EN-GJL-250	EN1561 (ASTM A48 CL 40B)
		Stainless steel	EN 1.4308 (CF8)
2	Impeller	Composite PES-GF30	
3	Neck ring	Stainless steel	EN 1.4404 (316/316L)
4	Pump head/motor stool	Cast iron EN-GJL-250	EN1561 (ASTM A48 CL 40B)
		Stainless steel	EN 1.4308 (CF8)
	Secondary seals	EPDM	
	Rotating seal face	Tungsten carbide	
	Stationary seat	Carbon (resin-impregnated) Tungsten carbide	
5	Stub shaft	Stainless steel	EN 1.4404 (316/316L)

TM07 3079 4518 - TM07 3080 4518

TM05 8200 2113

TM06 0883 1114

### Applications

The pumps have integrated speed control for automatic adaptation of performance to current conditions.


The energy consumption is thus kept at a minimum.

The pumps can operate at any duty point within the range between minimum and maximum speed.

Depending on the application, the pumps offer energy savings, increased comfort or improved processing. The pumps are suitable for applications requiring pressure control.

### AUTO<sub>ADAPT</sub>

TPE3 pumps are factory-set to AUTO<sub>ADAPT</sub> which continuously adapts the pump performance according to the actual system characteristic.

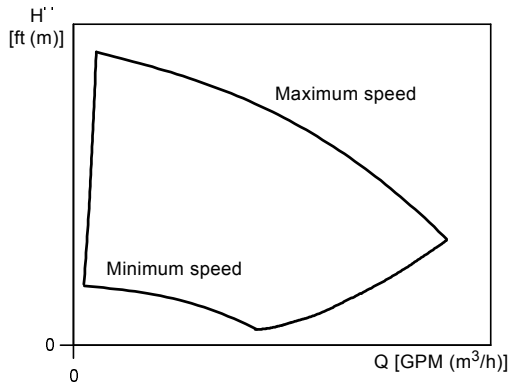

TM01 4916 1099


Fig. 13 Duty range of TPE3

#### System application

Recommended for most heating systems, especially in systems with relatively large pressure losses in the distribution pipes. See description under proportional pressure. In replacement situations where the proportional-pressure duty point is unknown. The duty point has to be within the "AUTO<sub>ADAPT</sub>" operating range. During operation, the pump automatically makes the necessary adjustment to the actual system characteristics. This setting ensures minimum energy consumption and low noise level from the valves, and therefore reduces operating costs and increases comfort.


#### Select this control mode

##### "AUTO<sub>ADAPT</sub>"

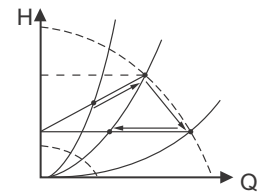

The FLOW<sub>ADAPT</sub> control mode is a combination of AUTO<sub>ADAPT</sub> and FLOW<sub>LIMIT</sub>. This control mode is suitable for systems where a maximum flow rate limit, FLOW<sub>LIMIT</sub>, is desired. The pump continuously monitors and adjusts the flow rate, thus ensuring that the selected FLOW<sub>LIMIT</sub> is not exceeded. Main pumps in boiler applications where a steady flow through the boiler is required. No extra energy is used for pumping too much liquid into the system. In systems with mixing loops, the control mode can control the flow rate in each loop.

##### FLOW<sub>ADAPT</sub>

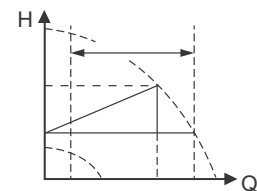


#### Benefits:

- Enough water for all loops at peak load conditions if each loop has been set to the right maximum flow rate.
- The dimensioned flow rate for each zone, required heat energy, is determined by the flow from the pump. This value can be set precisely in the FLOW<sub>ADAPT</sub> control mode without the use of pump throttling valves.
- When the flow rate is set lower than the balancing valve setting, the pump ramps down instead of losing energy by pumping against a balancing valve.
- Cooling surfaces in air-conditioning systems operate at high pressure and low flow rate.

In systems with relatively large pressure losses in the distribution pipes and in air-conditioning and cooling systems.

- Two-pipe heating systems with thermostatic valves and the following:
  - very long distribution pipes
  - strongly throttled pipe balancing valves
  - differential-pressure regulators
  - large pressure losses in those parts of the system through which the total quantity of water flows, for example, boiler, heat exchanger and distribution pipe up to the first branching.
- Primary circuit pumps in systems with large pressure losses in the primary circuit.
- Air-conditioning systems with the following:
  - heat exchangers (fan coils)
  - cooling ceilings
  - cooling surfaces.


#### Proportional pressure

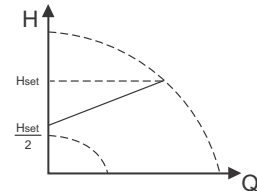

In systems with relatively large pressure losses in the distribution pipes and in air-conditioning and cooling systems.

- Two-pipe heating systems with thermostatic valves and the following:
  - very long distribution pipes
  - strongly throttled pipe balancing valves
  - differential-pressure regulators
  - large pressure losses in those parts of the system through which the total quantity of water flows, for example, boiler, heat exchanger and distribution pipe up to the first branching.
- Primary circuit pumps in systems with large pressure losses in the primary circuit.
- Air-conditioning systems with the following:
  - heat exchangers (fan coils)
  - cooling ceilings
  - cooling surfaces.


#### Constant differential pressure with differential-pressure sensor located in the system

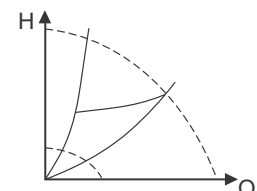


**System application****Select this control mode**

In systems with relatively small pressure losses in the distribution pipes.

- Two-pipe heating systems with thermostatic valves and the following:
  - dimensioned for natural circulation
  - small pressure losses in those parts of the system through which the total quantity of water flows, for example, boiler, heat exchanger and distribution pipe up to the first branching or modified to a high differential temperature between flow pipe and return pipe, for example, district heating.
- Underfloor heating systems with thermostatic valves.
- One-pipe heating systems with thermostatic valves or pipe balancing valves.
- Primary circuit pumps in systems with small pressure losses in the primary circuit.

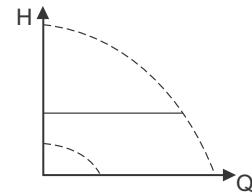**Constant differential pressure**

In pressure boosting systems.

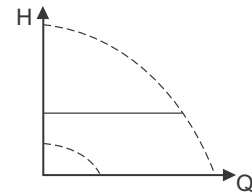
**Constant pressure**

In systems with a fixed system characteristic.

Examples:

- one-pipe heating systems
- boiler shunts
- systems with three-way valves
- domestic hot-water circulation.


You can use  $FLOW_{LIMIT}$  to control the maximum circulation flow rate.

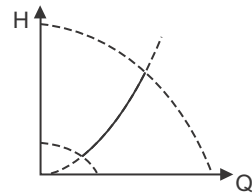**Constant temperature and constant differential temperature**

In systems requiring a constant flow rate, independently of pressure drop.

Examples:


- chillers for air-conditioning
- heating surfaces
- cooling surfaces.

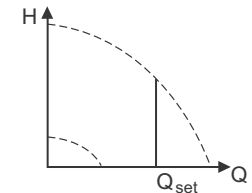**Constant flow rate**

In systems requiring a constant tank level, independently of the flow rate.

Examples:

- process water tanks
- boiler condensate tanks.

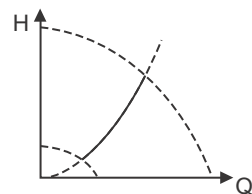**Constant level**

In systems with pumps operating in parallel.

The multipump function enables the control of single-head pumps connected in parallel (two to four pumps) and twin-head pumps without the use of external controllers. The pumps in a multipump system communicate with each other via the wireless GENIair connection or the wired GENI connection.

**"Assist" menu  
"Multipump setup"**



## Multipump system

The multipump function enables the control of two pumps connected in parallel without the use of external controllers. The pumps in a multipump system communicate with each other via the wireless GENIair connection or the wired GENI connection.

A multipump system is set via a selected pump: the master pump, which is the first selected pump. If two pumps in the system are configured with an outlet-pressure sensor, both pumps can function as master pumps and take over the master pump function if the other fails. This provides additional redundancy in the multipump system.

The multipump functions are described in the following sections.

### Alternating operation

Alternating operation functions as a duty-standby operating mode and is possible with two pumps of same size and type connected in parallel. The main purpose of the function is to ensure an even amount of running hours and to ensure that the standby pump takes over if the running pump stops due to an alarm. Each pump requires a non-return valve in series with the pump.

You can choose between two alternating operation modes:

- Alternating operation, time.  
Pump changeover to the other is based on time.
- Alternating operation, energy.  
Pump changeover to the other is based on energy consumption.  
If the duty pump fails, the other pump takes over automatically.  
Only one pump is operating at a time. The change from one pump to the other depends on time or energy. If a pump fails, the other pump takes over automatically.

Pump system:

- Twin-head pump.
- Two single-head pumps connected in parallel.  
The pumps must be of the same type and size.  
Each pump requires a non-return valve in series with the pump.

### Backup operation

Backup operation is possible with two same size and type pumps connected in parallel. Each pump requires a non-return valve in series with the pump.

One pump is operating continuously. The backup pump is operated for a short time each day to prevent seizing up. If the duty pump stops due to a fault, the backup pump starts automatically.

Pump system:

- Twin-head pump.
- Two single-head pumps connected in parallel.  
The pumps must be of the same type and size.  
Each pump requires a non-return valve in series with the pump.

### Cascade operation

Cascade operation ensures that the pump performance is automatically adapted to the consumption by switching pumps on or off. As a result, the system runs as energy-efficiently as possible with a constant pressure and a limited number of pumps. When a twin-head pump is running in constant-pressure control mode, the second pump head starts at 90 % and stops at 50 % performance. All pumps in operation run at equal speed. Pump changeover is automatic and depends on energy, operating hours and fault.

Pump system:

- Twin-head pump.
- Two to four single-head pumps connected in parallel.  
The pumps must be of the same type and size.  
Each pump requires a non-return valve in series with the pump.  
Set the control mode to "Const. pressure" or "Const. curve".

### Control options

Communication with the pumps is possible via the control panel, Grundfos GO or a central building management system.

The purpose of controlling the pumps is to monitor and control the pressure, temperature, flow rate of the system.

For further information on control options of the pumps, see page [71](#).

## 8. User interfaces for TPE pumps

### Advanced control panel for TPE pumps

Pump variant	Fitted as standard	Option
TPE3, TPE3 D	•	-
TPE2, TPE2 D	•	-


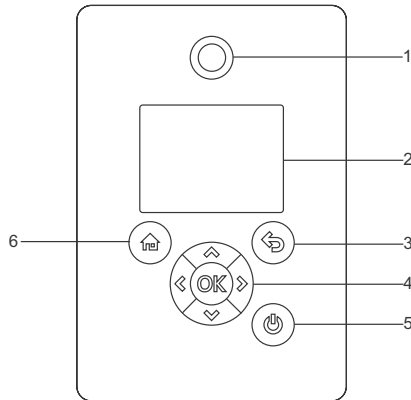


Fig. 14 Advanced control panel

TM05 4849 1013

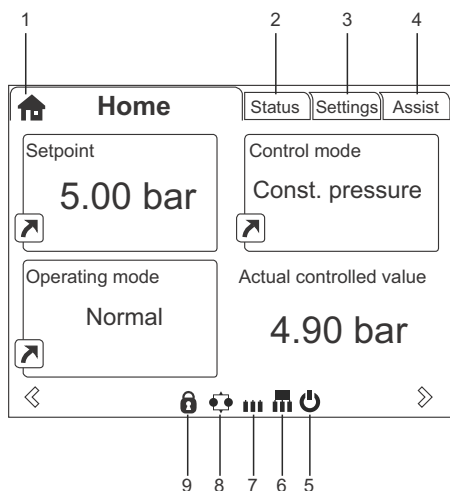


Pos.	Symbol	Description
1		Grundfos Eye The indicator light shows the operating status of the pump. See <a href="#">Priority of settings</a> on page 66 for further information.
2	-	Graphical color display.
3		Press the button to go one step back.  Press the button to navigate between main menus, displays and digits. When you change the menu, the display always shows the top display of the new menu.
		Press the buttons to navigate between submenus or change value settings. <b>Note:</b> If you have disabled the possibility to make settings with the "Enable/disable settings" function, then you can enable it again temporarily by pressing these buttons simultaneously for at least 5 seconds. See <a href="#">Buttons on product</a> ("Enable/disable settings") on page 59.
4		Press the button to save changed values, reset alarms and expand the value field. The button enables radio communication with Grundfos GO and other products of the same type. When you try to establish radio communication between the pump and Grundfos GO or another pump, the green indicator light in Grundfos Eye flashes. A note also appears in the pump display stating that a wireless device wants to connect to the pump. Press <b>OK</b> on the pump control panel to allow radio communication with Grundfos GO and other products of the same type.
5		Press the button to make the pump ready for operation and pump start and stop. <b>Start:</b> If you press the button when the pump is stopped, the pump will only start if no other functions with higher priority have been enabled. <b>Stop:</b> If you press the button when the pump is running, the pump is always stopped. When you stop the pump via this button, the  icon appears in the bottom of the display.
6		Press the button to go to the "Home" menu.

## "Home" display



TM06 4516 2415

Fig. 15 Example of "Home" display

Pos.	Symbol	Description
1		"Home" This menu shows up to four user-defined parameters. You can select parameters shown as shortcut icon  , and when pressing  you go directly to the "Settings" display for the selected parameter.
2	-	"Status" This menu shows the status of the pump and system as well as warnings and alarms.
3	-	"Settings" This menu gives access to all setting parameters. You can make detailed settings of the pump in this menu. See <a href="#">Description of selected functions</a> on page 35.
4	-	"Assist" This menu enables "Assisted Pump Setup", provides a short description of the control modes and offers fault advice. See <a href="#">"Assist"</a> on page 61.
5		This symbol indicates that the pump has been stopped via the  button.
6		This symbol indicates that the pump is functioning as master pump in a multipump system.
7		This symbol indicates that the pump is functioning as a slave pump in a multipump system.
8		This symbol indicates that the pump is operating in a multipump system. See <a href="#">"Multipump setup" ("Setup of multi-pump system")</a> on page 62.
9		This symbol indicates that the possibility to make settings has been disabled for protective reasons. See <a href="#">"Buttons on product" ("Enable/disable settings")</a> on page 59.

## Startup guide

The pump incorporates a startup guide which is started at the first startup. See ["Run startup guide"](#) on page 60. After the startup guide, the main menus appear in the display.

## Menu overview for advanced control panel

### Main menus

	TPE3, TPE3 D	TPE2, TPE2 D	Multipump system		
Home	•	•	•		
Status	TPE3, TPE3 D	TPE2, TPE2 D	Multipump system	Section	Page
"Operating status"	•	•	•		
"Operating mode, from"	•	•	•		
"Control mode"	•	•	•		
"Pump performance"	•	•	•		
"Actual controlled value"	•	•	•		
"Max. curve and duty point"	•	•	•		
"Resulting setpoint"	•	•	•		
"Liquid temperature"	•	•	•		
"Speed"	•	•	•		
"Acc. flow, specific energy"	•	•	•		
"Power and energy consumption"	•	•	•		
"Measured values"	•	•	•		
"Analog input 1"	•	•	•		
"Analog input 2"	•	•	•		
"Analog input 3"	•	•	•		
"Pt100/1000 input 1"	•	•	•		
"Pt100/1000 input 2"	•	•	•		
"Analog output"	•	•	•		
"Warning and alarm"	•	•	•		
"Actual warning and alarm"	•	•	•		
"Warning log"	•	•	•		
"Alarm log"	•	•	•		
"Heat energy monitor"	•	•	•	<a href="#">"Heat energy monitor"</a>	35
"Heat power"	•	•	•		
"Heat energy"	•	•	•		
"Flow rate"	•	•	•		
"Volume"	•	•	•		
"Hour counter"	•	•	•		
"Temperature 1"	•	•	•		
"Temperature 2"	•	•	•		
"Differential temp."	•	•	•		
"Operating log"	•	•	•		
"Operating hours"	•	•	•		
"Trend data"	•	•	•		
"Fitted modules"	•	•	•		
"Date and time"	•	•	•		
"Product identification"	•	•	•		
"Motor bearing monitoring"	•	•	•		
"Multipump system"			•		
"System operating status"			•		
"System performance"			•		
"System input power and energy"			•		
"Pump 1, multipump sys."			•		
"Pump 2, multipump sys."			•		
"Pump 3, multipump sys."			•		

• Available.

Settings	TPE3, TPE3 D	TPE2, TPE2 D	Multipump system	Section	Page
"Setpoint"	•	•	•	"Setpoint"	35
"Operating mode"	•	•	•	"Operating mode"	36
"Set manual speed"	•	•	•	"Set manual speed"	36
"Set user-defined speed"	•	•	•	"Set user-defined speed"	36
"Control mode"	•	•	•	"Control mode"	36
"Flow limit"	•	•	•	"FLOW <sub>LIMIT</sub> "	43
"Automatic night setback"	•	•	•	"Automatic night setback"	44
"Analog inputs"	•	•	•		
"Analog input 1, setup"	•	•	•	"Analog inputs"	44
"Analog input 2, setup"	•	•	•		
"Analog input 3, setup"	•	•	•		
"Built-in Grundfos sensor"	•	•	•	"Built-in Grundfos sensor"	45
"Pt100/1000 inputs"	•	•	•		
"Pt100/1000 input 1, setup"	•	•	•	"Pt100/1000 inputs"	46
"Pt100/1000 input 2, setup"	•	•	•		
"Digital inputs"	•	•	•		
"Digital input 1, setup"	•	•	•	"Digital inputs"	46
"Digital input 2, setup"	•	•	•		
"Digital inputs/outputs"	•	•	•		
"Digital input/output 3, setup"	•	•	•	"Digital inputs/outputs"	47
"Digital input/output 4, setup"	•	•	•		
"Relay outputs"	•	•	•		
"Relay output 1"	•	•	•	"Signal relays 1 and 2" ("Relay outputs")	48
"Relay output 2"	•	•	•		
"Analog output"	•	•	•		
"Output signal"	•	•	•	"Analog output"	49
"Function of analog output"	•	•	•		
"Controller settings"	•	•	•	"Controller" ("Controller settings")	50
"Operating range"	•	•	•	"Operating range"	51
"Setpoint influence"	•	•	•	"Setpoint influence"	52
"External setpoint function"	•	•	•	"External setpoint influence"	52
"Predefined setpoints"	•	•	•	"Predefined setpoints"	54
"Temperature influence"	•	•	•	"Temperature influence"	54
"Monitoring functions"	•	•	•		
"Motor bearing monitoring"	•	•	•	"Motor bearing monitoring"	57
"Motor bearing maintenance"	•	•	•	"Bearings replaced" ("Motor bearing maintenance")	57
"Limit-exceeded function"	•	•	•	"Limit-exceeded function"	55
"Special functions"	•	•	•	Special functions	56
"Pulse flowmeter setup"	•	•	•	"Pulse flowmeter setup"	56
"Ramps"	•	•	•	"Ramps"	56
"Standstill heating"	•	•	•	"Standstill heating"	57
"Communication"	•	•	•	Communication	58
"Pump number"	•	•	•	"Number" ("Pump number")	58
"Enable/disable radio communication"	•	•	•	"Radio communication" ("Enable/disable radio comm.")	58

Settings				Section	Page
	TPE3, TPE3 D	TPE2, TPE2 D	Multipump system		
"General settings"	•	•	•	<a href="#">General settings</a>	58
"Language"	•	•	•	<a href="#">"Language"</a>	58
"Set date and time"	•	•	•	<a href="#">"Date and time"</a>	58
"Units"	•	•	•	<a href="#">"Unit configuration" ("Units")</a>	58
"Enable/disable settings"	•	•	•	<a href="#">"Buttons on product" ("Enable/disable settings")</a>	59
"Delete history"	•	•	•	<a href="#">"Delete history"</a>	59
"Define Home display"	•	•	•	<a href="#">"Define Home display"</a>	59
"Display settings"	•	•	•	<a href="#">"Display settings"</a>	59
"Store actual settings"	•	•	•	<a href="#">"Store settings" ("Store actual settings")</a>	59
"Recall stored settings"	•	•	•	<a href="#">"Recall settings" ("Recall stored settings")</a>	59
"Run startup guide"	•	•	•	<a href="#">"Run startup guide"</a>	60


Assist				Section	Page
	TPE3, TPE3 D	TPE2, TPE2 D	Multipump system		
"Assisted pump setup"	•	•	•	<a href="#">"Assisted pump setup"</a>	61
"Setup, analog input"	•	•	•	<a href="#">"Setup, analog input"</a>	62
"Setting of date and time"	•	•	•	<a href="#">"Date and time"</a>	58
"Multipump setup"	•	•	•	<a href="#">"Multipump setup" ("Setup of multi-pump system")</a>	62
"Description of control mode"	•	•	•	<a href="#">"Description of control mode"</a>	65
"Assisted fault advice"	•	•	•	<a href="#">"Assisted fault advice"</a>	65

## Grundfos GO

The pump is designed for wireless radio or infrared communication with Grundfos GO.

Grundfos GO enables setting of functions and gives access to status overviews, technical product information and actual operating parameters.

Grundfos GO offers the following mobile interfaces, MI.

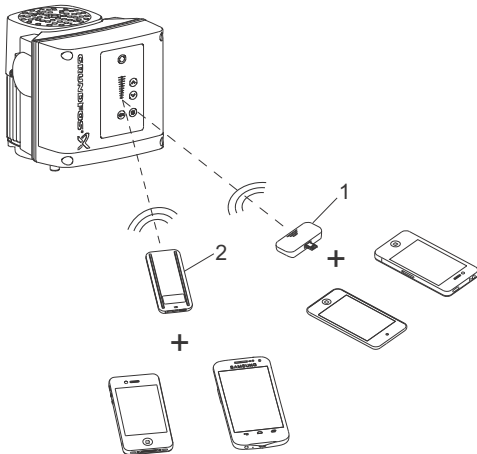

TM06 62366 0916

**Fig. 16** Grundfos GO communicating with the pump via radio or infrared connection, IR

Pos.	Description
1	Grundfos MI 204: Add-on module enabling radio or infrared communication. You can use MI 204 in conjunction with an Apple iPhone or iPod with Lightning connector, for example, fifth generation or later iPhone or iPod. MI 204 is also available together with an Apple iPod touch and a cover.
2	Grundfos MI 301: Separate module enabling radio or infrared communication. You can use the module in conjunction with an Android or iOS-based smart device with Bluetooth connection.

## Communication

When Grundfos GO initiates communication with the pump, the indicator light in the middle of Grundfos Eye flashes green. See [Grundfos Eye](#) on page 67.

Furthermore, on pumps fitted with an advanced control panel a text appears in the display saying that a wireless device is trying to establish connection. Press **OK** on the pump in order to establish connection with Grundfos GO or press **⏠** to reject connection.

Establish communication using one of these communication types:

- radio communication
- infrared communication.

### Radio communication

Radio communication can take place at distances up to 30 metres. The first time Grundfos GO communicates with the pump, you must enable communication by pressing **📶** or **OK** on the pump control panel. Later when communication takes place, the pump is recognized by Grundfos GO, and you can select the pump from the "List" menu.

### Infrared communication

When communicating via infrared light, Grundfos GO must be pointed at the pump control panel.

## Menu overview for Grundfos GO

### Main menus

	TPE3, TPE3 D	TPE2, TPE2 D	Multipump system		
Dashboard	•	•	•		
Status	TPE3, TPE3 D	TPE2, TPE2 D	Multipump system	Section	Page
"System mode"			•		
"Resulting setpoint"	•	•			
"Resulting system setpoint"			•		
"Actual controlled value"	•	•	•		
"Sensor value"					
"Motor speed (rpm. %)"	•	•			
"Power consumption"	•	•			
"Power consumption, system"			•		
"Energy consumption"	•	•			
"Energy consumption, system"			•		
"Acc. flow, specific energy"	•	•	•		
"Operating hours, system"			•		
"Operating hours"	•	•			
"Motor current"	•	•	•		
"Number of starts"	•	•	•		
"Liquid temperature"	•				
"Analog input 1"	•	•			
"Analog input 2"	•	•			
"Analog input 3"	•	•			
"Pt100/1000 input 1"	•	•			
"Pt100/1000 input 2"	•	•			
"Analog output"	•	•			
"Digital input 1"	•	•			
"Digital input 2"	•	•			
"Digital in/output 3"	•	•			
"Digital in/output 4"	•	•			
"Motor bearing service"	•	•	•		
"Fitted modules"	•	•			
"Trend data"	•				
"Heat energy monitor"	•			"Heat energy monitor"	35
"Pump1"			•		
"Pump2"			•		
"Pump3"			•		
"Pump4"			•		



Settings	TPE3, TPE3 D	TPE2, TPE2 D	Multipump system	Section	Page
"Setpoint"	•	•	•	"Setpoint"	35
"Operating mode"	•	•	•	"Operating mode"	36
"Set user-defined speed"	•	•	•	"Set user-defined speed"	36
"Control mode"	•	•	•	"Control mode"	36
"Proportional-pressure setup"	•			"Proportional-pressure setup"	43
"Flow limit"	•			"FLOW <sub>LIMIT</sub> "	43
"Automatic night setback"	•			"Automatic night setback"	44
"Temperature influence"	•			"Temperature influence"	54
"Buttons on product"	•	•	•	"Buttons on product" ("Enable/disable settings")	59
"Controller"	•	•	•	"Controller" ("Controller settings")	50
"Operating range"	•	•	•	"Operating range"	51
"Ramps"	•	•		"Ramps"	56
"Number"	•	•		"Number" ("Pump number")	58
"Radio communication"	•	•		"Radio communication" ("Enable/disable radio comm.")	58
"Analog input 1"	•	•			
"Analog input 2"	•	•		"Analog inputs"	44
"Analog input 3"	•	•			
"Built-in Grundfos sensor"	•			"Built-in Grundfos sensor"	45
"Pt100/1000 input 1"	•	•			
"Pt100/1000 input 2"	•	•		"Pt100/1000 inputs"	46
"Digital input 1"	•	•			
"Digital input 2"	•	•		"Digital inputs"	46
"Digital in/output 3"	•	•			
"Digital in/output 4"	•	•		"Digital inputs/outputs"	47
"Pulse flowmeter"	•	•		"Pulse flowmeter setup"	56
"Predefined setpoint"	•	•	•	"Predefined setpoints"	54
"Analog output"	•	•		"Analog output"	49
"External setpoint funct."	•	•		"External setpoint influence"	52
"Signal relay 1"	•	•			
"Signal relay 2"	•	•		"Signal relays 1 and 2" ("Relay outputs")	48
"Limit 1 exceeded"	•	•	•		
"Limit 2 exceeded"	•	•	•	"Limit-exceeded function"	55
"Alternating operation, time"			•		
"Time for pump change over"			•		
"Standstill heating"	•	•		"Standstill heating"	57
"Motor bearing monitoring"	•	•		"Motor bearing monitoring"	57
"Service"	•	•		"Service"	57
"Date and time"	•	•	•	"Date and time"	58
"Store settings"	•	•		"Store settings" ("Store actual settings")	59
"Recall settings"	•	•		"Recall settings" ("Recall stored settings")	59
"Undo"	•	•	•	"Undo"	59
"Pump name"	•	•	•	"Pump name"	60
"Connection code"	•	•	•	"Connection code"	60
"Unit configuration"	•	•	•	"Unit configuration" ("Units")	58

Alarms and warnings	TPE3, TPE3 D	TPE2, TPE2 D	Multipump system	Section	Page
"Alarm log"	•	•	•	<a href="#">"Alarm log"</a>	61
"Warning log"	•	•	•	<a href="#">"Warning log"</a>	61
"Reset alarm" button	•	•	•		

Assist	TPE3, TPE3 D	TPE2, TPE2 D	Multipump system	Section	Page
"Assisted pump setup"	•	•		<a href="#">"Assisted pump setup"</a>	61
"Assisted fault advice"	•	•	•	<a href="#">"Setup, analog input"</a>	62
"Multipump setup"	•	•	•	<a href="#">"Multipump setup" ("Setup of multi-pump system")</a>	62

## Description of selected functions

### "Heat energy monitor"


Pump variant	"Heat energy monitor"
TPE3, TPE3 D	•
TPE2, TPE2 D	-

The heat energy monitor is a monitoring function that calculates the heat energy consumption within a system. The built-in flow estimation needed for the calculation has an inaccuracy of  $\pm 10\%$  of the maximum flow rate in the area down to 10 % flow and down to 12.5 % of the maximum head. The calculations are based on water at a temperature of 68 °F (20 °C). Also, the temperature measurements needed for the calculation have some inaccuracy depending on the sensor type. Therefore, you cannot use the heat energy value for billing purposes. However, the value is perfect for optimization purposes in order to prevent excessive energy costs caused by system imbalances.

The heat energy monitor requires an additional temperature sensor installed in the flow pipe or return pipe depending on where the pump is installed.

Use the analog inputs and/or Pt100/1000 inputs for measuring the temperatures used for calculation by the heat energy monitor.

The used inputs must not be set to "Not active" and one of the measuring parameters must be set to "Temperature 2".

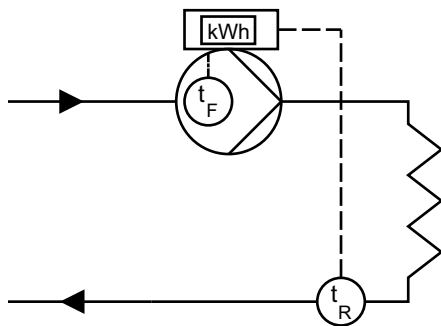

$t_F$ : Flow-pipe temperature

$t_R$ : Return-pipe temperature

TM06 1182 1814

**Fig. 17 Example:** Pump installed in the flow pipe, and additional temperature sensor installed in the return pipe

### "Setpoint"

Pump variant	"Setpoint"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

You can set the setpoint for all control modes, except  $AUTO_{ADAPT}$  and  $FLOW_{ADAPT}$ , in this submenu when you have selected the desired control mode. See "[Control mode](#)" on page 36.

#### Factory setting

See [9. Factory settings of E-pumps](#) on page 70.

## "Operating mode"

Pump variant	"Operating mode"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

Possible operating modes:

- "Normal"  
The pump runs according to the selected control mode.
- "Stop"  
The pump stops.
- "Min."  
Use the minimum-curve mode in periods where a minimum flow is required.  
This operating mode is, for instance, suitable for manual night setback if you do not want to use automatic night setback.
- "Max."  
Use the maximum-curve mode in periods where a maximum flow is required.  
This operating mode is, for instance, suitable for hot-water priority.
- "Manual"  
The pump is operating at a manually set speed. In "Manual" the setpoint via bus is overruled. See ["Set manual speed"](#) on page 36.
- "User-defined speed"  
The motor is operating at a speed set by the user. See ["Set user-defined speed"](#) on page 36.

All operating modes are illustrated in the fig. 18.

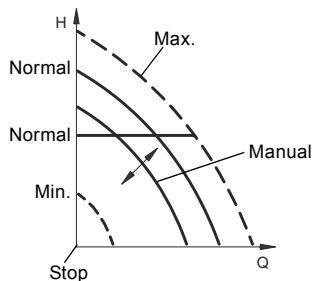


Fig. 18 Operating modes

### Factory setting

See [9. Factory settings of E-pumps](#) on page 70.

## "Set manual speed"

Pump variant	"Set manual speed"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu is only available in the advanced control panel. With Grundfos GO, you set the speed via the "Setpoint" menu.

You can set the pump speed in % of the maximum speed. When you have set the operating mode to "Manual", the pump starts running at the set speed. The speed can then be changed manually via Grundfos GO or via the advanced control panel.

## "Set user-defined speed"

You can set the motor speed in % of the maximum speed. When you have set the operating mode to "User-defined speed", the motor runs at the set speed.

## "Control mode"

Pump variant	"Control mode"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

**Note:** Not all control modes are available for all pump variants.

Possible control modes:

- "AUTO<sub>ADAPT</sub>"
- "FLOW<sub>ADAPT</sub>"
- "Prop. press." (proportional pressure)
- "Const. pressure" (constant pressure)
- "Const. temp." (constant temperature)
- "Con. diff. press." (constant differential pressure)
- "Con. diff. temp." (constant differential temperature)
- "Const. flow rate" (constant flow rate)
- "Const. level" (constant level)
- "Const. other val." (constant other value)
- "Const. curve" (constant curve).

You can change the setpoint for all control modes, except AUTO<sub>ADAPT</sub> and FLOW<sub>ADAPT</sub>, in the "Setpoint" submenu under "Settings" when you have selected the desired control mode.

### Factory setting

See [9. Factory settings of E-pumps](#) on page 70.

TM06 4024 1515

"AUTO<sub>ADAPT</sub>"

Pump variant	"AUTO <sub>ADAPT</sub> "
TPE3, TPE3 D	•
TPE2, TPE2 D	-

The AUTO<sub>ADAPT</sub> control mode continuously adapts the pump performance according to the actual system characteristic.

Manual setting of the setpoint is not possible.

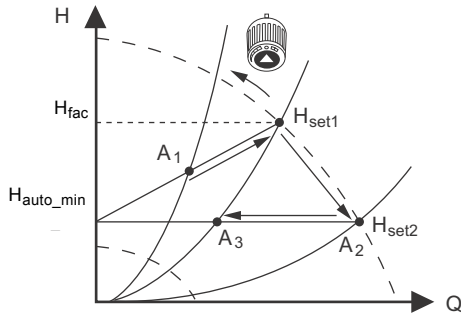


Fig. 19 AUTO<sub>ADAPT</sub>

When the AUTO<sub>ADAPT</sub> control mode has been enabled, the pump will start with the factory setting, H<sub>fac</sub> is equal to H<sub>set1</sub>, and then adjust its performance to A<sub>1</sub>. See fig. 19.

When the pump registers a lower head on the maximum curve, A<sub>2</sub>, the AUTO<sub>ADAPT</sub> function automatically selects a correspondingly lower control curve, H<sub>set2</sub>. If the valves in the system close, the pump adjusts its performance to A<sub>3</sub>.

- A<sub>1</sub>: Original duty point.
- A<sub>2</sub>: Lower registered head on the maximum curve.
- A<sub>3</sub>: New duty point after AUTO<sub>ADAPT</sub> control.
- H<sub>set1</sub>: Original setpoint setting.
- H<sub>set2</sub>: New setpoint after AUTO<sub>ADAPT</sub> control.
- H<sub>fac</sub>: Factory setting.
- H<sub>auto\_min</sub>: A fixed value of 1.5 m.

The AUTO<sub>ADAPT</sub> control mode is a form of proportional-pressure control where the control curves have a fixed origin, H<sub>auto\_min</sub>.

The AUTO<sub>ADAPT</sub> control mode has been developed specifically for heating systems, and we do not recommend that you use it for air-conditioning and cooling systems.

"FLOW<sub>ADAPT</sub>"

Pump variant	"FLOW <sub>ADAPT</sub> "
TPE3, TPE3 D	•
TPE2, TPE2 D	-

When you select FLOW<sub>ADAPT</sub>, the pump runs AUTO<sub>ADAPT</sub> and ensures that the flow rate never exceeds the entered FLOW<sub>LIMIT</sub> value.

The setting range for FLOW<sub>LIMIT</sub> is 25 to 90 % of the maximum flow rate of the pump.

The factory setting of the FLOW<sub>LIMIT</sub> is the flow rate where the AUTO<sub>ADAPT</sub> factory setting meets the maximum curve. See fig. 20.

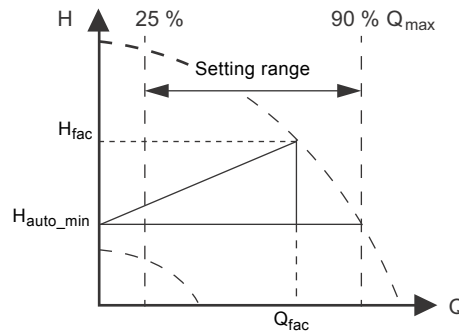


Fig. 20 FLOW<sub>ADAPT</sub>

TM05 7910 1613

TM05 7912 1613

## "Proportional pressure"

Pump variant	"Proportional pressure"
TPE3, TPE3 D	•
TPE2, TPE2 D	-

The head of the pump is reduced at decreasing water demand and increased at rising water demand. See fig. 21.

This control mode is especially suitable in systems with relatively large pressure losses in the distribution pipes. The head of the pump increases proportionally to the flow in the system to compensate for the large pressure losses in the distribution pipes.

You can set the setpoint with an accuracy of 0.1 m. The head against a closed valve is half the setpoint.

For more information about settings, see ["Proportional-pressure setup"](#) on page 43.

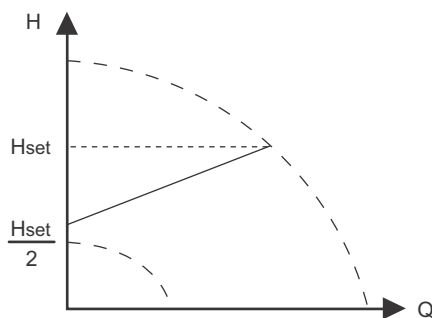


Fig. 21 "Proportional pressure"

### Example

- Factory-fitted differential-pressure sensor.

 


Fig. 22 "Proportional pressure"

### Controller settings

For recommended controller settings, see ["Controller"](#) (["Controller settings"](#)) on page 50.

## "Constant pressure"

Pump variant	"Constant pressure"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

We recommend this control mode if the pump is to deliver a constant pressure, independently of the flow in the system. The pump maintains a constant pressure independently of the flow rate. See fig. 23.

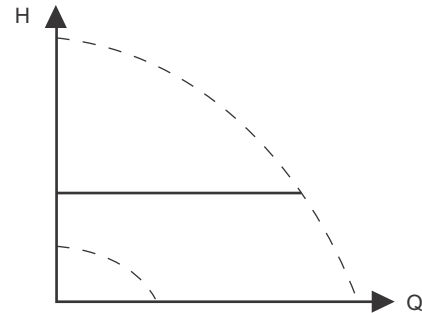


Fig. 23 "Constant pressure"

This control mode requires an external pressure sensor as shown in the examples below. You can set the pressure sensor in the "Assist" menu. See ["Assisted pump setup"](#) on page 61.

### Examples

- One external pressure sensor.

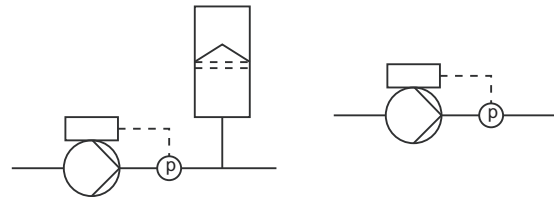


Fig. 24 "Constant pressure"

### Controller settings

For recommended controller settings, see ["Controller"](#) (["Controller settings"](#)) on page 50.


TM05 7909 1613

TM05 7901 1613

**"Constant temperature"**

Pump variant	"Constant temperature"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This control mode ensures a constant temperature. Constant temperature is a comfort control mode that you can use in domestic hot-water systems to control the flow rate to maintain a fixed temperature in the system. See fig. 25.

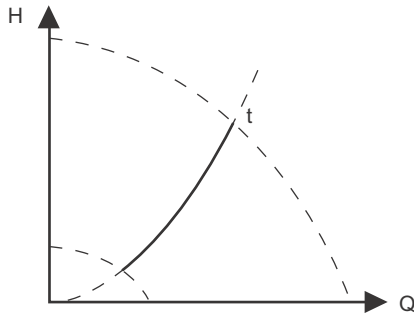


TM05 7900 1613

**Fig. 25** "Constant temperature"


This control mode requires either an internal or external temperature sensor as shown in the examples below.

**Examples**

 - Factory-fitted temperature sensor. Only TPE3, TPE3 D.



- One external temperature sensor.

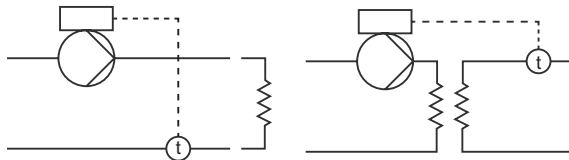

**Fig. 26** "Constant temperature"


**Controller settings**

For recommended controller settings, see *"Controller"* (*"Controller settings"*) on page 50.

**"Constant differential pressure"**

Pump variant	"Constant differential pressure"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

The pump maintains a constant differential pressure, independently of the flow rate in the system. See fig. 27. This control mode is primarily suitable for systems with relatively small pressure losses.

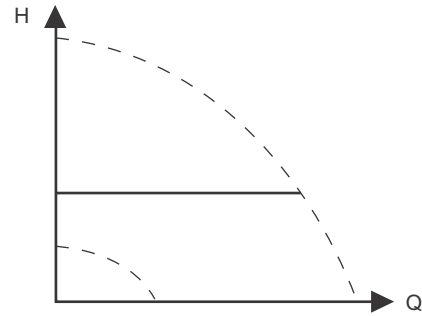


TM05 7901 1613

**Fig. 27** "Constant differential pressure"


This control mode requires either an internal or external differential-pressure sensor or two external pressure sensors. See the examples below.

### Examples

 - Factory-fitted differential-pressure sensor, only TPE3, TPE3 D and TPE, TPE D Series 2000.



- One external differential-pressure sensor. The pump uses the input from the sensor to control the differential pressure. You can set the sensor manually or by using the "Assist" menu. See "[Assisted pump setup](#)" on page 61.

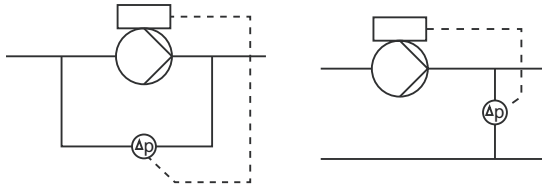

- Two external pressure sensors. Constant differential-pressure control is achievable with two pressure sensors. The pump uses the inputs from the two sensors and calculates the differential pressure. The sensors must have the same unit and must be set as feedback sensors. You can set the sensors manually, sensor by sensor, or by using the "Assist" menu. See "[Assisted pump setup](#)" on page 61.

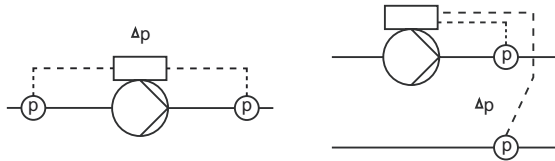


Fig. 28 "Constant differential pressure"


### Controller settings

For recommended controller settings, see "[Controller](#)" ("[Controller settings](#)") on page 50.

### "Constant differential temperature"

Pump variant	"Constant differential temperature"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

The pump maintains a constant differential temperature in the system, and the pump performance is controlled according to this. See fig. 29.

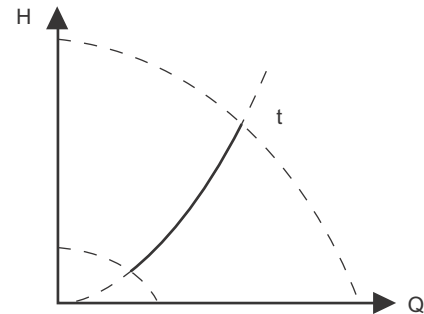

TM05 7954 1713

Fig. 29 "Constant differential temperature"

This control mode requires either two temperature sensors or one external differential-temperature sensor. See the examples below.


The temperature sensors can either be analog sensors connected to two of the analog inputs or two Pt100/Pt1000 sensors connected to the Pt100/1000 inputs, if these are available on the specific pump.

Set the sensor in the "Assist" menu under "Assisted pump setup". See "[Assisted pump setup](#)" on page 61.




**Examples**


- Factory-fitted temperature sensor and an external temperature sensor. Only TPE3, TPE3 D.

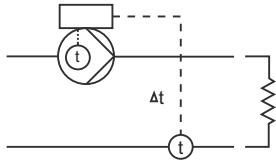

- Two external temperature sensors. Not available for TPE 15-22 kW 2-pole and 11 - 18.5 kW 4-pole. Constant differential-temperature control is achievable with two temperature sensors. The pump uses the inputs from the two sensors and calculates the differential temperature. The sensors must have the same unit and must be set as feedback sensors. You can set the sensors manually, sensor by sensor, or by using the "Assist" menu. See *"Assisted pump setup"* on page 61.

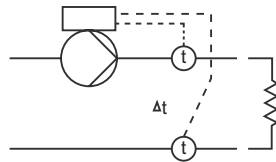

- One external differential-temperature sensor. The pump uses the input from the sensor to control the differential temperature. You can set the sensor manually or by using the "Assist" menu. See *"Assisted pump setup"* on page 61.

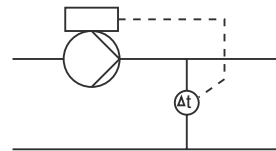

**Fig. 30** Constant differential temperature


**Controller settings**

For recommended controller settings, see *"Controller"* (*"Controller settings"*) on page 50.

**"Constant flow rate"**

Pump variant	"Constant flow rate"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

The pump maintains a constant flow rate in the system, independently of the head. See fig. 31.

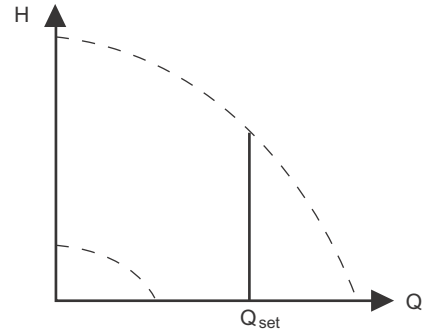


TM05 7955 1713

**Fig. 31** Constant flow rate

This control mode requires an external flow sensor. See the example below.

**Example**

- One external flow sensor.

 

**Fig. 32** Constant flow rate

**Controller settings**

For recommended controller settings, see *"Controller"* (*"Controller settings"*) on page 50.

**"Constant level"**

Pump variant	"Constant level"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

The pump maintains a constant level, independently of the flow rate. See fig. 33.

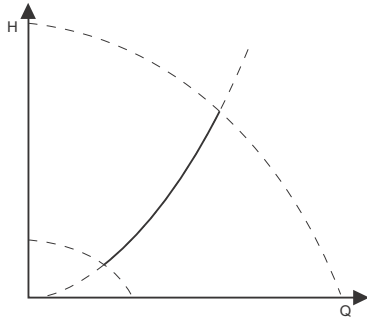


Fig. 33 "Constant level"

This control mode requires an external level sensor.

The pump can control the level in a tank in two ways:


- As an emptying function where the pump draws the liquid from the tank.
- As a filling function where the pump pumps the liquid into the tank.

See fig. 34.

The type of level control function depends on the setting of the built-in controller. See *"Controller"* (*"Controller settings"*) on page 50.

**Examples**

- One external level sensor.  
– emptying function.

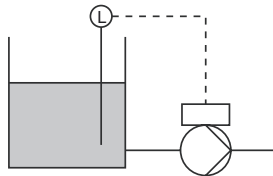

- One external level sensor.  
– filling function.

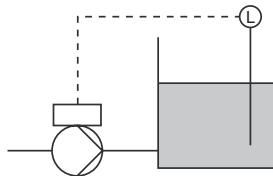


Fig. 34 Constant level

**Controller settings**

For recommended controller settings, see *"Controller"* (*"Controller settings"*) on page 50.

**"Constant other value"**

Pump variant	"Constant other value"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

Any other value is kept constant.

Use this control mode if you want to control a value which is not available in the "Control mode" menu. Connect a sensor measuring the controlled value to one of the analog inputs of the pump. The controlled value will be shown in percentage of sensor range.

**Constant curve**

Pump variant	"Constant curve"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

You can set the pump to operate according to a constant curve, like an uncontrolled pump. See fig. 35.

You can set the desired speed in % of maximum speed in the range from 13 to 100 %.


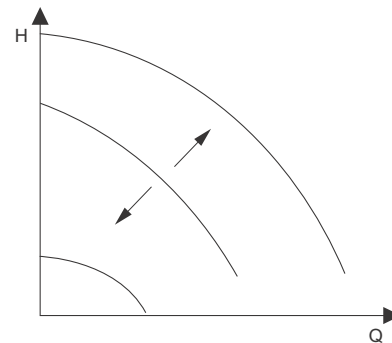


Fig. 35 Constant curve

Depending on the system characteristic and the duty point, the 100 % setting may be slightly smaller than the actual maximum curve of the pump even though the display shows 100 %. This is due to the power and pressure limitations built into the pump. The deviation varies according to pump type and pressure loss in the pipes.

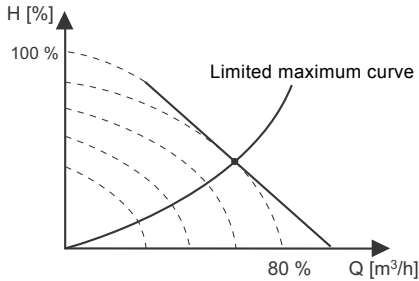

TM05 7913 1613

Fig. 36 Power and pressure limitations influencing the maximum curve

**Controller settings**

For recommended controller settings, see "Controller" ("Controller settings") on page 50.

**"Proportional-pressure setup"**

Pump variant	"Proportional-pressure setup"
TPE3, TPE3 D	•
TPE2, TPE2 D	-

**"Control-curve function"**

You can set the curve either to quadratic or linear.

**"Zero-flow head"**


You can set this value in % of the setpoint. With a setting of 100 %, the control mode is equal to constant differential pressure.

**"FLOW<sub>LIMIT</sub>"**

Pump variant	"FLOW <sub>LIMIT</sub> "
TPE3, TPE3 D	•
TPE2, TPE2 D	-

**FLOW<sub>LIMIT</sub>**

- Enable the FLOW<sub>LIMIT</sub> function.
- Set the FLOW<sub>LIMIT</sub>.

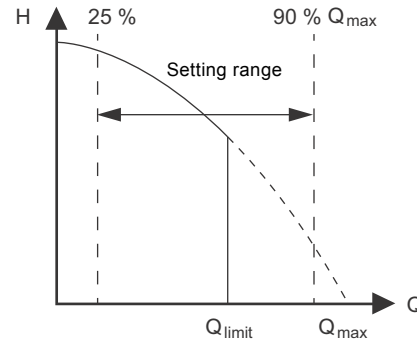

TM05 7908 1613

Fig. 37 "FLOW<sub>LIMIT</sub>"

You can combine the FLOW<sub>LIMIT</sub> function with the following control modes:

- Proportional pressure
- Constant differential pressure
- Constant differential temperature
- Constant temperature
- Constant curve.

A flow-limiting function ensures that the flow rate never exceeds the entered FLOW<sub>LIMIT</sub> value.

The setting range for FLOW<sub>LIMIT</sub> is 25 % to 90 % of the Q<sub>max</sub> of the pump.

The factory setting of the FLOW<sub>LIMIT</sub> is the flow rate where the AUTO<sub>ADAPT</sub> factory setting meets the maximum curve. See fig. 20.

## "Automatic night setback"

Pump variant	"Automatic night setback"
TPE3, TPE3 D	•
TPE2, TPE2 D	-

Once you have enabled automatic night setback, the pump automatically changes between normal duty and night setback, duty at low performance.

Changeover between normal duty and night setback depends on the flow-pipe temperature.

The pump automatically changes over to night setback when the built-in sensor registers a flow-pipe temperature drop of more than 10 to 15 °C within approximately two hours. The temperature drop must be at least 0.1 °C/min.

Changeover to normal duty takes place without a time lag when the temperature has increased by approximately 10 °C.

**Note:** You cannot enable automatic night setback when the pump is in constant-curve mode.

## "Analog inputs"

Pump variant	"Analog inputs"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

Function	Terminals*
"Analog input 1, setup"	4
"Analog input 2, setup"	7
"Analog input 3, setup"	14

\* See [Connection terminals, advanced functional module, FM 300](#) on page 82.

Set the analog input for a feedback sensor via the "Assisted pump setup" menu. See ["Assisted pump setup"](#) on page 61.

If you want to set an analog input for other purposes, you can do this manually.

You can set the analog inputs via the "Setup, analog input" menu. See ["Setup, analog input"](#) on page 62.

If you perform the manual setting via Grundfos GO, you need to enter the menu for the analog input under the "Settings" menu.

### Function

You can set the analog inputs to these functions:

- "Not active"
- "Feedback sensor"
- "Ext. setpoint infl."  
See ["External setpoint influence"](#) on page 52.
- "Other function".

## Measured parameter

Select one of the parameters: the parameter to be measured in the system by the sensor connected to the actual analog input. See [fig. 38](#).

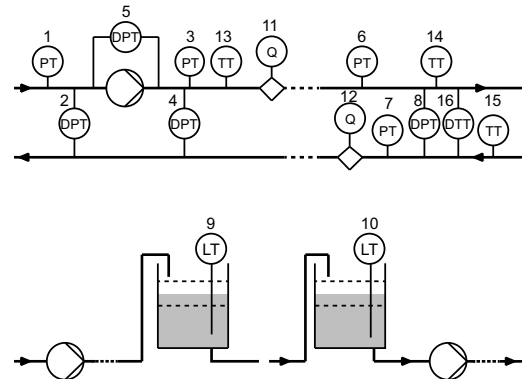


Fig. 38 Overview of sensor locations

Sensor function, measured parameter	Pos.
"Inlet pressure"	1
"Diff. press., inlet"	2
"Liquid temp."	3
"Diff. press., outlet"	4
"Diff. press., pump"	5
"Operating mode"	6
"Press. 2, external"	7
"Diff. press., ext."	8
"Storage tank level"	9
"Feed tank level"	10
"Pump flow"	11
"Flow, external"	12
"Liquid temp."	13
"Temperature 1"	14
"Temperature 2"	15
"Diff. temp., ext."	16
"Ambient temp."	Not shown
"Other parameter"	Not shown

### "Unit"

Available measuring units:

Parameter	Possible measuring units
Pressure	bar, m, kPa, psi, ft
Level	m, ft, in
"Flow rate"	m <sup>3</sup> /h, l/s, yd <sup>3</sup> /h, gpm
"Liquid temp."	°C, °F
"Other parameter"	%

TM06 2328 3914

**Electrical signal**

Select signal type:

- "0.5 - 3.5 V"
- "0-5 V"
- "0-10 V"
- "0-20 mA"
- "4-20 mA".

**Sensor range, minimum value**

Set the minimum value of the connected sensor.

**Sensor range, maximum value**

Set the maximum value of the connected sensor.

**Factory setting**

See [9. Factory settings of E-pumps](#) on page 70.

**Setting two sensors for differential measurement**

In order to measure the difference of a parameter between two points, set the corresponding sensors as follows:

Parameter	Analog input for sensor 1	Analog input for sensor 2
Pressure, option 1	Differential pressure, inlet	Differential pressure, outlet
Pressure, option 2	Pressure 1, external	Pressure 2, external
Flow	Pump flow	Flow, external
Temperature	Temperature 1	Temperature 2

If you want to use the control mode "constant differential pressure", you must choose the function "Feedback sensor" for the analog input of both sensors.

**"Built-in Grundfos sensor"**

Pump variant	"Built-in Grundfos sensor"
TPE3, TPE3 D	•
TPE2, TPE2 D	-

You can select the function of the built-in sensor in the "Built-in Grundfos sensor" menu.

Set the "Built-in Grundfos sensor" via the "Assisted pump setup" menu. See ["Assisted pump setup"](#) on page 61.

If you perform the setting manually in the advanced control panel, you must enter the "Analog inputs" menu under the "Settings" menu in order to access the "Built-in Grundfos sensor" menu.

If you perform the setting manually via Grundfos GO, you need to enter the menu for the "Built-in Grundfos sensor" under the "Settings" menu.

**Function**

You can set the built-in sensor to these functions:

- "Grundfos diff.-pressure sensor"
  - "Not active"
  - "Feedback sensor"
  - "Setpoint influence"
  - "Other function".
- "Grundfos temperature sensor"
  - "Not active"
  - "Feedback sensor"
  - "Setpoint influence"
  - "Other function".

**Factory setting**

See [9. Factory settings of E-pumps](#) on page 70.

## "Pt100/1000 inputs"

Pump variant	"Pt100/1000 inputs"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

Function	Terminals*
"Pt100/1000 input 1, setup"	17 and 18
"Pt100/1000 input 2, setup"	18 and 19

\* See [Connection terminals, advanced functional module, FM 300](#) on page 82.

Set the Pt100/1000 input for a feedback sensor via the "Assisted pump setup" menu. See ["Assisted pump setup"](#) on page 61.

If you want to set a Pt100/1000 input for other purposes, you can do this manually.

You can set the analog inputs via the "Setup, analog input" menu. See ["Setup, analog input"](#) on page 62.

If you perform the manual setting via Grundfos GO, you need to enter the menu for the Pt100/1000 input under the "Settings" menu.

### Function

You can set the Pt100/1000 inputs to these functions:

- "Not active"
- "Feedback sensor"
- "Ext. setpoint infl."
  - See ["External setpoint influence"](#) on page 52.
- "Other function".

### Measured parameter

Select one of the parameters, such as the parameter to be measured in the system by the Pt100/1000 sensor connected to the actual Pt100/1000 input. See [fig. 39](#).

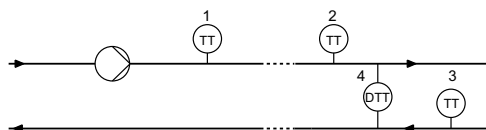


Fig. 39 Overview of Pt100/1000 sensor locations

Parameter	Pos.
"Liquid temp."	1
"Temperature 1"	2
"Temperature 2"	3
"Ambient temp."	Not shown

### Measuring range

-50 to +204 °C.

### Factory setting

See [9. Factory settings of E-pumps](#) on page 70.

## "Digital inputs"

Pump variant	"Digital inputs"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

Function	Terminals*
"Digital input 1, setup"	2 and 6
"Digital input 2, setup"	1 and 9

\* See [Connection terminals, advanced functional module, FM 300](#) on page 82.

To set a digital input, make the settings below.

### Function

Select one of these functions:

- "Not active"
  - When set to "Not active", the input has no function.
- "External stop"
  - When the input is deactivated, open circuit, the pump stops.
- "Min.", minimum speed
  - When the input is activated, the pump runs at the set minimum speed.
- "Max.", maximum speed
  - When the input is activated, the pump runs at the set maximum speed.
- "User-defined speed"
  - When the input is activated, the motor runs at a speed set by the user.
- "External fault"
  - When the input is activated, a timer starts. If the input is activated for more than 5 seconds, the pump stops and a fault is indicated. This function depends on input from external equipment.
- "Alarm resetting"
  - When the input is activated, a possible fault indication is reset.
- "Dry running"
  - When this function has been selected, lack of inlet pressure or water shortage can be detected. When lack of inlet pressure or water shortage, dry running, is detected, the pump stops. The pump cannot restart as long as the input is activated. This requires the use of an accessory, such as these:
    - a pressure switch installed on the inlet side of the pump
    - a float switch installed on the inlet side of the pump.

- "Accumulated flow"  
When this function has been selected, the accumulated flow rate can be registered. This requires the use of a flowmeter which can give a feedback signal as a pulse per defined flow of water.  
See ["Pulse flowmeter setup"](#) on page 56.
- "Predefined setpoint digit 1", applies only to digital input 2  
When digital inputs are set to a predefined setpoint, the pump operates according to a setpoint based on the combination of the activated digital inputs.  
See ["Predefined setpoints"](#) on page 54.

The priority of the selected functions in relation to each other appears from section [Priority of settings](#) on page 66.

A stop command always has the highest priority.

**Activation delay**

Pump variant	Activation delay
TPE3, TPE3 D	-
TPE2, TPE2 D	•

Select the activation delay, T1.

It is the time between the digital signal and the activation of the selected function.

Range: 0 to 6000 seconds.

**Duration timer mode**

Select the mode. See fig. 40.

- "Not active"
- active with interrupt, mode A
- active without interrupt, mode B
- active with after-run, mode C.

Select the duration time, T2.

It is the time which, together with the mode, determines how long the selected function is active.

Range: 0 to 15,000 seconds.

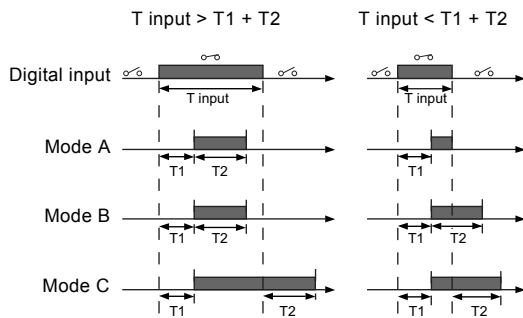


Fig. 40 Duration timer function of digital inputs

**Factory setting**

See [9. Factory settings of E-pumps](#) on page 70.

**"Digital inputs/outputs"**

Pump variant	"Digital inputs/outputs"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

Function	Terminals*
"Digital input/output 3, setup"	10 and 16
"Digital input/output 4, setup"	11 and 18

\* See [Connection terminals, advanced functional module, FM 300](#) on page 82.

You can select if the interface must be used as input or output. The output is an open collector, and you can connect it to, for example, an external relay or controller such as a PLC.

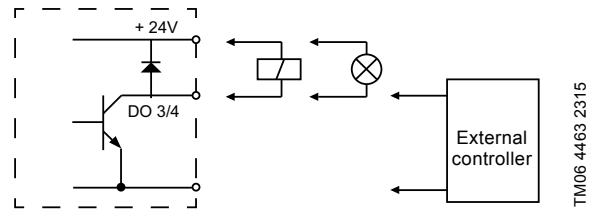


Fig. 41 Example of configurable digital inputs or outputs

TM06 4949 3415

TM06 4463 2315

To set a digital input or output, make the settings below.

### Mode

You can set the digital input or output 3 and 4 to act as digital input or digital output:

- "Digital input"
- "Digital output".

### Function

You can set the digital input or output 3 and 4 to the functions mentioned below.

#### Possible functions, digital input or output 3

"Function if input" See details in section "Digital inputs" on page 46	"Function if output" See details in section "Signal relays 1 and 2" ("Relay outputs") on page 48
<ul style="list-style-type: none"> <li>• "Not active"</li> <li>• "External stop"</li> <li>• "Min."</li> <li>• "Max."</li> <li>• "User-defined speed"</li> <li>• "External fault"</li> <li>• "Alarm resetting"</li> <li>• "Dry running"</li> <li>• "Accumulated flow"</li> <li>• "Predefined setpoint 2"</li> </ul>	<ul style="list-style-type: none"> <li>• "Not active"</li> <li>• "Ready"</li> <li>• "Alarm"</li> <li>• "Operation"</li> <li>• "Pump running"</li> <li>• "Warning"</li> <li>• "Limit 1 exceeded"</li> <li>• "Limit 2 exceeded"</li> </ul>

#### Possible functions, digital input or output 4

"Function if input" See details in section "Digital inputs" on page 46	"Function if output" See details in section "Signal relays 1 and 2" ("Relay outputs") on page 48
<ul style="list-style-type: none"> <li>• "Not active"</li> <li>• "External stop"</li> <li>• "Min."</li> <li>• "Max."</li> <li>• "User-defined speed"</li> <li>• "External fault"</li> <li>• "Alarm resetting"</li> <li>• "Dry running"</li> <li>• "Accumulated flow"</li> <li>• "Predefined setpoint 3"</li> </ul>	<ul style="list-style-type: none"> <li>• "Not active"</li> <li>• "Ready"</li> <li>• "Alarm"</li> <li>• "Operation"</li> <li>• "Pump running"</li> <li>• "Warning"</li> <li>• "Limit 1 exceeded"</li> <li>• "Limit 2 exceeded"</li> </ul>

#### Activation delay

Pump variant	Activation delay
TPE3, TPE3 D	-
TPE2, TPE2 D	•

Select the activation delay, T1.

It is the time between the digital signal and the activation of the selected function.

Range: 0 to 6000 seconds.

#### Duration timer mode

Select the mode. See fig. 42.

- "Not active"
- active with interrupt, mode A
- active without interrupt, mode B
- active with after-run, mode C.

Select the duration time, T2.

It is the time which, together with the mode, determines how long the selected function is active.

Range: 0 to 15,000 seconds.

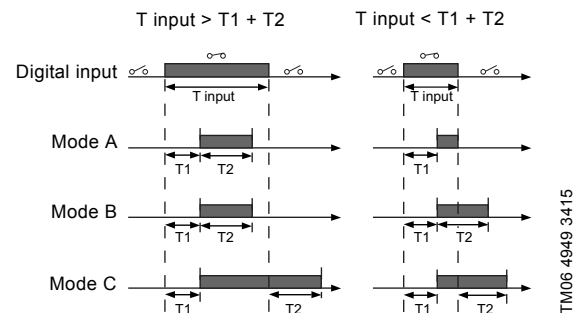


Fig. 42 Duration timer function of digital inputs

#### Factory setting

See 9. *Factory settings of E-pumps* on page 70.

#### "Signal relays 1 and 2" ("Relay outputs")

Pump variant	Relay outputs	
	Signal relay 1	Signal relay 2
TPE3, TPE3 D	•	•
TPE2, TPE2 D	•	•

Function	Terminals*
"Relay output 1"	NC, C1, NO
"Relay output 2"	NC, C2, NO

\* See *Connection terminals, advanced functional module, FM 300* on page 82.

The pump incorporates two signal relays for potential-free signalling. For further information, see *Indicator lights and signal relays* on page 68.



## Function

You can configure the signal relays to be activated by one of the following incidents:

- "Not active".
- "Ready"
 

The pump can be running or is ready to run and no alarms are present.
- "Alarm"
 

There is an active alarm and the pump is stopped.
- "Operating" ("Operation")
 

"Operating" equals "Running" but the pump is still in operation when it has been stopped due to a warning.
- "Running" ("Pump running")
- "Warning"
 

There is an active warning.
- "Limit 1 exceeded"\*
 

When the "Limit 1 exceeded" function is activated, the signal relay is activated. See ["Limit-exceeded function"](#) on page 55.
- "Limit 2 exceeded"\*
 

When the "Limit 2 exceeded" function is activated, the signal relay is activated. See ["Limit-exceeded function"](#) on page 55.
- "Relubricate"
- "External fan control" ("Control of external fan")
 

When you select "External fan control", the relay is activated if the internal temperature of the motor electronics reach a preset limit value.

\* This function is only available for TPE3, TPE2, TPE Series 2000 and TPE Series 1000 pumps with motor sizes from 0.12 to 11 kW, 2-pole and 0.12 - 7.5 kW, 4-pole.

## Factory setting

See [9. Factory settings of E-pumps](#) on page 70.

## "Analog output"

Pump variant	"Analog output"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

Function	Terminals*
"Analog output"	12

\* See [Connection terminals, advanced functional module, FM 300](#) on page 82.

The analog output enables the transfer of certain operating data to external control systems.

To set the analog output, make the settings below.

## "Output signal"

- "0-10 V"
- "0-20 mA"
- "4-20 mA".

## "Function of analog output"

- "Actual speed"

Signal range [V, mA]	"Actual speed" [%]		
	0	100	200
"0-10 V"	0 V	5 V	10 V
"0-20 mA"	0 mA	10 mA	20 mA
"4-20 mA"	4 mA	12 mA	20 mA

The reading is a percentage of nominal speed.

- "Actual value"

Signal range [V, mA]	"Actual value"	
	Sensor <sub>min</sub>	Sensor <sub>max</sub>
"0-10 V"	0 V	10 V
"0-20 mA"	0 mA	20 mA
"4-20 mA"	4 mA	20 mA

The reading is a percentage of the range between sensor<sub>min</sub> and sensor<sub>max</sub>.

- "Resulting setpoint"

Signal range [V, mA]	"Resulting setpoint" [%]	
	0	100
"0-10 V"	0 V	10 V
"0-20 mA"	0 mA	20 mA
"4-20 mA"	4 mA	20 mA

The reading is a percentage of the external setpoint range.

- "Motor load"

Signal range [V, mA]	"Motor load" [%]	
	0	100
"0-10 V"	0 V	10 V
"0-20 mA"	0 mA	20 mA
"4-20 mA"	4 mA	20 mA

The reading is a percentage of the range between 0 and 200 % of the maximum permissible load at the actual speed.

- "Motor current"

Signal range [V, mA]	"Motor current" [%]		
	0	100	200
0-10 V	0 V	5 V	10 V
0-20 mA	0 mA	10 mA	20 mA
4-20 mA	4 mA	12 mA	20 mA

The reading is a percentage of the range between 0 and 200 % of the rated current.

- "Limit 1 exceeded" and "Limit 2 exceeded"

Signal range [V, mA]	"Limit-exceed function"	
	Output not active	Output active
"0-10 V"	0 V	10 V
"0-20 mA"	0 mA	20 mA
"4-20 mA"	4 mA	20 mA

The "Limit-exceeded function" is typically used for monitoring of secondary parameters in the system. If the limit is exceeded, an output, warning or alarm is activated.

- "Flow rate"

Signal range [V, mA]	"Flow rate" [%]		
	0	100	200
"0-10 V"	0 V	5 V	10 V
"0-20 mA"	0 mA	10 mA	20 mA
"4-20 mA"	4 mA	12 mA	20 mA

The reading is a percentage of the range between 0 and 200 % of the nominal flow.

#### Factory setting

See [9. Factory settings of E-pumps](#) on page 70.

## "Controller" ("Controller settings")

Pump variant	"Controller settings"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

The pumps have a factory default setting of gain,  $K_p$ , and integral time,  $T_i$ .





However, if the factory setting is not the optimum setting, you can change the gain and the integral time:

- Set the gain within the range from 0.1 to 20.
  - Set the integral time within the range from 0.1 to 3600 seconds.
- If you select 3600 seconds, the controller functions as a P controller.

Furthermore, you can set the controller to inverse control. This means that if the setpoint is increased, the speed is reduced. In the case of inverse control, set the gain within the range from -0.1 to -20.

#### Guidelines for setting of PI controller

The tables below show the recommended controller settings:

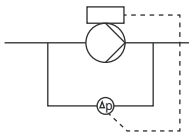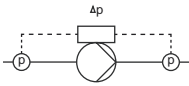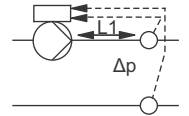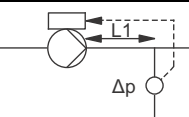"Differential-pressure control"	$K_p$	$T_i$
	0.5	0.5
		
	0.5	L1 < 5 m: 0.5 L1 > 5 m: 3 L1 > 10 m: 5
		

L1: Distance in meters between pump and sensor.

"Temperature control"	K <sub>p</sub>		T <sub>i</sub>
	Heating system <sup>1)</sup>	Cooling system <sup>2)</sup>	
	0.5	-0.5	10 + 5L2
	0.5	-0.5	30 + 5L2

- 1) In heating systems, an increase in pump performance results in a rise in temperature at the sensor.
- 2) In cooling systems, an increase in pump performance results in a drop in temperature at the sensor.

L2: Distance in meters between heat exchanger and sensor.

"Differential-temperature control"	K <sub>p</sub>	T <sub>i</sub>
	-0.5	10 + 5L2

L2: Distance in meters between heat exchanger and sensor.

"Flow control"	K <sub>p</sub>	T <sub>i</sub>
	0.5	0.5

"Constant-pressure control"	K <sub>p</sub>	T <sub>i</sub>
	0.5	0.5
	0.1	0.5

"Level control"	K <sub>p</sub>	T <sub>i</sub>
	-2.5	100
	2.5	100

**Rules of thumb**

If the controller is too slow-reacting, increase the gain.  
 If the controller is hunting or unstable, dampen the system by reducing the gain or increasing the integral time.

**Factory setting**

See 9. *Factory settings of E-pumps* on page 70.

**"Operating range"**


Pump variant	"Operating range"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

Set the operating range as follows:

- Set the minimum speed within the range from fixed minimum speed to user-set maximum speed.
- Set the maximum speed within the range from user-set minimum speed to fixed maximum speed.

The range between the user-set minimum and maximum speeds is the operating range. See fig. 43.

**Note:** Speeds below 25 % may result in noise from the shaft seal.

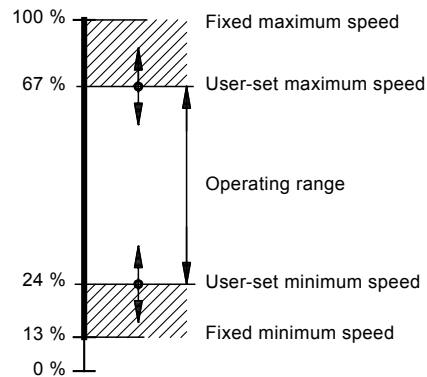

TM00 6785 5095

Fig. 43 Example of minimum and maximum settings

**Factory setting**

See 9. *Factory settings of E-pumps* on page 70.

## "External setpoint influence"

Pump variant	"External setpoint influence"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

You can influence the setpoint by an external signal, either via one of the analog inputs or, if an advanced functional module is fitted, via one of the Pt100/1000 inputs.

**Note:** Before you can enable the "External setpoint function", set one of the analog inputs or Pt100/1000 inputs to "Setpoint influence".

See ["Analog inputs"](#) on page 44 and ["Pt100/1000 inputs"](#) on page 46.

If more than one input has been set to "Setpoint influence", the function selects the analog input with the lowest number, for example, "Analog input 2", and ignores the other inputs, for example, "Analog input 3" or "Pt100/1000 input 1".

### Example with constant pressure with linear influence

Actual setpoint: actual input signal x (setpoint - sensor min.) + sensor min.

At a lower sensor value of 0 bar, a setpoint of 2 bar and an external setpoint of 60 %, the actual setpoint is  $0.60 \times (2 - 0) + 0 = 1.2$  bar.

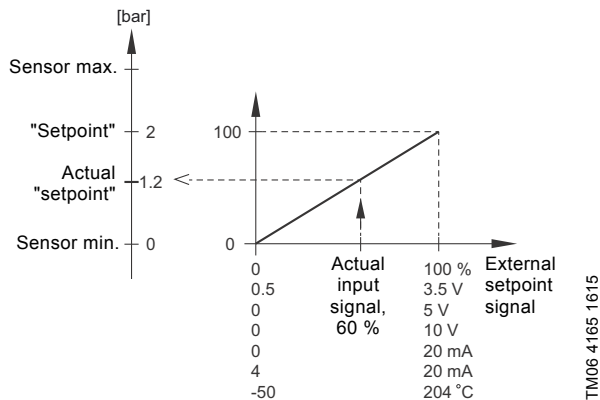


Fig. 44 Example of setpoint influence with sensor feedback

### Example with constant curve with linear influence

Actual setpoint: actual input signal x (setpoint - user-set minimum speed) + user-set minimum speed.

At a user-set minimum speed of 25 %, a setpoint of 85 % and an external setpoint of 60 %, the actual setpoint is  $0.60 \times (85 - 25) + 25 = 61$  %. See fig. 45.

In some cases, the maximum curve is limited to a lower speed. See fig. 45.

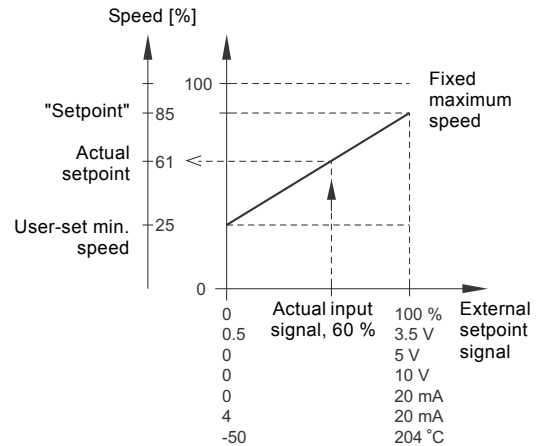


Fig. 45 Example of setpoint influence with constant curve

### Factory setting

See [9. Factory settings of E-pumps](#) on page 70.

### "Setpoint influence"


Pump variant	"Setpoint influence"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

The table below gives an overview of the types of setpoint influence and the availability depending on pump type.

Type of setpoint influence	Pump type	
	TPE3	TPE2
"Not active"	•	•
"Linear function"	•	•
"Linear with Stop"	•	•
"Influence table"	•	•

You can select these functions:


- "Not active"  
When set to "Not active", the setpoint is not influenced from any external function.
- "Linear function"  
The setpoint is influenced linearly from 0 to 100 %. See fig. 46.

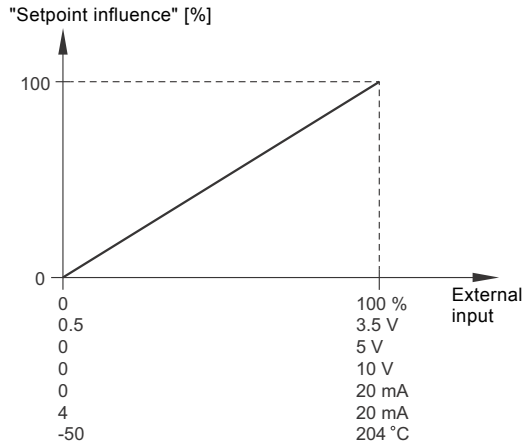

TM06 4166 1615

Fig. 46 "Linear function"


- "Linear with Stop"  
In the input signal range from 20 to 100 %, the setpoint is influenced linearly.  
If the input signal is below 10 %, the pump changes to operating mode "Stop".  
If the input signal is increased above 15 %, the operating mode is changed back to "Normal". See fig. 47.

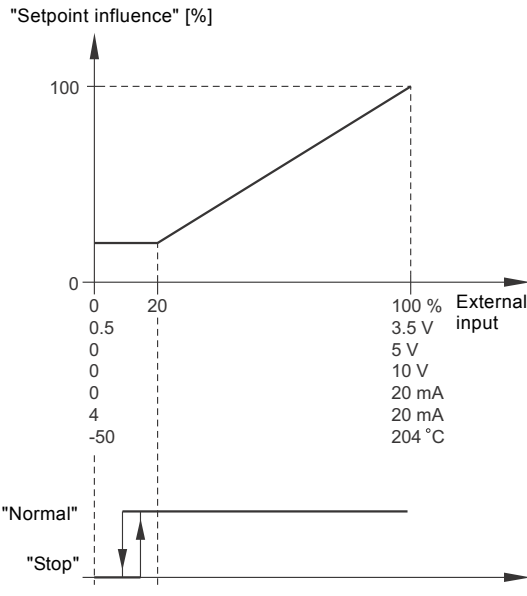

TM06 4167 1615

Fig. 47 "Linear with Stop"

- "Influence table"  
The setpoint is influenced by a curve made out of two to eight points. There will be a straight line between the points and a horizontal line before the first point and after the last point.

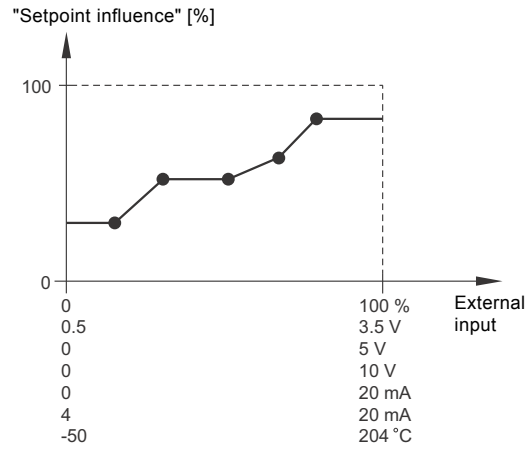

TM06 4170 1615

Fig. 48 "Influence table", example with five points

## "Predefined setpoints"

Pump variant	"Predefined setpoints"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

You can set and activate seven predefined setpoints by combining the input signals to digital inputs 2, 3 and 4 as shown in the table below.

Set the digital inputs 2, 3 and 4 to "Predefined setpoints" if all seven predefined setpoints are to be used. You can also set one or two of the digital inputs to "Predefined setpoints", but this will limit the number of predefined setpoints available.

"Digital inputs"			"Setpoint"
2	3	4	
0	0	0	Normal setpoint or stop
1	0	0	Predefined setpoint 1
0	1	0	Predefined setpoint 2
1	1	0	Predefined setpoint 3
0	0	1	Predefined setpoint 4
1	0	1	Predefined setpoint 5
0	1	1	Predefined setpoint 6
1	1	1	Predefined setpoint 7

0: Open contact  
1: Closed contact

### Example

Figure 49 shows how you can use the digital inputs to set seven predefined setpoints. Digital input 2 is open and digital inputs 3 and 4 are closed. If you compare with the table above, you can see that "Predefined setpoint 6" is activated.

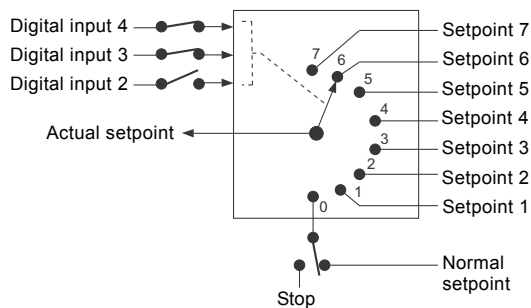


Fig. 49 Principle sketch showing how predefined setpoints function

If all digital inputs are open, the pump either stops or runs at the normal setpoint. Set the desired action with Grundfos GO or with the advanced control panel.

### Factory setting

See 9. *Factory settings of E-pumps* on page 70.

## "Temperature influence"

Pump variant	"Temperature influence"
TPE3, TPE3 D	•
TPE2, TPE2 D	-

When this function is enabled in proportional- or constant-pressure control mode, the setpoint for head is reduced according to the liquid temperature.

You can set the temperature influence to function at liquid temperatures below 176 or 122 °F (80 or 50 °C). These temperature limits are called  $T_{max}$ . The setpoint is reduced in relation to the head set which is equal to 100 % according to the characteristics below.

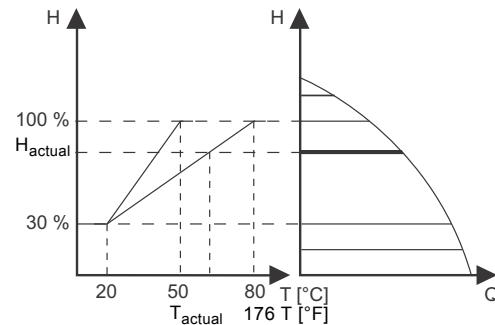


Fig. 50 "Temperature influence"

In the above example,  $T_{max}$ , which is equal to 122 °F (80 °C), has been selected. The actual liquid temperature,  $T_{actual}$ , causes the setpoint for head to be reduced from 100 % to  $H_{actual}$ .

The temperature influence function requires the following:

- proportional-pressure or constant-pressure control mode
- pump installed in flow pipe
- system with flow-pipe temperature control.

Temperature influence is suitable for the following systems:

- Systems with variable flows, for example two-pipe heating systems, in which the enabling of the temperature influence function ensures a further reduction of the pump performance in periods with small heating demands and consequently a reduced flow-pipe temperature.
- Systems with almost constant flows, for example one-pipe heating systems and underfloor heating systems, in which variable heating demands cannot be registered as changes in the head as it is the case with two-pipe heating systems. In such systems, you can only adjust the pump performance by enabling the temperature influence function.

### Selection of the maximum temperature

In systems with a dimensioned flow-pipe temperature of:

- up to and including 131 °F (55 °C), select  $T_{max}$  equal to 122 °F (50 °C).
- above 131 °F (55 °C), select  $T_{max}$  equal to 176 °F (80 °C).

**Note:** You cannot use the temperature function in air-conditioning and cooling systems.

### Factory setting

See [9. Factory settings of E-pumps](#) on page 70.

### "Limit-exceeded function"

Pump variant	"Limit-exceeded function"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This function can monitor a measured parameter or one of the internal values such as speed, motor load or motor current. If a set limit is reached, a selected action can take place. You can set two limit-exceeded functions meaning that you can monitor two parameters or two limits of the same parameter simultaneously.

The function requires setting of the following:

#### Measured

Here you set the measured parameter to be monitored.

#### "Limit"

Here you set the limit which activates the function.

#### "Hysteresis band"

Here you set the hysteresis band.

#### "Limit exceeded when"

Here you can set if you want the function to be activated when the selected parameter exceeds or drops below the set limit.

- "Above limit"  
The function is activated if the measured parameter exceeds the set limit.
- "Below limit"  
The function is activated if the measured parameter drops below the set limit.

### Action

If the value exceeds a limit, you can define an action. You can select the following actions:

- "No action"  
The pump remains in its current state. Use this setting if you only want to have a relay output when the limit is reached. See ["Signal relays 1 and 2" \("Relay outputs"\)](#) on page 48.
- "Warning/alarm"  
There is a warning.
- "Stop"  
The pump stops.
- "Min."  
The pump reduces speed to minimum.
- "Max."  
The pump increases speed to maximum.
- "User-defined speed"  
The pump runs at a speed set by the user.

#### "Detection delay"

You can set a detection delay which ensures that the monitored parameter stays above or below a set limit in a set time before the function is activated.

#### "Resetting delay"

The resetting delay is the time from which the measured parameter differs from the set limit including the set hysteresis band and until the function is reset.

## Example

The function is to monitor the outlet pressure of a pump. If the pressure is below 5 bar for more than 5 seconds, a warning must be given. If the outlet pressure is above 7 bar for more than 8 seconds, you must reset the warning.

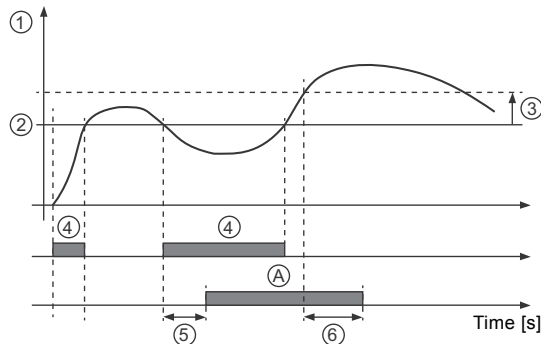


Fig. 51 Limit exceeded (example)

Pos.	Setting parameter	Setting
1	Measured	Outlet pressure
2	"Limit"	5 bar
3	"Hysteresis band"	2 bar
4	"Limit exceeded when"	Below limit
5	"Detection delay"	5 seconds
6	"Resetting delay"	8 seconds
A	Limit-exceeded function active	-
-	Action	Warning

## Factory setting

See [9. Factory settings of E-pumps](#) on page 70.

## Special functions

### "Pulse flowmeter setup"

Pump variant	"Pulse flowmeter setup"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

You can connect an external pulse flowmeter to one of the digital inputs in order to register the actual and accumulated flows. Based on this, you can also calculate the specific energy.

To enable a pulse flowmeter, set one of the digital inputs to "Accumulated flow" and set the pumped volume per pulse. See ["Digital inputs"](#) on page 46.

## "Ramps"

Pump variant	"Ramps"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

The ramps determine how quickly the motor can accelerate and decelerate during start-stop or setpoint changes.

You can set the following:

- acceleration time, 0.1 to 300 seconds
- deceleration time, 0.1 to 300 seconds.

The times apply to the acceleration from 0 rpm to fixed maximum speed and the deceleration from fixed maximum speed to 0 rpm.

At short deceleration times, the deceleration of the motor may depend on load and inertia as there is no possibility of actively braking the motor.

If the power supply is switched off, the deceleration of the motor only depends on load and inertia.

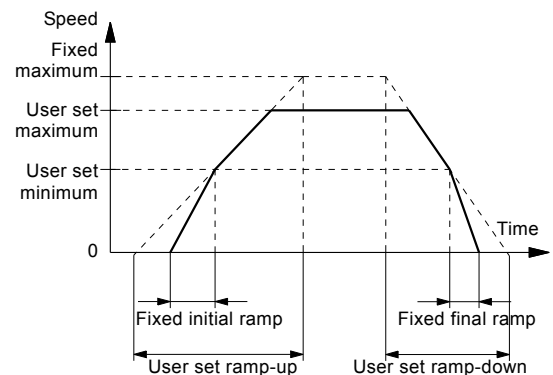


Fig. 52 Ramp-up and ramp-down

## Factory setting

See [9. Factory settings of E-pumps](#) on page 70.



**"Standstill heating"**

Pump variant	"Standstill heating"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

You can use this function to avoid condensation in humid environments. When you set the function to "Active" and the pump is in operating mode "Stop", a low AC voltage will be applied to the motor windings. The voltage is not high enough to make the motor rotate, but ensures that sufficient heat is generated to avoid condensation in the motor including the electronic parts in the drive.

**Note:** Remember to remove the drain plugs and fit a cover over the motors.

**Factory setting**

See [9. Factory settings of E-pumps](#) on page 70.

**"Motor bearing monitoring"**

Pump variant	"Motor bearing monitoring"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

You can set the motor bearing monitoring function to these values:

- "Active"
- "Not active"

When the function is set to "Active", a counter in the controller will start counting the mileage of the bearings.

The counter continues counting even if the function is changed to "Not active", but a warning is not given when it is time for replacement or relubrication.

When the function is changed to "Active again", the accumulated mileage is again used to calculate the replacement or relubrication time.

**Factory setting**

See [9. Factory settings of E-pumps](#) on page 70.

**"Service"**

Pump variant	"Service"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

"Motor bearing monitoring" must be activated in order for the motor to indicate that bearings must be replaced or relubricated. See ["Motor bearing monitoring"](#) on page 57.

For motors of 7.5 kW and below, it is not possible to relubricate the bearings.

Bearings on motors of 11 kW and above can be relubricated.

**"Time until next service" ("Motor bearing service")**

This display shows when to replace or relubricate the motor bearings. The controller monitors the operating pattern of the motor and calculates the period between bearing replacements or relubrications.

Displayable values:

- "in 2 years"
- "in 1 year"
- "in 6 months"
- "in 3 months"
- "in 1 month"
- "in 1 week"
- "Now".

**"Bearing replacements"**

This display shows the number of bearing replacements that have been done during the lifetime of the motor.

**"Bearings replaced" ("Motor bearing maintenance")**

When the bearing monitoring function is active, the controller gives a warning when the motor bearings are to be replaced.

When you have replaced the motor bearings, confirm this action by pressing [Bearings replaced].

**"Bearing relubrications"**

The following applies only for 11 kW motors.

This display shows the number of bearing relubrications that have been done since the last bearing replacement.

### "Bearings relubricated" (Motor bearing maintenance)

The following applies only for 11 kW motors.

When the bearing monitoring function is active, the controller gives a warning when the motor bearings are due to be relubricated.

When you have relubricated the motor bearings, press [Bearings relubricated].

The factory-set interval between relubrications is stated on the bearing nameplate which is placed on the motor. The relubrication interval can be changed by a Grundfos service technician.

It is possible to relubricate the bearings five times according to the preset interval. When the preset interval has been reached after the fifth relubrication, a warning will be given to replace the bearings.

## Communication

### "Number" ("Pump number")

Pump variant	Number
TPE3, TPE3 D	•
TPE2, TPE2 D	•

You can allocate a unique number to the pump. This makes it possible to distinguish between pumps in connection with bus communication.

#### Factory setting

See [9. Factory settings of E-pumps](#) on page 70.

### "Radio communication" ("Enable/disable radio comm.")

Pump variant	"Radio communication"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

You can set the radio communication to either enabled or disabled. You can use this function in areas where radio communication is not allowed.

IR communication remains active.

#### Factory setting

See [9. Factory settings of E-pumps](#) on page 70.

## General settings

### "Language"

Pump variant	"Language"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu is only available in the advanced control panel.

In this menu you can select the desired language. A number of languages are available.

### "Date and time"

Pump variant	"Date and time"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

You can set date and time as well as how they are to be shown in the display:

- "Select date format"  
"YYYY-MM-DD"  
"DD-MM-YYYY"  
"MM-DD-YYYY".
- "Select time format":  
"HH:MM 24-hour clock"  
"HH:MM am/pm 12-hour clock".
- "Set date"
- "Set time".

### "Unit configuration" ("Units")

Pump variant	"Unit configuration"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

In this menu you can select between SI and US units. The setting can be made generally for all parameters or customized for each parameter.

#### Factory setting

See [9. Factory settings of E-pumps](#) on page 70.

**"Buttons on product" ("Enable/disable settings")**

Pump variant	"Buttons on product"
TPE3, TPE3 D	•
TPE2, TPE2 D	•


In this display, you can disable the possibility of making settings.


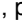
**Grundfos GO**

If you set the buttons to "Not active", the buttons on the standard control panel are disabled. If you set the buttons to "Not active" on pumps with an advanced control panel, see below.


**Advanced control panel**

If you have disabled the settings, you can still use the buttons to navigate through the menus but you cannot make changes in the "Settings" menu.

When you have disabled the possibility to make settings, the  symbol appears in the display.

To unlock the pump and allow settings, press  and  simultaneously for at least 5 seconds.

**Standard control panel**

The  button always remains active but you can only unlock all other buttons on the pump with Grundfos GO.

**"Delete history"**

Pump variant	"Delete history"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu is only available in the advanced control panel.

In this menu, you can delete the following historic data:

- "Delete work log."
- "Delete heat energy data"
- "Delete energy consumption".

**"Define Home display"**

Pump variant	"Define Home display"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu is only available in the advanced control panel.

In this menu, you can set the "Home" display to show up to four user-set parameters.

**"Display settings"**

Pump variant	"Display settings"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu is only available in the advanced control panel.

In this menu you can adjust the display brightness and set whether or not the display is to turn off if no buttons have been activated for a period of time.

**"Store settings" ("Store actual settings")**

Pump variant	"Store settings"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

**Grundfos GO**

In this menu, you can store the actual settings for later use in the same pump or in other pumps of the same type.

**Advanced control panel**

In this menu, you can store the actual settings for later use in the same pump.

**"Recall settings" ("Recall stored settings")**

Pump variant	"Recall settings"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

**Grundfos GO**

In this menu, you can recall stored settings from a number of previously stored settings that the pump then uses.

**Advanced control panel**

In this menu, you can recall the last stored settings that the pump then uses.

**"Undo"**

Pump variant	"Undo"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu is only available in Grundfos GO.

In this display, you can undo all settings that have been made with Grundfos GO in the current communication session. You cannot undo a "Recall stored settings" action.

**"Pump name"**

Pump variant	"Pump name"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu is only available in Grundfos GO.

In this display, you can give the pump a name. In this way, you can easily identify the pump when connecting with Grundfos GO.

**Factory setting**

See [9. Factory settings of E-pumps](#) on page 70.

**"Connection code"**

Pump variant	"Connection code"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu is only available in Grundfos GO.

You can set a connection code to avoid having to press the connection button each time and to restrict remote access to the product.

**Setting the code in the product using Grundfos GO**

1. Connect Grundfos GO to the product.
2. In the product dashboard, select "Settings".
3. Choose "Connection code".
4. Enter the wanted code and press [OK].  
The code must be a character string, ASCII. You can always modify the code. The old code is not needed.

**Setting the code in Grundfos GO**

You can set a default connection code in Grundfos GO so that it automatically attempts to connect to the selected product via this code.

When you select a product with the same connection code in Grundfos GO, Grundfos GO automatically connects to the product and you do not have to press the connection button on the module.

Set the default code in Grundfos GO in this way:

1. In the main menu, under "General", select "Settings".
2. Choose "Remote".
3. Enter the connection code in the field "Preset connection code". The field now says "Connection code set".

You can always modify the default connection code by pressing [Delete] and entering a new one.

If Grundfos GO fails to connect and ask you to press the connection button on the product, it means that the product has no connection code or has a different connection code. In this case, you can only establish connection via the connection button.

After setting a connection code, you must switch off the product until the light in Grundfos Eye turns off before you can use the new connection code.

**Factory setting**

See [9. Factory settings of E-pumps](#) on page 70.

**"Run startup guide"**

Pump variant	"Run startup guide"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu is only available in the advanced control panel.

The startup guide automatically starts when you start the pump for the first time.

You can always run the startup guide later via this menu.

The startup guide guides you through the general settings of the pump.

- "Language". See ["Language"](#) on page 58.
- "Select date format".\*  
See ["Date and time"](#) on page 58.
- "Set date".\*  
See ["Date and time"](#) on page 58.
- "Select time format".\*  
See ["Date and time"](#) on page 58.
- "Set time".\*  
See ["Date and time"](#) on page 58.
- "Setting of pump"
  - "Go to Home"
  - "Run with Constant curve" / "Run with Constant pressure".  
See ["Control mode"](#) on page 36
  - "Go to Assisted pump setup".  
See ["Assisted pump setup"](#) on page 61.
  - "Return to factory settings".

\* Applies only for pumps with advanced functional module, FM 300. For further information, see [Identification of functional module](#) on page 84.

**"Alarm log"**

Pump variant	"Alarm log"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu contains a list of logged alarms from the product. The log shows the name of the alarm, when the alarm occurred and when it was reset.

**"Warning log"**

Pump variant	"Warning log"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu contains a list of logged warnings from the product. The log shows the name of the warning, when the warning occurred and when it was reset.

**"Assist"**

Pump variant	"Assist"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

The menu consist of functions which take you through the steps needed to set the pump.

**"Assisted pump setup"**

Pump variant	"Assisted pump setup"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

The menu guides you through the following:

**Setting of pump**

- Selection of control mode. See page 36.
- Configuration of feedback sensors.
- Adjusting the setpoint. See page 35.
- Controller settings. See page 50.
- Summary of settings.

Example of how to use the "Assisted pump setup" for setting up the pump to constant pressure:

**Grundfos GO**

1. Open the "Assist" menu.
2. Select "Assisted pump setup".
3. Select the control mode "Constant pressure".
4. Read the description of this control mode.
5. Select which analog input to use as sensor input.
6. Select sensor function according to where the sensor is installed in the system. See fig. 38.
7. Select electrical input signal according to the sensor specifications.
8. Select measuring unit according to the sensor specifications.
9. Set the minimum and maximum sensor values according to the sensor specifications.
10. Set the desired setpoint.
11. Set the controller settings  $K_p$  and  $T_i$ . See the recommendations in section "Controller" ("Controller settings") on page 50.
12. Type the pump name.
13. Check the summary of settings and confirm them.

**Advanced control panel**

1. Open the "Assist" menu.
2. Select "Assisted pump setup".
3. Select the control mode "Const. pressure".
4. Select which analog input to use as sensor input.
5. Select the measured parameter to be controlled. See fig. 38.
6. Select measuring unit according to the sensor specifications.
7. Set the minimum and maximum sensor values according to the sensor specifications.
8. Select electrical input signal according to the sensor specifications.
9. Set the setpoint.
10. Set the controller settings  $K_p$  and  $T_i$ . See recommendations in section "Controller" ("Controller settings") on page 50.
11. Check the summary of settings and confirm them by pressing [OK].

**"Setup, analog input"**

Pump variant	"Setup, analog input"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu is only available in the advanced control panel.

The menu guides you through the following:

**"Setup, analog input"**

- Analog inputs 1 to 3. See page 44.
- Pt100/1000 input 1 and 2. See page 46.
- Adjusting the setpoint. See page 35.
- Summary.

**"Setting of date and time"**

Pump variant	"Setting of date and time"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu guides you through the following:

- "Select date format". See ["Date and time"](#) on page 58.
- "Set date". See ["Date and time"](#) on page 58.
- "Select time format". See ["Date and time"](#) on page 58.
- "Set time". See ["Date and time"](#) on page 58.

**"Multipump setup" ("Setup of multi-pump system")**

Pump variant	"Multipump setup"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

The multipump function enables the control of two pumps connected in parallel without the use of external controllers. The pumps in a multipump system communicate with each other via the wireless GENair connection or the wired GENI connection.

A multipump system is set via a selected pump: the master pump, which is the first selected pump.

If two pumps in the system are configured with an outlet-pressure sensor, both pumps can function as master pumps and take over the master pump function if the other fails. This provides additional redundancy in the multipump system.

The multipump functions are described in the following sections.

**Alternating operation**

Alternating operation functions as a duty-standby operating mode and is possible with two pumps of same size and type connected in parallel. The main purpose of the function is to ensure an even amount of running hours and that the standby pump takes over if the running pump stops due to an alarm.

Each pump requires a non-return valve in series with the pump.

You can choose between two alternating operation modes:

- Alternating operation, time  
Pump changeover to the other is based on time.
- Alternating operation, energy  
Pump changeover to the other is based on energy consumption.

If the duty pump fails, the other pump takes over automatically.

**Backup operation**

Backup operation is possible with two pumps of same size and type connected in parallel. Each pump requires a non-return valve in series with the pump.

One pump is operating continuously. The backup pump is operated for a short time each day to prevent seizing up. If the duty pump stops due to a fault, the backup pump starts automatically.

### Cascade operation

Cascade operation ensures that the pump performance is automatically adapted to the consumption by switching pumps on or off. The system thus runs as energy-efficiently as possible with a constant pressure and a limited number of pumps.

When a twin-head pump is running in constant-pressure control mode, the second pump head starts at 90 % and stops at 50 % performance.

All pumps in operation run at equal speed. Pump changeover is automatic and depends on energy, operating hours and fault.

Pump system:

- Twin-head pump.
- Two or four single-head pumps connected in parallel.  
The pumps must be of the same type and size.  
Each pump requires a non-return valve in series with the pump.

Set the control mode to "Const. pressure" or "Const. curve".

This function is available with up to 4 motors installed in parallel. The motors must be of the same size and the pumps must be of the same model.

- The performance is adjusted to the demand through cutting pumps in or out and through parallel control of the pumps in operation.
- The controller maintains a constant pressure through continuous adjustment of the speed of the pumps.
- Pump changeover is automatic and depends on load, operating hours and fault detection.
- All pumps in operation run at the same speed.
- The number of pumps in operation also depends on the energy consumption of the pumps. If only one pump is required, two pumps will run at a lower speed if this results in a lower energy consumption.
- If several motors in the system have a sensor, they can all function as master and take over the master function if the other fails.


### Setting a multipump system

You can set a multipump system in the following ways:

- [Grundfos GO and wireless pump connection](#)
- [Grundfos GO and wired pump connection](#)
- [Advanced control panel and wireless pump connection](#)
- [Advanced control panel and wired pump connection](#).


See step-by-step descriptions below.

#### Grundfos GO and wireless pump connection

1. Power on both pumps.
2. Establish contact to one of the pumps with Grundfos GO.
3. Set the needed analog and digital inputs via Grundfos GO according to the connected equipment and the required functionality. See ["Assisted pump setup"](#) on page 61.
4. Assign a pump name to the pump using Grundfos GO. See ["Pump name"](#) on page 60.
5. Disconnect Grundfos GO from the pump.
6. Establish contact to the other pump.
7. Set the needed analog and digital inputs via Grundfos GO according to the connected equipment and the required functionality. See ["Assisted pump setup"](#) on page 61.
8. Assign a pump name to the pump using Grundfos GO. See ["Pump name"](#) on page 60.
9. Select the "Assist" menu and "Multipump setup".
10. Select the desired multipump function. See ["Alternating operation"](#) on page 62, ["Backup operation"](#) on page 62 and ["Cascade operation"](#) on page 63.
11. Press [>] to continue.
12. Set the time for pump changeover such as the time at which the alternation between the two pumps is to take place. This step applies only if you have selected "Alternating operation, time" and if the pumps are fitted with FM 300.
13. Press [>] to continue.
14. Select "Radio" as the communication method to be used between the two pumps.
15. Press [>] to continue.
16. Press "Select pump 2".
17. Select the pump from the list.  
Use the [OK] or  button to identify the pump.
18. Press [>] to continue.
19. Confirm the multipump setup by pressing [Send].
20. Press [Finish] in the "Setup complete" dialog box.
21. Wait for the green indicator light in the middle of Grundfos Eye to light up.

The multipump system has now been set.

### Grundfos GO and wired pump connection

1. Connect the two pumps with each other with a 3-core screened cable between the GENIbus terminals A, Y, B.
  2. Power on both pumps.
  3. Establish contact to one of the pumps with Grundfos GO.
  4. Set the needed analog and digital inputs via Grundfos GO according to the connected equipment and the required functionality. See ["Assisted pump setup"](#) on page 61.
  5. Assign a pump name to the pump using Grundfos GO. See ["Pump name"](#) on page 60.
  6. Assign pump number 1 to the pump. See ["Number" \("Pump number"\)](#) on page 58.
  7. Disconnect Grundfos GO from the pump.
  8. Establish contact to the other pump.
  9. Set the needed analog and digital inputs via Grundfos GO according to the connected equipment and the required functionality. See ["Assisted pump setup"](#) on page 61.
  10. Assign a pump name to the pump using Grundfos GO. See ["Pump name"](#) on page 60.
  11. Assign pump number 2 to the pump. See ["Number" \("Pump number"\)](#) on page 58.
  12. Select the "Assist" menu and choose "Multipump setup".
  13. Select the desired multipump function. See ["Alternating operation"](#) on page 62, ["Backup operation"](#) on page 62 and ["Cascade operation"](#) on page 63.
  14. Press [ > ] to continue.
  15. Set the time for pump changeover such as the time at which the alternation between the two pumps is to take place. This step applies only if you have selected "Alternating operation, time" and if the pumps are fitted with FM 300.
  16. Press [ > ] to continue.
  17. Select "BUS cable" as the communication method to be used between the two pumps.
  18. Press [ > ] to continue.
  19. Press "Select pump 2".
  20. Select the additional pump from the list.  
Use the [OK] or  button to identify the additional pump.
  21. Press [ > ] to continue.
  22. Press [Send].
  23. Press [Finish] in the "Setup complete" dialog box.
  24. Wait for the green indicator light in the middle of Grundfos Eye to light up.
- The multipump system has now been set.

### Advanced control panel and wireless pump connection

1. Power on both pumps.
  2. On both pumps, set the needed analog and digital inputs according to the connected equipment and the required functionality. See ["Assisted pump setup"](#) on page 61.
  3. Select the "Assist" menu on one of the pumps and choose "Setup of multi-pump system".
  4. Press [ > ] to continue.
  5. Select "Wireless" as the communication method to be used between the two pumps.
  6. Press [ > ] to continue.
  7. Select the desired multipump function. See ["Alternating operation"](#) on page 62, ["Backup operation"](#) on page 62 and ["Cascade operation"](#) on page 63.
  8. Press [ > ] three times to continue.
  9. Press [OK] to search for other pumps.  
The green indicator light in the middle of Grundfos Eye flashes on the other pumps.
  10. Press the connect button on the pump which is to be added to the multipump system.
  11. Press [ > ] to continue.
  12. Set the time for pump changeover i.e. the time at which the alternation between the two pumps is to take place. This step applies only if you have selected "Alternating operation, time" and if the pumps are fitted with FM 300.
  13. Press [ > ] to continue.
  14. Press [OK].  
The multipump function icons appear in the bottom of the control panels.
- The multipump system has now been set.



### Advanced control panel and wired pump connection

1. Connect the two pumps with each other with a 3-core screened cable between the GENIbus terminals A, Y, B.
  2. Set the needed analog and digital inputs according to the connected equipment and the required functionality. See "[Assisted pump setup](#)" on page 61.
  3. Assign pump number 1 to the first pump. See "[Number](#)" ("[Pump number](#)") on page 58.
  4. Assign pump number 2 to the other pump. See "[Number](#)" ("[Pump number](#)") on page 58.
  5. Select the "Assist" menu on one of the pumps and choose "Setup of multi-pump system".
  6. Press [>] to continue.
  7. Select "Wired GENIbus" as the communication method to be used between the two pumps.
  8. Press [>] twice to continue.
  9. Select the desired multipump function. See [Alternating operation](#) on page 62, [Backup operation](#) on page 62 and [Cascade operation](#) on page 63.
  10. Press [>] to continue.
  11. Press [OK] to search for other pumps.
  12. Select the additional pump from the list.
  13. Press [>] to continue.
  14. Set the time for pump changeover i.e. the time at which the alternation between the two pumps is to take place.  
This step applies only if you have selected "Alternating operation, time" and if the pumps are fitted with FM 300.
  15. Press [>] to continue.
  16. Press [OK].  
The multipump function icon appears in the bottom of the control panels.
- The multipump system has now been set.

### Disabling the multipump function via Grundfos GO

1. Select the "Assist" menu.
2. Select "Multipump setup".
3. Select "Disable".
4. Press [>] to continue.
5. Confirm the multipump setup by pressing [Send].
6. Press [Finish].

The multipump function has now been disabled.

### Disabling a multipump via advanced control panel

1. Select the "Assist" menu.
2. Select "Setup of multi-pump system".
3. Press [>] to continue.
4. Confirm "No multi-pump function" by pressing [OK].
5. Press [>] to continue.
6. Press [OK].

The multipump system has now been disabled.

### "Description of control mode"

Pump variant	"Description of control mode"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu is only available in the advanced control panel.




This menu describes each of the possible control modes. See also section "[Control mode](#)" on page 36.

### "Assisted fault advice"

Pump variant	"Assisted fault advice"
TPE3, TPE3 D	•
TPE2, TPE2 D	•

This menu gives guidance and corrective actions in case of pump failures.

## Priority of settings

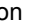You can always set the pump to stop by pressing  on the pump control panel. When the pump is not in "Stop" mode, you can always stop the pump by continuously pressing . Furthermore, you can set the pump to maximum speed by continuously pressing . You can always set the pump to operation at maximum speed or to stop with Grundfos GO.

If two or more functions are enabled at the same time, the pump will operate according to the function with the highest priority.

### Example

If you have set the pump to maximum speed via the digital input, the pump control panel or Grundfos GO can only set the pump to "Manual" or "Stop".


The priority of the settings appears from the table below.

Priority	Start-stop button	Grundfos GO or control panel on the motor	Digital input	Bus communication
1	"Stop"			
2		"Stop"*		
3		"Manual"		
4		"Max. speed"*/ "User-defined speed"		
5			"Stop"	
6			"User-defined speed"	
7				"Stop"
8				"Max. speed"
9				"Min. speed"
10				"Start"
11			"Max. speed"	
12		"Min. speed"		
13			"Min. speed"	
14			"Start"	
15		"Start"		

\* "Stop" and "Max. speed" settings made with Grundfos GO or on the motor control panel can be overruled by another operating-mode command sent from a bus, for example "Start". If the bus communication is interrupted, the motor resumes its previous operating mode, for example "Stop", selected with Grundfos GO or on the motor control panel.

## Grundfos Eye

The operating condition of the motor is indicated by Grundfos Eye on the control panel. See fig. 53 (A).

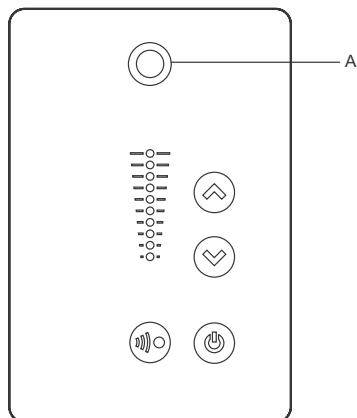

TM05 5993 4312

Fig. 53 Grundfos Eye


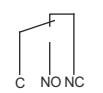
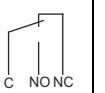
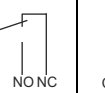
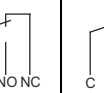





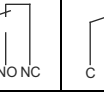
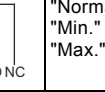

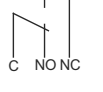
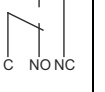

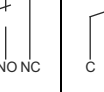
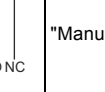

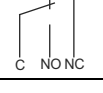
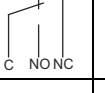
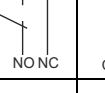
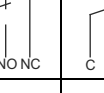
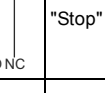

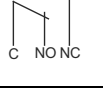
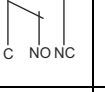
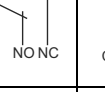
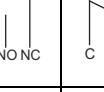
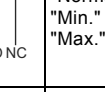

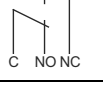
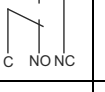
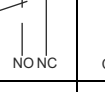

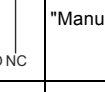

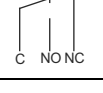
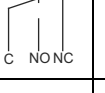
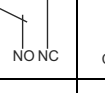

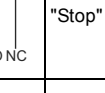

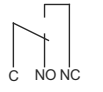
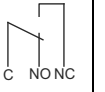
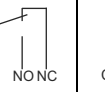
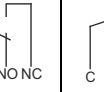
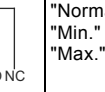

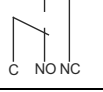
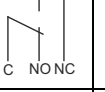
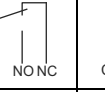
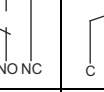
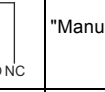

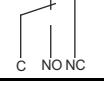
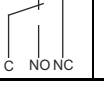
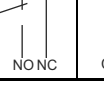

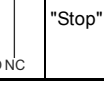
Grundfos Eye	Indication	Description
	No lights are on.	The power is off. The pump is not running.
	The two opposite green indicator lights are rotating in the direction of rotation of the pump when seen from the non-drive end.	The power is on. The pump is running.
	The two opposite green indicator lights are permanently on.	The power is on. The pump is not running.
	One yellow indicator light is rotating in the direction of rotation of the pump when seen from the non-drive end.	Warning. The pump is running.
	One yellow indicator light is permanently on.	Warning. The pump has stopped.
	The two opposite red indicator lights flash simultaneously.	Alarm. The pump has stopped.
	The green indicator light in the middle flashes quickly four times.	This is a feedback signal which the pump gives in order to ensure identification of itself.
	The green indicator light in the middle flashes continuously.	Grundfos GO or another pump is trying to communicate with the pump. Press  on the pump control panel to allow communication.
	The green indicator light in the middle is permanently on.	Remote control with Grundfos GO via radio. The pump is communicating with Grundfos GO via radio connection.
	The green indicator light in the middle flashes quickly while Grundfos Go is exchanging data with the pump. It takes a few seconds.	Remote control with Grundfos GO via infrared light. The pump is receiving data from Grundfos GO via infrared communication.

## Indicator lights and signal relays

The pump has two outputs for potential-free signals via two internal relays.

You can set the signal outputs to "Operation", "Pump running", "Ready", "Alarm" and "Warning".

The functions of the two signal relays appear from the table below:

Description	Grundfos Eye	Contact position for signal relays when activated					"Operating mode"
		"Operation"	"Pump running"	"Ready"	"Alarm"	"Warning"	
The power is off.	 Off						-
The pump runs in "Normal" mode.	 Green, rotating						"Normal", "Min." or "Max."
The pump runs in "Manual" mode.	 Green, rotating						"Manual"
The pump is in operating mode "Stop".	 Green, steady						"Stop"
Warning, but the pump runs.	 Yellow, rotating						"Normal", "Min." or "Max."
Warning, but the pump runs in "Manual" mode.	 Yellow, rotating						"Manual"
Warning, but the pump was stopped via "Stop" command.	 Yellow, steady						"Stop"
Alarm, but the pump runs.	 Red, rotating						"Normal", "Min." or "Max."
Alarm, but the pump runs in "Manual" mode.	 Red, rotating						"Manual"
The pump has stopped due to an alarm.	 Red, flashing						"Stop"

The functions of the two indicator lights and the signal relay are as shown in the following table:

Indicator lights		Signal relay activated during:				Description
Fault red	Operation green	"Fault"/"Alarm", "Warning" and "Relubricate"	"Operating"	"Ready"	"Pump running"	
Off	Off					The power supply has been switched off.
Off	Permanently on					The pump runs.
Off	Flashing					The pump has been set to stop.
Permanently on	Off					The pump has stopped because of a "Fault" or "Alarm". Or the pump runs with a "Warning" or "Relubricate" indication. If the pump was stopped, restarting will be attempted. It may be necessary to restart the pump by resetting the "Fault" indication.
Permanently on	Permanently on					The pump runs, but it has or has had a "Fault" or "Alarm" allowing the pump to continue operation. Or the pump runs with a "Warning" or "Relubricate" indication. If the cause is "Sensor signal outside signal range", the pump continues to run according to the maximum curve, and you cannot reset the fault indication until the signal is inside the signal range. If the cause is "Setpoint signal outside signal range", the pump continues to run according to the minimum curve, and you cannot reset the fault indication until the signal is inside the signal range.
Permanently on	Flashing					The pump has been set to stop, but it has been stopped because of a "Fault".

### Resetting of fault indication

You can reset a fault indication in one of the following ways:

- Briefly press or on the pump. This will not change the setting of the pump. A fault indication cannot be reset by means of or if the buttons have been locked.
- Switch off the power supply until the indicator lights are off.
- Switch the external start-stop input off and then on again.
- Use Grundfos GO.

## 9. Factory settings of E-pumps

- Function is enabled.
- ? Function is disabled.
- Function is not available.

Settings	TPE3, TPE3 D	TPE2, TPE2 D	Comments	Function description
"Setpoint"	Auto	67 %		Page 35
"Operating mode"	Normal	Normal		Page 36
"Control mode"	AutoAdapt	Constant curve		Page 36
"Date and time"	•	•		Page 58
"FLOW <sub>LIMIT</sub> "	○	-		Page 43
"Automatic night setback"	○	-		Page 44
"Temperature influence"	○	-		Page 54
"Buttons on product"	•	•		
"Controller"				
"Kp"	1.0	0.5		Page 50
"Ti"	8.0	0.5		
"Operating range"				
"Min."	25 %	25 %		Page 51
"Max."	100 %	100 %		
"Ramps"	○	○		Page 56
"Pump number"	1	1		Page 58
"Radio communication"	•	•		Page 58
"Sensor type"	-	-		Page 44
"Analog input 1"	○	○		
"Analog input 2"	○	○		Page 44
"Analog input 3"	○	○		
"Built-in Grundfos sensor"	•	-		Page 45
"Pt100/1000 input 1"	○	○		Page 46
"Pt100/1000 input 2"	○	○		
"Digital input 1"	○	○		Page 46
"Digital input 2"	○	○		
"Digital in/output 3"	○	○		Page 47
"Digital in/output 4"	○	○		
"Pulse flowmeter"	○	○		Page 56
"Predefined setpoint"	○	○		Page 54
"Analog output" <sup>1)</sup>	○	○		Page 49
"External setpoint funct."	○	○		Page 52
"Signal relay 1"	○	○		Page 47
"Signal relay 2"	○	○		
"Limit 1 exceeded"	○	○		Page 55
"Limit 2 exceeded"	○	○		
"Standstill heating"	○	○		Page 57
"Motor bearing monitoring"	○	○		Page 57
"Pump name"	Grundfos	Grundfos		Page 60
"Connect code"	-	-		Page 60
"Unit configuration"	SI units	SI units		Page 58

Multipump factory setting for twin-pumps: Alternating operation on time.

## 10. Communication

Communication with TPE2, TPE2 D, TPE3, TPE3 D, TPE, TPED pumps is possible via a central building management system, remote control, Grundfos GO, or control panel.

### Central building management system

The operator can communicate with a TPE2, TPE2 D, TPE3, TPE3 D, TPE pump at a distance.

Communication can take place via a central building management system allowing the operator to monitor and change control modes and setpoint settings. See “CIM communication interface modules” on page 111.

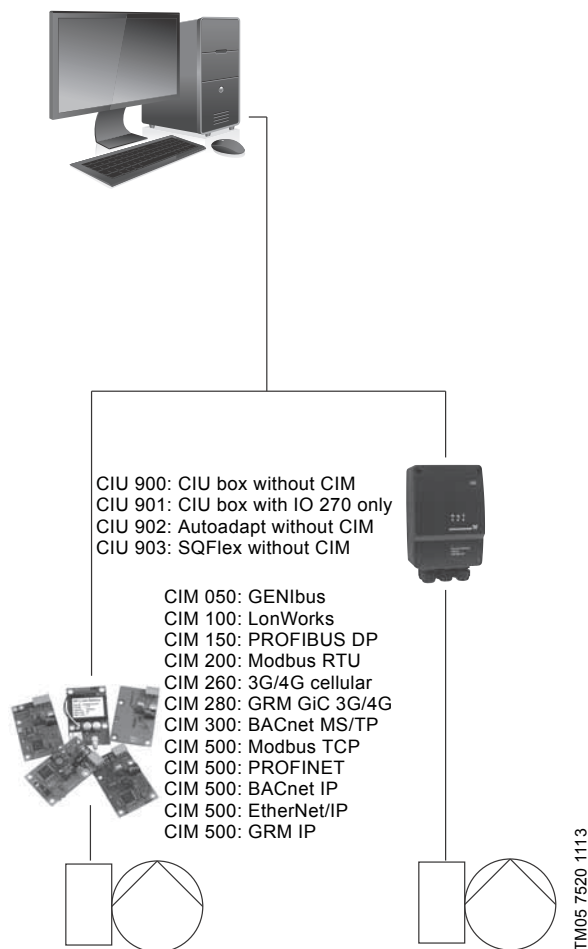


Fig. 54 Structure of a central building management system

### Remote control

The operator can monitor and change control modes and settings of the pump with Grundfos GO. See [Grundfos GO](#) on page 31.

# 11. Speed regulation

## Affinity equations

Normally, the pumps are used in applications characterised by a variable flow rate. Consequently, you cannot select a pump that is constantly operating at its optimum efficiency.

In order to achieve optimum operating economy, the duty point must be close to the optimum efficiency, eta, for most operating hours.

Between the minimum and maximum performance curves, the pumps have an infinite number of performance curves each representing a specific speed. Therefore, you may not be able to select a duty point close to the maximum curve.

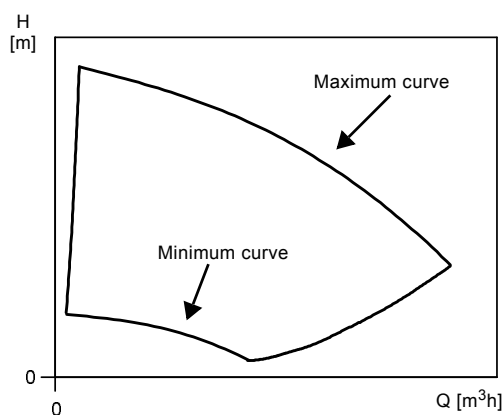


Fig. 55 Minimum and maximum performance curves

In situations where you can select a duty point close to the maximum curve, use the affinity equations below. The head, H, the flow rate, Q and the input power, P, are the appropriate variables you need for calculating the motor speed, n.

**Note:** The approximated formulas apply on condition that the system characteristic remains unchanged for the rated motor speed and the current motor speed, and that it is based on the following formula: H is equal to  $k \times Q^2$  where k is a constant.

The power equation implies that the pump efficiency is unchanged at the two speeds. In practice, this is not quite correct.

Finally, it is worth noting that the efficiencies of the frequency converter and the motor must also be taken into account if you want a precise calculation of the power saving resulting from a reduction of the pump speed.

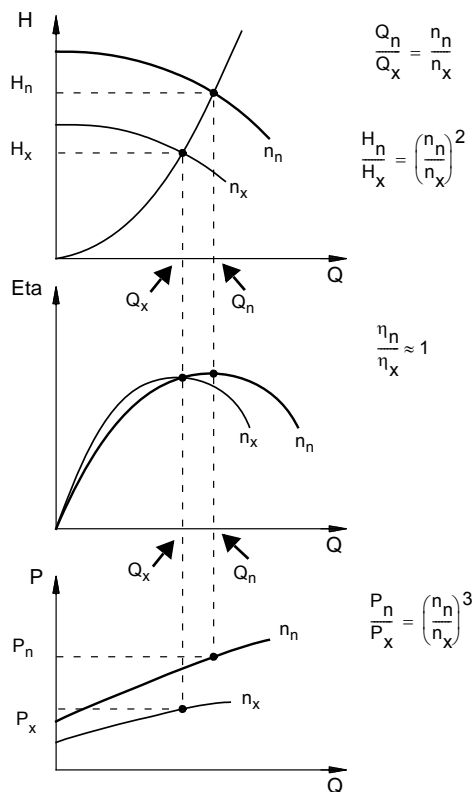


Fig. 56 Affinity equations

### Legend

- $H_n$  Rated head in metres
- $H_x$  Current head in metres
- $Q_n$  Rated flow rate in  $m^3/h$
- $Q_x$  Current flow rate in  $m^3/h$
- $n_n$  Rated motor speed in  $min^{-1}$
- $n_x$  Current motor speed in  $min^{-1}$
- $\eta_n$  Rated efficiency in %
- $\eta_x$  Current efficiency in %
- $P_n$  Rated power in kW
- $P_x$  Current power in kW

### Grundfos Product Center

Grundfos Product Center can help you select the right pump according to your requirements. See page 280.

TM01 4916 4803

TM00 8720 3496





## 12. Control of pumps in parallel

In some applications, parallel pump operation is required for one or more of the following reasons:

- One pump cannot achieve the required performance, flow rate.
- Standby performance is required to ensure reliability of supply.
- Overall efficiency needs to be improved in case of big variations in the flow demand.

The table below lists the different possibilities of controlling pumps connected in parallel.

Parallel-operation control possibilities	TPE2	TPE2 D	TPE3	TPE3 D
Built-in alternation/standby function	•	•	•	•
Built-in parallel operation function	•	•	•	•
<b>Control MPC</b> 	•			
<b>Control MPC Series 2000</b> 			•	

- Available.

### Pumps connected to Control MPC

You can connect TPE2 pumps directly to Grundfos Control MPC.

Control MPC incorporates a CU 352 control unit that can control up to six pumps.

By means of an external sensor, Control MPC can ensure optimum adaptation of the performance to the demand by closed-loop control of these parameters:

- proportional differential pressure
- constant differential pressure
- differential pressure (remote)
- flow rate
- temperature.

CU 352 incorporates features such as those below:

#### Startup wizard

Correct installation and commissioning is a prerequisite for attaining optimum performance of the system and trouble-free operation year in and year out. During commissioning of the system, a startup wizard is shown on the display of CU 352. The wizard guides the operator through the various steps via a series of dialogue boxes to ensure that all settings are done in the correct sequence.

#### Application-optimized software

CU 352 incorporates application-optimized software which helps you set your system to the application in question.

Furthermore, navigating through the menus of the control unit is done in a user-friendly way. You do not need any training to be able to set and monitor the system.

#### Ethernet connection

CU 352 incorporates an ethernet connection which makes it possible to get full and unlimited access to the setting and monitoring of the system via a remote PC.

#### Service port, GENI TTL

The service port of CU 352 enables easy access to updating software and data logging in service situations.

#### External communication

Control MPC enables communication with other fieldbus protocols. In order to communicate with other fieldbus protocols, a GENIbus module and a gateway are required.

Control MPC can communicate with LonWorks, PROFIBUS, Modbus, BACnet, GSM/GPRS or GRM via Grundfos CIU.

## Pumps connected to Control MPC Series 2000

TPE Series 2000, TPE3 pumps are connected directly to Grundfos Control MPC Series 2000 via GENibus.

Control MPC Series 2000 incorporates a CU 352 control unit that can control up to six pumps.

All pumps must be of the same type and size.

Control MPC Series 2000 is used for controlling circulator pumps in heating and air-conditioning applications.

Control MPC Series 2000 ensures optimal adaptation of the performance to the demand by closed-loop control of these parameters:

- proportional differential pressure
- constant differential pressure.

By means of an external sensor Control MPC Series 2000 can also ensure optimum adaptation of the performance to the demand by closed-loop control of these parameters:

- differential pressure (remote)
- flow rate
- temperature.

**Note:** For further information about Control MPC and Control MPC Series 2000, see the data booklet "Control MPC". The data booklet is available online in Grundfos Product Center. See page [280](#).

## 13. Motor data

### Motors

The motors are totally enclosed, fan-cooled (TEFC) motors with main dimensions to IEC and NEMA standards. Electrical tolerances to IEC 34.

#### Mounting designation

Pump type	Mounting designation - NEMA
TPE (D) 2/3	56C
Relative humidity:	Maximum 95 %
Enclosure class:	IP55
Insulation class:	F (IEC 85)
Ambient temperature:	Maximum 140 °F (60 °C), ML motors Maximum 122 °F (50 °C), 2 and 4-pole MLE Maximum 104 °F (40 °C), other motors

If the pump is installed in humid locations, open the lowest drain hole in the motor. This reduces the motor enclosure class to IP44.

#### High-efficiency motors

TPE2, TPE2 D, TPE3, TPE3 D pumps are fitted with Grundfos permanent-magnet MLE motors that have motor efficiency class IE5 according to IEC 60034-30-2.

### Electrical data, speed-controlled motors

#### 1 x 240 V, TPE2, TPE2 D, TPE3, TPE3 D pumps

Pump type	Motor [hp (kW)]	I <sub>1/1</sub> [A]
TPE2, TPE2 D, TPE3, TPE3 D 40-80	0.3 (0.25)	1.56
TPE2, TPE2 D, TPE3, TPE3 D 40-120	0.5 (0.37)	2.17
TPE2, TPE2 D, TPE3, TPE3 D 40-150	0.75 (0.55)	3.04
TPE2, TPE2 D, TPE3, TPE3 D 40-180	1 (0.75)	4.17
TPE2, TPE2 D, TPE3, TPE3 D 40-200	1.5 (1.1)	5.97
TPE2, TPE2 D, TPE3, TPE3 D 40-240	2 (1.5)	8.00
TPE2, TPE2 D, TPE3, TPE3 D 50-60	0.5 (0.37)	2.17
TPE2, TPE2 D, TPE3, TPE3 D 50-80	0.5 (0.37)	2.17
TPE2, TPE2 D, TPE3, TPE3 D 50-120	0.75 (0.55)	3.04
TPE2, TPE2 D, TPE3, TPE3 D 50-150	1 (0.75)	4.1
TPE2, TPE2 D, TPE3, TPE3 D 50-180	1.5 (1.1)	5.97
TPE2, TPE2 D, TPE3, TPE3 D 50-200	2 (1.5)	8.00
TPE2, TPE2 D, TPE3, TPE3 D 50-240	2 (1.5)	8.00
TPE2, TPE2 D, TPE3, TPE3 D 65-60	0.5 (0.37)	2.17
TPE2, TPE2 D, TPE3, TPE3 D 65-80	0.75 (0.55)	3.04
TPE2, TPE2 D, TPE3, TPE3 D 65-120	1 (0.75)	4.10
TPE2, TPE2 D, TPE3, TPE3 D 65-150	1.5 (1.1)	5.97
TPE2, TPE2 D, TPE3, TPE3 D 65-180	2 (1.5)	8.00
TPE2, TPE2 D, TPE3, TPE3 D 80-40	0.3 (0.25)	1.46
TPE2, TPE2 D, TPE3, TPE3 D 80-120	1.5 (1.1)	5.88
TPE2, TPE2 D, TPE3, TPE3 D 80-150	2 (1.5)	7.97
TPE2, TPE2 D, TPE3, TPE3 D 100-40	0.3 (0.25)	1.46
TPE2, TPE2 D, TPE3, TPE3 D 100-120	1.5 (1.1)	5.88
TPE2, TPE2 D, TPE3, TPE3 D 100-150	2 (1.5)	7.97


#### 3 x 460 V, TPE2, TPE2 D, TPE3, TPE3 D pumps

Pump type	Motor [hp (kW)]	I <sub>1/1</sub> [A]
TPE2, TPE2 D, TPE3, TPE3 D 40-80	0.3 (0.25)	0.88
TPE2, TPE2 D, TPE3, TPE3 D 40-120	0.5 (0.37)	1.09
TPE2, TPE2 D, TPE3, TPE3 D 40-150	0.75 (0.55)	1.34
TPE2, TPE2 D, TPE3, TPE3 D 40-180	1 (0.75)	1.68
TPE2, TPE2 D, TPE3, TPE3 D 40-200	1.5 (1.1)	2.26
TPE2, TPE2 D, TPE3, TPE3 D 40-240	2 (1.5)	2.96
TPE2, TPE2 D, TPE3, TPE3 D 50-60	0.5 (0.37)	1.04
TPE2, TPE2 D, TPE3, TPE3 D 50-80	0.5 (0.37)	1.04
TPE2, TPE2 D, TPE3, TPE3 D 50-120	0.75 (0.55)	1.34
TPE2, TPE2 D, TPE3, TPE3 D 50-150	1 (0.75)	1.68
TPE2, TPE2 D, TPE3, TPE3 D 50-180	1.5 (1.1)	2.26
TPE2, TPE2 D, TPE3, TPE3 D 50-200	2 (1.5)	2.96
TPE2, TPE2 D, TPE3, TPE3 D 50-240	3 (2.2)	4.22
TPE2, TPE2 D, TPE3, TPE3 D 65-60	0.5 (0.37)	1.04
TPE2, TPE2 D, TPE3, TPE3 D 65-80	0.75 (0.55)	1.34
TPE2, TPE2 D, TPE3, TPE3 D 65-120	1 (0.75)	1.68
TPE2, TPE2 D, TPE3, TPE3 D 65-150	1.5 (1.1)	2.15
TPE2, TPE2 D, TPE3, TPE3 D 65-180	2 (1.5)	2.96
TPE2, TPE2 D, TPE3, TPE3 D 65-200	3 (2.2)	4.22
TPE2, TPE2 D, TPE3, TPE3 D 80-40	0.3 (0.25)	0.82
TPE2, TPE2 D, TPE3, TPE3 D 80-120	1.5 (1.1)	2.15
TPE2, TPE2 D, TPE3, TPE3 D 80-150	2 (1.5)	2.82
TPE2, TPE2 D, TPE3, TPE3 D 80-180	3 (2.2)	4.03
TPE2, TPE2 D, TPE3, TPE3 D 100-40	0.3 (0.25)	0.82
TPE2, TPE2 D, TPE3, TPE3 D 100-120	1.5 (1.1)	2.15
TPE2, TPE2 D, TPE3, TPE3 D 100-150	2 (1.5)	2.82
TPE2, TPE2 D, TPE3, TPE3 D 100-180	3 (2.2)	4.03

# 14. Installation

## Mechanical installation


You can install TP pumps with motors smaller than 15 hp (11 kW) in horizontal or vertical pipes.

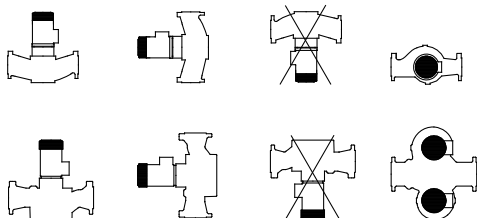

**Fig. 57** Installation of motor sizes smaller than 15 hp (11 kW)


You can suspend pumps with motors smaller than 15 hp (11 kW) directly in the pipes, provided the pipes can support the pump. If not, install the pump on a mounting bracket or base plate.

In installations where the pump is suspended directly in the pipes, the pump can support the pipe length L on both sides of the pump. L is less than 3 x DN. See fig. 58. In installations where the pump is suspended directly in the pipes, the pump must be lifted and held in correct position by means of ropes or similar until both pump flanges are completely fastened to the pipe flanges.

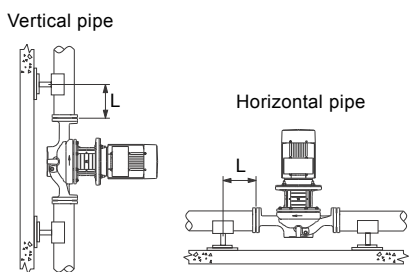


**Fig. 58** Pump suspended directly in the pipes

When installing a twin-head pump in a horizontal pipe and with horizontal shaft, fit the upper pump housing with an automatic vent.

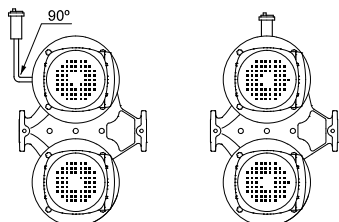


**Fig. 59** Twin-head pumps with automatic vent

Twin-head pump housings have two Rp 1/4" tappings for mounting automatic vents.

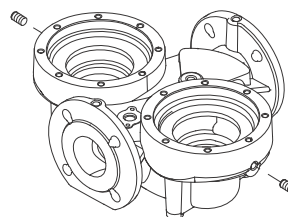

**Fig. 60** Tappings for mounting automatic vents in TP Series 200, TPE2 D, TPE3 D

If the liquid temperature falls below the ambient temperature or if the pump is installed outside, condensation may form in the motor during inactivity. In this case, the drain hole in the motor flange must be open and point downwards. See fig. 61.

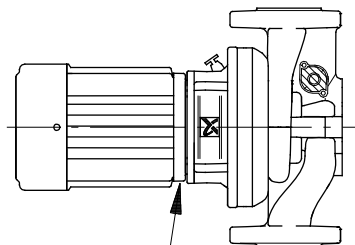

**Fig. 61** Drain hole

If twin-head pumps are used for pumping liquids with a temperature below 32 °F (0 °C), condensed water may freeze and cause the coupling to get stuck. You can remedy the problem by installing heating elements. Whenever possible, install pumps with motors smaller than 15 hp (11 kW) with horizontal motor shaft. See fig. 59.

### Cooling

To ensure sufficient cooling of motor and electronics, observe the following:

- Place the pump in such a way that sufficient cooling is ensured.
- Keep the motor cooling fins, holes in fan cover and fan blades clean.
- Make sure that the frequency for the motor is at least 6 Hz, 12 % of maximum speed. The shaft seal may generate noise at speeds below 25 % of maximum speed.

TM00 3734 0897

TM07 3140 4718

TM06 3518 0615

TM00 9831 3202

TM03 8127 0507

### Condensation cover

When installing the pumps outdoors, provide the motor with a suitable cover to protect the pump and motor against the direct effects of the elements.

When mounting the condensation cover on top of the motor, make sure to leave enough space for the air to cool the motor.

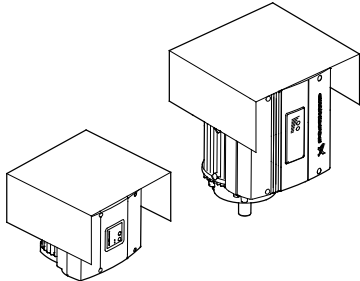


Fig. 62 Motors with condensation cover

### Elimination of noise and vibrations

In order to achieve optimum operation and minimum noise and vibration, consider vibration dampening of the pump. Generally, always consider this for pumps with motors of 15 hp (11 kW) and higher. Noise and vibration are generated by the revolutions of the motor and the pump, and by the flow in pipes and fittings. The effect on the environment is subjective and depends on correct installation and the state of the remaining system.

Elimination of noise and vibrations is best achieved by means of a concrete foundation, vibration dampers and expansion joints.

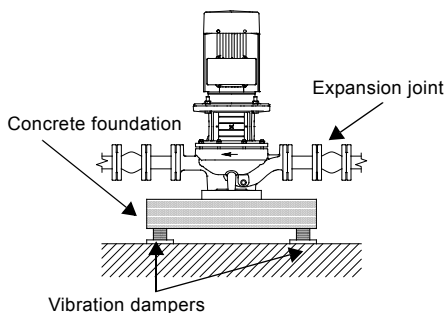


Fig. 63 Foundation of TP pump

### Concrete foundation

Install the pump on a plane and rigid concrete foundation. This is the optimum solution for vibration dampening. As a rule of thumb, the weight of a concrete foundation must be 1.5 times the pump weight.

### Vibration dampers

To prevent the transmission of vibrations to buildings, we recommend that you isolate the pump foundation from building parts by means of vibration dampers.

The selection of the right vibration damper requires the following data:

- Forces transmitted through the damper.
- Motor speed considering speed control, if any.
- Required dampening in %. The suggested value is 70 %.

The right damper varies from installation to installation, and a wrong damper may increase the vibration level. Vibration dampers must therefore be sized by the supplier.

If you install the pump on a foundation with vibration dampers, always fit expansion joints on the pump flanges. This is important to prevent the pump from "hanging" in the flanges.

### Expansion joints

Expansion joints do the following:

- absorb expansions or contractions in the pipes caused by changing liquid temperature.
- reduce mechanical strains in connection with pressure surges in the pipes.
- isolate mechanical structure-borne noise in the pipes. Only rubber bellows expansion joints.

**Note:** Do not install expansion joints to compensate for inaccuracies in the pipes such as centre displacement of flanges.

Fit expansion joints at a distance of minimum 1 to 1.5 times the nominal flange diameter away from the pump on the inlet as well as on the outlet side. This prevents the development of turbulence in the expansion joints, resulting in better suction conditions and a minimum pressure loss on the outlet side. At high water velocities, greater than 5 m/s, we recommend that you install larger expansion joints corresponding to the pipes. See fig. 64.


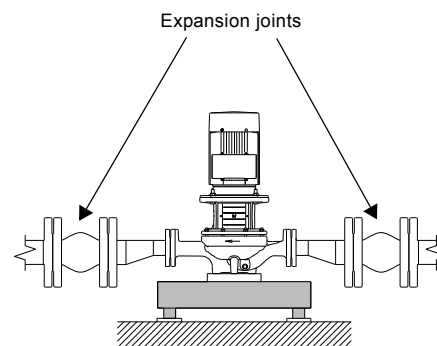


Fig. 64 TP pump installed with larger expansion joints

The illustration below shows examples of rubber bellows expansion joints with or without limit rods.

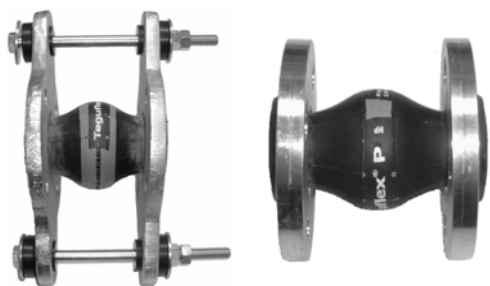


TM02 4979 1902 - TM02 4981 1902

**Fig. 65** Examples of rubber bellows expansion joints

You can use expansion joints with limit rods to reduce the effects of the expansion or contraction forces on the pipes. We always recommend expansion joints with limit rods for flanges larger than DN 100.

Anchor the pipes in such a way that they do not stress the expansion joints and the pump. Follow the supplier's instructions and pass them on to advisers or pipe installers.

The illustration below shows an example of a metal bellows expansion joint with limit rods.

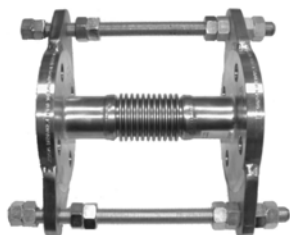

TM02 4980 1902

**Fig. 66** Example of metal expansion joint


Due to the risk of rupture of the rubber bellows, metal bellows expansion joints may be preferred at temperatures above 100 °C combined with high pressure.

**Terminal box positions**

**TP single-head pumps**

As standard, the terminal boxes of TP and TPE, TPE2, TPE3 pumps are mounted in 9 o'clock position.


The possible terminal box positions are shown below.

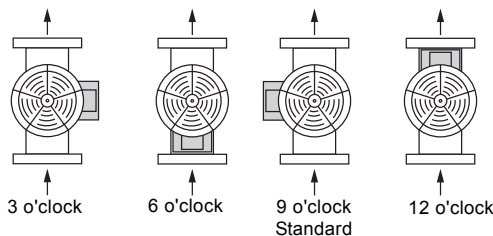

TM03 0565 2005

**Fig. 67** Possible terminal box positions

On TPE2 D, TPE3 D pumps, the terminal box is installed in a position different from 12 o'clock.

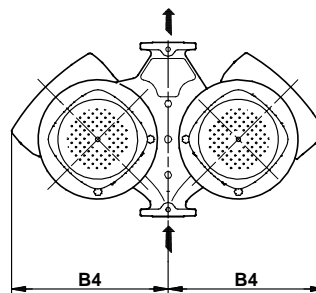

TM02 8630 0604

**Fig. 68** Terminal box positions of TPED pumps

**Electrical installation**

**Standard motors**

The operating voltage and frequency are marked on the pump nameplate. Make sure that the motor is suitable for the power supply on which it will be used. Single-phase standard motors incorporate a thermal switch and require no additional motor protection. Three-phase motors must be connected to a motor starter.

## 15. Motors with built-in VFD

### Single-phase supply voltage

1 x 240 V - 10 %/+ 10 %, 50/60 Hz, PE.

#### Recommended fuse size

Motor size [hp (kW)]	Min. [A]	Max. [A]
0.33 - 1 (0.25 - 0.75)	6	10
1.5 - 2 (1.1 - 1.5)	10	16

You can use standard as well as quick-blow or slow-blow fuses.

#### Leakage current

Earth leakage current less than 3.5 mA, AC.

Earth leakage current less than 10 mA, DC.

The leakage currents are measured in accordance with EN 61800-5-1:2007.

### Three-phase supply voltage

3 x 460 V - 10 %/+ 10 %, 50/60 Hz, PE.

#### Recommended fuse size

Motor size [hp (kW)]	Min. [A]	Max. [A]
0.33 - 1.5 (0.25 - 1.1)	6	6
2 (1.5)	6	10
3 (2.2)	6	16

You can use standard as well as quick-blow or slow-blow fuses.

#### Leakage current, AC

Speed [min <sup>-1</sup> ]	Power [hp (kW)]	Mains voltage [V]	Leakage current [mA]
1400-2000 1450-2200	0.33 - 2 (0.25 - 1.5)	≤ 400	< 3.5
		> 400	< 5
	3 - (2.2)	≤ 400	< 3.5
		> 400	< 3.5
2900-4000	0.33 - 3 (0.25 - 2.2)	≤ 400	< 3.5
		> 400	< 5
4000-5900	0.3 - 3 (0.25 - 2.2)	≤ 400	< 3.5
		> 400	< 5

The leakage currents are measured without any load on the shaft and in accordance with EN 61800-5-1:2007.

### Inputs and outputs

#### Earth reference, GND

All voltages refer to GND.

All currents return to GND.

#### Absolute maximum voltage and current limits

Exceeding the following electrical limits may result in severely reduced operating reliability and motor life:

Relay 1:

Maximum contact load: 250 VAC, 2 A or 30 VDC, 2 A.

Relay 2:

Maximum contact load: 30 VDC, 2 A.

GENI terminals: -5.5 to 9.0 VDC or less than 25 mADC.

Other input or output terminals: -0.5 to 26 VDC or less than 15 mADC.

#### Digital inputs, DI

Internal pull-up current greater than 10 mA at  $V_i$  equal to 0 VDC.

Internal pull-up to 5 VDC (current less for  $V_i$  greater than 5 VDC).

Low logic level:  $V_i$  less than 1.5 VDC.

High logic level:  $V_i$  greater than 3.0 VDC.

Hysteresis: No.

Screened cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

Maximum cable length: 1640 ft (500 m).

#### Open-collector digital outputs, OC

Current sinking capability: 75 mADC, no current sourcing.

Load types: Resistive or/and inductive.

Low-state output voltage at 75 mADC: Maximum 1.2 VDC.

Low-state output voltage at 10 mADC: Maximum 0.6 VDC.

Overcurrent protection: Yes.

Screened cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

Maximum cable length: 1640 ft (500 m).

#### Analog inputs, AI

Voltage signal ranges:

- 0.5 - 3.5 VDC, AL AU.
- 0-5 VDC, AU.
- 0-10 VDC, AU.

Voltage signal:  $R_i$  greater than 100 k $\Omega$  at 25 °C.

Leak currents may occur at high operating temperatures. Keep the source impedance low.

Current signal ranges:

- 0-20 mADC, AU.
- 4-20 mADC, AL AU.

Current signal: R<sub>i</sub> equal to 292 Ω.

Current overload protection: Yes. Change to voltage signal.

Measurement tolerance: - 0/+ 3 % of full scale (maximum-point coverage).

Screened cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

Maximum cable length: 1640 ft (500 m) (excl. potentiometer).

Potentiometer connected to +5 V, GND, any AI:

Use maximum 10 kΩ.

Maximum cable length: 328 ft (100 m).

**Analog output, AO**

Current sourcing capability only.

Voltage signal:

- Range: 0-10 VDC.
- Minimum load between AO and GND: 1 kΩ.
- Short-circuit protection: Yes.

Current signal:

- Ranges: 0-20 and 4-20 mADC.
- Maximum load between AO and GND: 500 Ω.
- Open-circuit protection: Yes.

Tolerance: - 0/+ 4 % of full scale (maximum-point coverage).

Screened cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

Maximum cable length: 1640 ft (500 m).

**Pt100/1000 inputs, PT**

Temperature range:

- Minimum -22 °F (-30 °C). 88 Ω / 882 Ω.
- Maximum 356 °F (180 °C). 168 Ω / 1685 Ω.

Measurement tolerance: ± 35 °F (1.5 °C).

Measurement resolution: < 33 °F (0.3 °C).

Automatic range detection, Pt100 or Pt1000: Yes.

Sensor fault alarm: Yes.

Screened cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

Use Pt100 for short wires.

Use Pt1000 for long wires.

**LiqTec sensor inputs\***

Use Grundfos LiqTec sensor only.

Screened cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

**Grundfos Digital Sensor input and output, GDS\***

Use Grundfos Digital Sensor only.

\* Only applicable for TPE3, TPE3 D pumps.

**Power supplies**

**+5 V:**

- Output voltage: 5 VDC - 5 %/+ 5 %.
- Maximum current: 50 mADC, sourcing only.
- Overload protection: Yes.

**+24 V:**

- Output voltage: 24 VDC - 5 %/+ 5 %.
- Maximum current: 60 mADC, sourcing only.
- Overload protection: Yes.

**Digital outputs, relays**

Potential-free changeover contacts.

Minimum contact load when in use: 5 VDC, 10 mA.

Screened cable: 0.5 - 2.5 mm<sup>2</sup>, 28-12 AWG.

Maximum cable length: 1640 ft (500 m).

**Bus input**

Grundfos GENIbus protocol, RS-485.

Screened 3-core cable: 0.5 - 1.5 mm<sup>2</sup>, 28-16 AWG.

Maximum cable length: 1640 ft (500 m).

**EMC, electromagnetic compatibility**

Standard used: EN 61800-3.

The table below shows the emission category of the motor.

C1 fulfils the requirements for residential areas.

The impedance of the mains cables between the motor and the point of common coupling (PCC) must be equivalent to the impedance of a 164 ft (50 m) cable with a cross-section of .02 in (0.5 mm).

C3 fulfils the requirements for industrial areas.

**Note:** When the motors are installed in residential areas, supplementary measures may be required as the motors may cause radio interference.

Motor [hp (kW)]	Emission category	
	1450-2000 min <sup>-1</sup>	2900-4000 min <sup>-1</sup> 4000-5900 min <sup>-1</sup>
0.33 (0.25)	C1	C1
0.5 (0.37)	C1	C1
0.75 (0.55)	C1	C1
1 (0.75)	C1	C1
1.5 (1.1)	C1	C1
2 (1.5)	C1	C1
3 (2.2)	C1	C1

\* C1, if equipped with an external Grundfos EMC filter.

Immunity: The motor fulfils the requirements for industrial areas.

Contact Grundfos for further information.



## Enclosure class

Standard: IP55 (IEC 34-5).

Optional: IP66 (IEC 34-5).

## Insulation class

F (IEC 85).

## Ambient temperature

During operation: -4 to 122 °F (-20 to 50 °C).

During storage and transportation: -22 to 140 °F (-30 to 60 °C).

## Standby power consumption

5-10 W.

## Cable entries

Motor [kW]	Number and size of cable entries
	TPE2, TPE2 D, TPE3, TPE3 D
0.33 - 2 (0.25 - 1.5)	4 x M20
3 (2.2)	

## Sound pressure level

### TPE2, TPE2 D, TPE3, TPE3 D

 
Pump size	Sound pressure level ISO 3743 [dB(A)]
TPE2/TPE3 40-80	52
TPE2/TPE3 40-120	59
TPE2/TPE3 40-150	60
TPE2/TPE3 40-180	63
TPE2/TPE3 40-200	65
TPE2/TPE3 40-240	66
TPE2/TPE3 50-60	48
TPE2/TPE3 50-80	56
TPE2/TPE3 50-120	60
TPE2/TPE3 50-150	60
TPE2/TPE3 50-180	63
TPE2/TPE3 50-200	64
TPE2/TPE3 50-240	66
TPE2/TPE3 65-60	44
TPE2/TPE3 65-80	51
TPE2/TPE3 65-120	59
TPE2/TPE3 65-150	62
TPE2/TPE3 65-180	62
TPE2/TPE3 65-200	62
TPE2/TPE3 80-40	43
TPE2/TPE3 80-120	53
TPE2/TPE3 80-150	62
TPE2/TPE3 80-180	64
TPE2/TPE3 100-40	43
TPE2/TPE3 100-120	53
TPE2/TPE3 100-150	62
TPE2/TPE3 100-180	64

## Motor protection

The motor requires no external motor protection. The motor incorporates thermal protection against slow overloading and blocking.

## Additional protection

The residual-current circuit breaker must be marked with the following symbol:



The total leakage current of all the electrical equipment in the installation must be taken into account. You find the leakage current of the motor in [Leakage current](#) and [Leakage current, AC](#), see page 79.

This product can cause a direct current in the protective-earth conductor.

## Overvoltage and undervoltage protection

Overvoltage and undervoltage may occur in case of unstable power supply or a faulty installation. The motor is stopped if the voltage falls outside the permissible voltage range. The motor restarts automatically when the voltage is again within the permissible voltage range. Therefore, no additional protection relay is required.

**Note:** The motor is protected against transients from the power supply according to EN 61800-3. In areas with high lightning intensity, we recommend external lightning protection.

## Overload protection

If the upper load limit is exceeded, the motor automatically compensates for this by reducing the speed and stops if the overload condition persists.

The motor remains stopped for a set period. After this period, the motor automatically attempts to restart. The overload protection prevents damage to the motor. Consequently, no additional motor protection is required.

## Overtemperature protection

The electronic unit has a built-in temperature sensor as an additional protection. When the temperature rises above a certain level, the motor automatically compensates for this by reducing the speed and stops if the temperature keeps rising. The motor remains stopped for a set period. After this period, the motor automatically attempts to restart.

## Protection against phase unbalance

Three-phase motors must be connected to a power supply with a quality corresponding to IEC 60146-1-1, class C, to ensure correct motor operation at phase unbalance. This also ensures long life of the components.

### Maximum number of starts and stops

The number of starts and stops via the power supply must not exceed four times per hour.


When switched on via the power supply, the pump starts after approximately 5 seconds.

If you want a higher number of starts and stops, use the input for external start-stop when starting or stopping the pump.

When you start a pump via an external on/off switch, the pump starts immediately.


### Wiring diagrams

Single-phase supply:

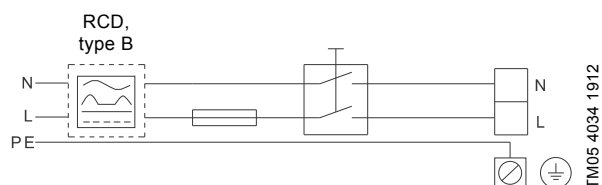

**Fig. 69** Example of a mains-connected motor with main switch, backup fuse and additional protection

Three-phase supply:

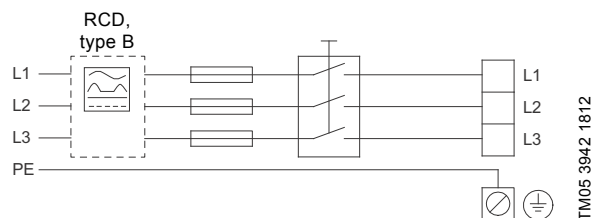

**Fig. 70** Example of a mains-connected motor with main switch, backup fuse and additional protection

### Connection terminals

The descriptions and terminal overviews in this section apply to both single-phase and three-phase motors.

#### Connection terminals, advanced functional module, FM 300

The advanced module has these connections:

- three analog inputs
- one analog output
- two dedicated digital inputs
- two configurable digital inputs or open-collector outputs
- input and output for Grundfos Digital Sensor  
Not applicable for TPE, Series 1000 and TPE2, TPE2 D pumps.  
The factory-fitted differential-pressure sensor for TPE, Series 2000 and TPE3, TPE3 D pumps is connected to this input.
- two Pt100/1000 inputs
- two LiqTec sensor inputs
- two signal relay outputs
- GENibus connection.

See fig. 71.

**Note:** Digital input 1 is factory-set to be start-stop input where open circuit results in stop. A jumper has been factory-fitted between terminals 2 and 6. Remove the jumper if digital input 1 is to be used as external start-stop or any other external function.

- **Inputs and outputs**

All inputs and outputs are internally separated from the mains-conducting parts by reinforced insulation and galvanically separated from other circuits. All control terminals are supplied by protective extra-low voltage, PELV, thus ensuring protection against electric shock.

- **Signal relay outputs**

- Signal relay 1:

LIVE:

You can connect supply voltages up to 250 VAC.

PELV:



The output is galvanically separated from other circuits. Therefore, you can connect the supply voltage or protective extra-low voltage to the output as desired.

- Signal relay 2:

PELV:

The output is galvanically separated from other circuits. Therefore, you can connect the supply voltage or protective extra-low voltage to the output as desired.

- **Mains supply**, terminals N, PE, L or L1, L2, L3, PE.

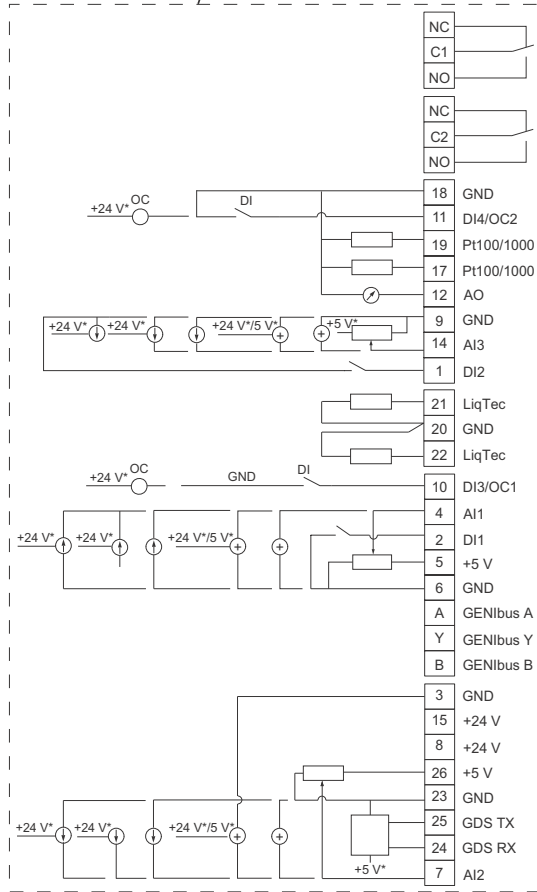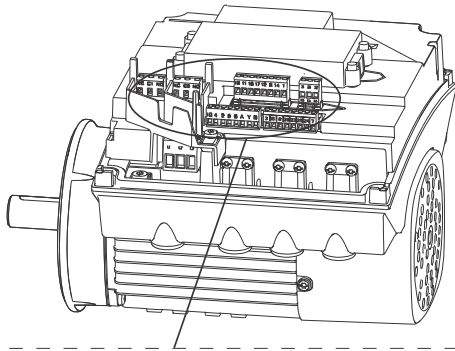

\* If an external supply source is used, there must be a connection to GND.

**Fig. 71** Connection terminals, FM 300, option

Terminal	Type	Function
NC	Normally closed contact	Signal relay 1 LIVE or PELV
C1	Common	
NO	Normally open contact	
NC	Normally closed contact	Signal relay 2 PELV only
C2	Common	
NO	Normally open contact	
18	GND	Earth
11	DI4/OC2	Digital input/output, configurable. Open collector: Maximum 24 V resistive or inductive.
19	Pt100/1000 input 2	Pt100/1000 sensor input
17	Pt100/1000 input 1	Pt100/1000 sensor input
12	AO	Analog output: 0-20 mA / 4-20 mA 0-10 V
9	GND	Earth
14	AI3	Analog input: 0-20 mA / 4-20 mA 0-10 V
1	DI2	Digital input, configurable
21	LiqTec sensor input 1	LiqTec sensor input White conductor
20	GND	Earth Brown and black conductors
22	LiqTec sensor input 2	LiqTec sensor input Blue conductor
10	DI3/OC1	Digital input/output, configurable. Open collector: Max. 24 V resistive or inductive.
4	AI1	Analog input: 0-20 mA / 4-20 mA 0.5 - 3.5 V / 0-5 V / 0-10 V
2	DI1	Digital input, configurable
5	+5 V	Supply to potentiometer and sensor
6	GND	Earth
A	GENIbus, A	GENIbus, A (+)
Y	GENIbus, Y	GENIbus, GND
B	GENIbus, B	GENIbus, B (-)
3	GND	Ground
15	+24 V	Supply
8	+24 V	Supply
26	+5 V	Supply to potentiometer and sensor
23	GND	Ground
25	GDS TX	Grundfos Digital Sensor output
24	GDS RX	Grundfos Digital Sensor input
7	AI2	Analog input: 0-20 mA / 4-20 mA 0.5 - 3.5 V / 0-5 V / 0-10 V

**Identification of functional module**

You can identify the module in one of the following ways:

**Grundfos GO**


Select the "Fitted modules" menu under "Status".

**Pump display**

If the pump is fitted with the advanced control panel, select "Fitted modules" menu under "Status".

**Motor nameplate**

You can identify the fitted module on the motor nameplate. See fig. 72.

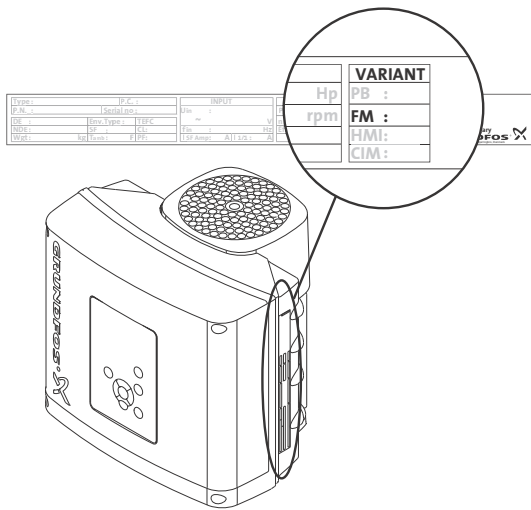

T M06 1889 3314

**Fig. 72** Identification of functional module

Variant	Description
FM 200	Standard functional module
FM 300	Advanced functional module

## 16. Electromagnetic compatibility, EMC

### Proper installation

#### General information

The growing use of electric or electronic controls and electronic equipment including PLCs and computers within all business areas require these products to fulfil the existing standards within electromagnetic compatibility. Make sure that the equipment is mounted properly.

This section deals with these issues.

#### What is electromagnetic compatibility

Electromagnetic compatibility is the ability of an electric or electronic device to function in a given electromagnetic environment without disturbing the surroundings and without being disturbed by other devices in the surroundings. Electromagnetic compatibility is normally split into emission and immunity.

#### Emission

Emission is defined as the electric or electromagnetic noise emitted by a device during operation and which can reduce the function of other devices or disturb various radio communications, including radio or TV.

#### Immunity

Immunity is the ability of a device to function in spite of the presence of electric or electromagnetic noise, such as sparking noise from contactors or high-frequency fields from various transmitters or mobile phones.

#### E-pumps and electromagnetic compatibility

All Grundfos MLE motors are UL approved, under certain conditions, the Conditions of Acceptability (CoA) and FCC compliant indicating that the product is designed to meet the EMC regulations of the FCC and standards of UL 60730-1.

#### EMC and UL



All E-pumps are tested according to IEC 61800-3. All E-pumps are fitted with a radio-interference filter and varistors in the mains-supply input to protect the electronics against voltage peaks and noise present in the mains supply (immunity). At the same time, the filter limits the amount of electrical noise which the E-pump emits to the mains supply network (emission). All remaining inputs included in the electronic unit are also protected against peaks and noise which can damage or disturb the function of the unit.

On top of that, the mechanical and electronic designs are made in such a way that the unit can operate sufficiently under a certain level of radiated electromagnetic disturbance.

The limits which the E-pumps are tested against are listed in standard IEC 61800-3.

#### Where to install E-pumps

You can use all E-pumps with built-in frequency converter motors in both residential areas (first environment) and industrial areas (second environment) within certain limitations.

### **What is meant by the first and the second environment**

The first environment, residential areas, includes establishments directly connected to a low-voltage power supply network which supplies domestic buildings.

The second environment, industrial areas, includes establishments which are not connected to a low-voltage network that supplies domestic buildings.

The level of electromagnetic disturbance can be much higher than in the first environment.

### **Electromagnetic compatibility and proper installation**

With the UL approval, the E-pumps live up to and have been tested to meet specific EMC requirements. This, however, does not mean that E-pumps are immune to all the sources of noise to which they can be exposed in practice. In some installations, the impact may exceed the level to which the product is designed and tested.

Furthermore, unproblematic operation in a noisy environment presupposes that the installation of the E-pump is made properly.

You will find a description of a correct E-pump installation below.


### **Connection of mains supply**

Practice shows that large cable loops are often made inside the terminal box to get some "spare cable". Of course, this can be useful. However, with regard to electromagnetic compatibility, it is a poor solution as these cable loops will function as antennas inside the terminal box.

To avoid problems with electromagnetic compatibility, the mains supply cable and its individual conductors in the terminal box of the E-pump must be as short as possible. If required, you can establish a spare cable outside the E-pump.


# 17. Curve charts

## How to read the curve charts

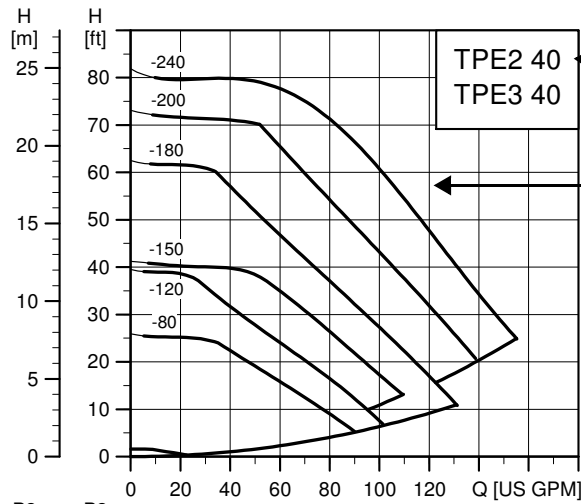


Pump type and frequency.


QH curve for the individual single-head pump. The bold curve indicates the recommended performance range.

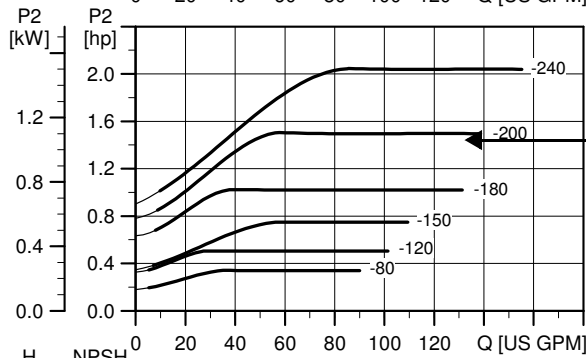

The power curve indicates the pump input power [P2].

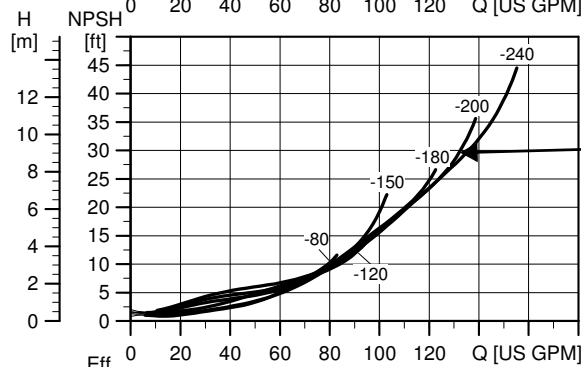

The NPSH (3 %) curve shows the maximum net positive suction head, NPSH, required to ensure that the pump head is not reduced by more than 3 %. The available system pressure at the pump inlet must be according to the NPSH (3 %) curve.

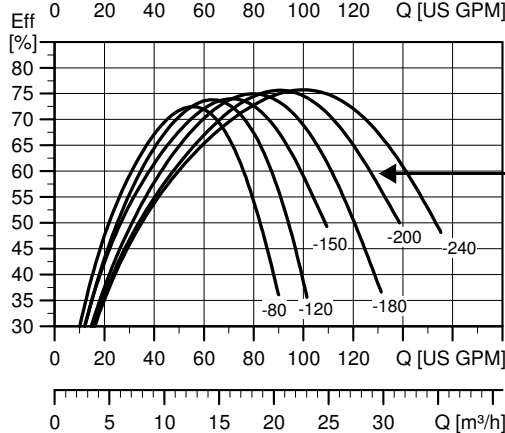

The eta curve shows the pump efficiency.

TM07 3016 4518

## Curve conditions

The guidelines below apply to the curves shown on the following pages:

- Tolerances to ISO 9906:2012 Grade 3B.
- The curves apply to the performance of **single-head three-phase pumps**. For other pump versions, please see the exact curves in Grundfos Product Center. See page 114. For other pump versions, the performance may differ for the following reasons:
  - The valve in twin-head pumps may cause losses.
  - Single-phase motors run at lower speed.

**Note:** Grundfos does not recommend continuous parallel operation of twin-head pumps, except TPE2 D, TPE3 D, due to the increased flow rate in the pump. A too high flow rate results in noisy operation, increased wear of the impeller due to cavitation, etc.
- QH curves of the individual single-head pumps are shown with expected speed of a three-phase mains-operated motor. For further information, see the tables of technical data on the following pages. The performance of the single-phase motor is slightly reduced. Please refer to Grundfos Product Center for the exact single-phase curves. See page 114.
- Measurements have been made with airless water at a temperature of 68 °F (20 °C).
- The curves apply to a kinematic viscosity of  $\nu$  equal to 1 mm<sup>2</sup>/s (1 cSt).
- Due to the risk of overheating, the pump must not run constantly below the minimum flow rate indicated by the bold curves.
- If the pumped liquid density and/or viscosity are higher than those of water, it may be necessary to use a motor with a higher performance.







# 18. Performance curves and technical data

## TPE2, TPE2 D, TPE3, TPE3 D, class 125

### TPE2, TPE3 40

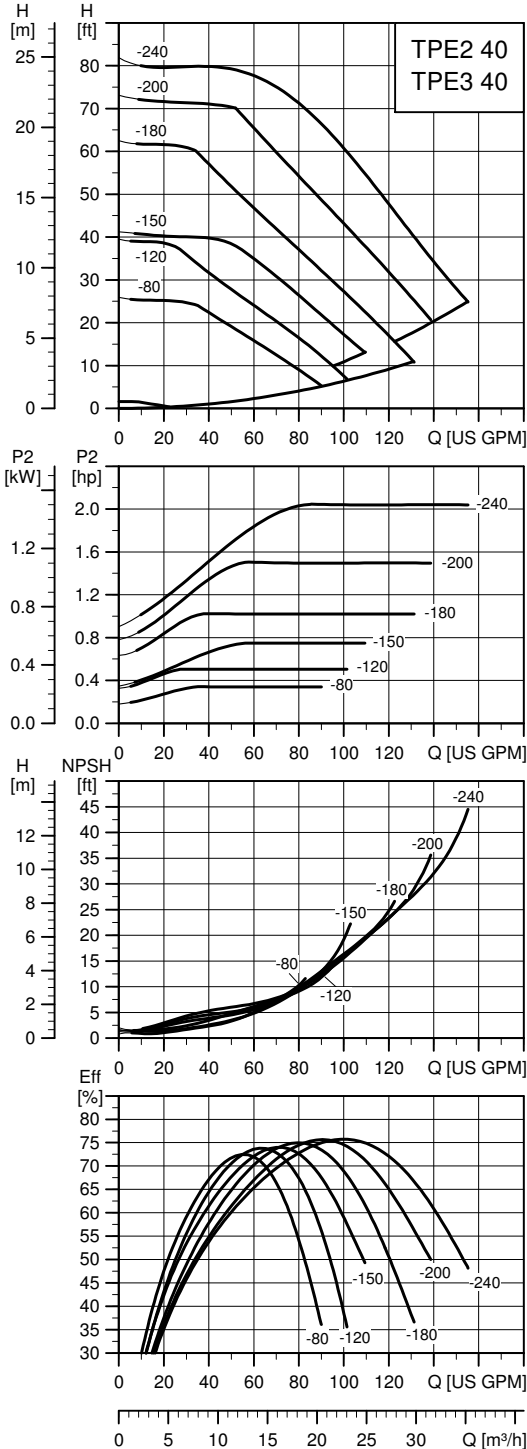

TM07 3016 4518

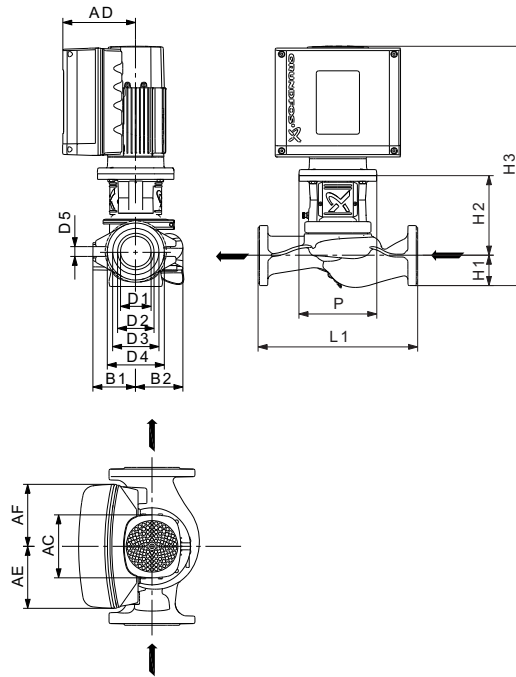

TM07 3099 4918


Dimensions and weights

Pump type	[hp (kW)]	Ph	Dimensions [in (mm)]																Net weight [lbs (kg)]
			AC	AD	AE	AF	B1	B2	D1	D2	D3	D4	D5	H1	H2	H3	L1	P	
TPE2/3 40-80	0.33 (0.25)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	2.83 (72)	3.23 (82)	1.57 (40)	1.93 (49)	2.36 (60)	3.15 (80)	0.5 (13)	2.56 (65)	6.38 (162)	17.4 (442)	9.84 (250)	6.5 (165)	45.4 (20.6)
		3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	2.83 (72)	3.23 (82)	1.57 (40)	1.93 (49)	2.36 (60)	3.15 (80)	0.5 (13)	2.56 (65)	6.38 (162)	18.98 (482)	9.84 (250)	6.5 (165)	48.9 (22.2)
TPE2/3 40-120	0.5 (0.37)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	2.83 (72)	3.23 (82)	1.57 (40)	1.93 (49)	2.36 (60)	3.15 (80)	0.5 (13)	2.56 (65)	6.38 (162)	17.4 (442)	9.84 (250)	6.5 (165)	45.4 (20.6)
		3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	2.83 (72)	3.23 (82)	1.57 (40)	1.93 (49)	2.36 (60)	3.15 (80)	0.5 (13)	2.56 (65)	6.38 (162)	18.98 (482)	9.84 (250)	6.5 (165)	48.9 (22.2)
TPE2/3 40-150	0.75 (0.55)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	2.83 (72)	3.23 (82)	1.57 (40)	1.93 (49)	2.36 (60)	3.15 (80)	0.5 (13)	2.56 (65)	6.38 (162)	17.4 (442)	9.84 (250)	6.5 (165)	45.4 (20.6)
		3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	2.83 (72)	3.23 (82)	1.57 (40)	1.93 (49)	2.36 (60)	3.15 (80)	0.5 (13)	2.56 (65)	6.38 (162)	18.98 (482)	9.84 (250)	6.5 (165)	48.9 (22.2)
TPE2/3 40-180	1 (0.75)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	2.83 (72)	3.23 (82)	1.57 (40)	1.93 (49)	2.36 (60)	3.15 (80)	0.5 (13)	2.56 (65)	6.38 (162)	17.4 (442)	9.84 (250)	6.5 (165)	45.4 (20.6)
		3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	2.83 (72)	3.23 (82)	1.57 (40)	1.93 (49)	2.36 (60)	3.15 (80)	0.5 (13)	2.56 (65)	6.38 (162)	18.98 (482)	9.84 (250)	6.5 (165)	48.9 (22.2)
TPE2/3 40-200	1.5 (1.1)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	2.83 (72)	3.23 (82)	1.57 (40)	1.93 (49)	2.36 (60)	3.15 (80)	0.5 (13)	2.56 (65)	6.38 (162)	17.4 (442)	9.84 (250)	6.5 (165)	45.4 (20.6)
		3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	2.83 (72)	3.23 (82)	1.57 (40)	1.93 (49)	2.36 (60)	3.15 (80)	0.5 (13)	2.56 (65)	6.38 (162)	18.98 (482)	9.84 (250)	6.5 (165)	48.9 (22.2)
TPE2/3 40-240	2 (1.5)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	2.83 (72)	3.23 (82)	1.57 (40)	1.93 (49)	2.36 (60)	3.15 (80)	0.5 (13)	2.56 (65)	6.38 (162)	18.19 (462)	9.84 (250)	6.5 (165)	49.2 (22.3)
		3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	2.83 (72)	3.23 (82)	1.57 (40)	1.93 (49)	2.36 (60)	3.15 (80)	0.5 (13)	2.56 (65)	6.38 (162)	19.76 (502)	9.84 (250)	6.5 (165)	53.1 (24.1)


Technical data

Flow range: [US GPM (m³/hr)]	5.72 (1.3) - 158.4 (36)	Max ambient air temperature: [°F (°C)]	122 (50)
Nominal head range:[ft (m)]	17.7 (5.4) - 61 (18.6)	Gross weight: [lbs (kg)]	64.6 (29.3) - 71.0 (32.2)
Maximum working pressure: [psi (bar)]	232 (16)	Motors:	SaVer 2 (FM300)
Temperature range: [°F (°C)]	BQBE: 32 (0) - +248 (120)	Flanges:	1 1/2"
	BQQE: -13 (-25) - +248 (120)		2 bolt with (2) .5" dia. holes

TPE2, TPE3 50

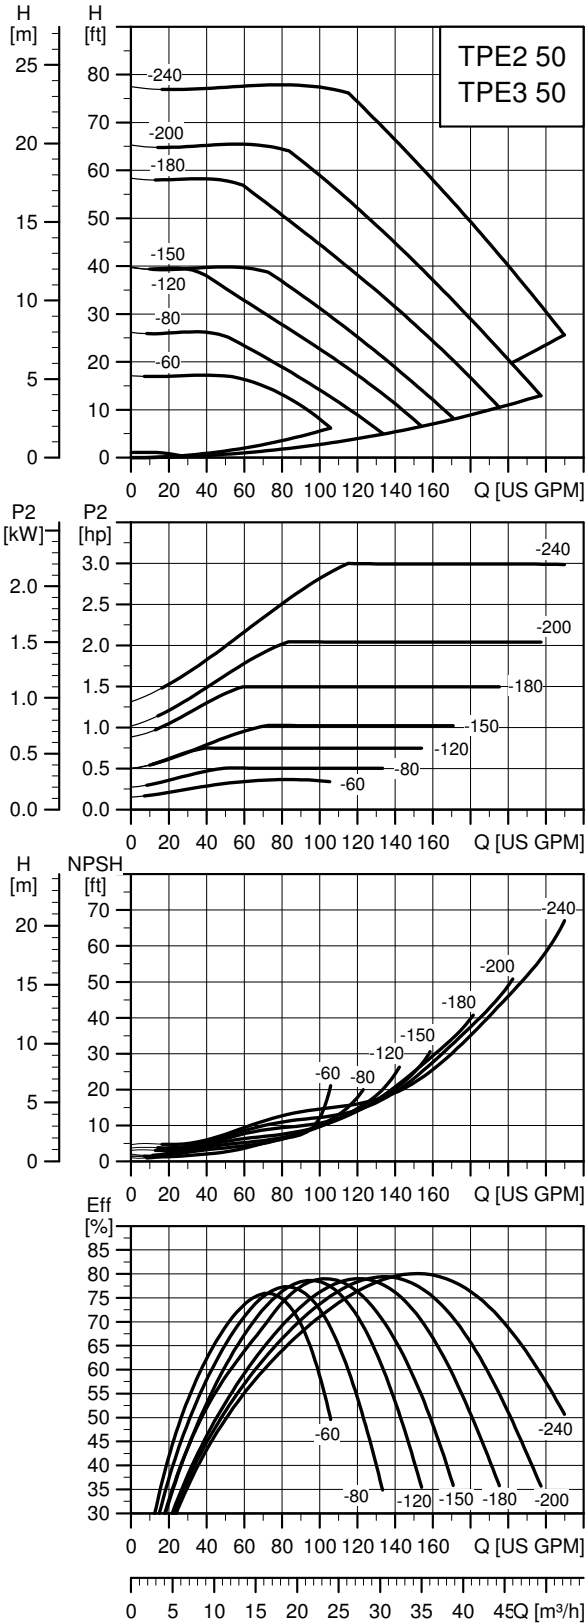

TM07 3017 4518

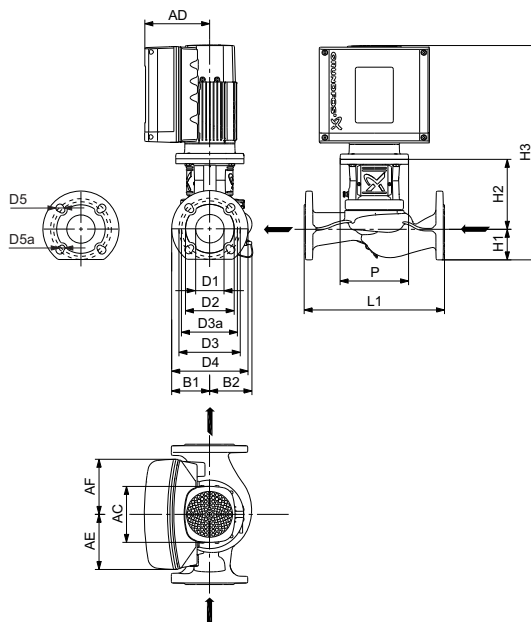

TM07 3100 4918








Dimensions and weights

Pump type	[hp (kW)]	Ph	Dimensions [in (mm)]																	Net weight [lbs (kg)]	
			AC	AD	AE	AF	B1	B2	D1	D2	D3	D3a	D4	D5	D5a	H1	H2	H3	L1		P
TPE2/3 50-60	0.5 (0.37)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	2.95 (75)	3.58 (91)	1.97 (50)	3.9 (99)	4.92 (125)	4.33 (110)	6.5 (165)	0.75 (19)	0.55 (14)	2.83 (72)	6.38 (162)	17.68 (449)	11.02 (280)	6.5 (165)	56.0 (25.4)
		3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	2.95 (75)	3.58 (91)	1.97 (50)	3.9 (99)	4.92 (125)	4.33 (110)	6.5 (165)	0.75 (19)	0.55 (14)	2.83 (72)	6.38 (162)	19.25 (489)	11.02 (280)	6.5 (165)	59.7 (27.1)
TPE2/3 50-80	0.5 (0.37)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	2.95 (75)	3.58 (91)	1.97 (50)	3.9 (99)	4.92 (125)	4.33 (110)	6.5 (165)	0.75 (19)	0.55 (14)	2.83 (72)	6.38 (162)	17.68 (449)	11.02 (280)	6.5 (165)	56.0 (25.4)
		3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	2.95 (75)	3.58 (91)	1.97 (50)	3.9 (99)	4.92 (125)	4.33 (110)	6.5 (165)	0.75 (19)	0.55 (14)	2.83 (72)	6.38 (162)	19.25 (489)	11.02 (280)	6.5 (165)	59.7 (27.1)
TPE2/3 50-120	0.75 (0.55)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	2.95 (75)	3.58 (91)	1.97 (50)	3.9 (99)	4.92 (125)	4.33 (110)	6.5 (165)	0.75 (19)	0.55 (14)	2.83 (72)	6.38 (162)	17.68 (449)	11.02 (280)	6.5 (165)	56.0 (25.4)
		3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	2.95 (75)	3.58 (91)	1.97 (50)	3.9 (99)	4.92 (125)	4.33 (110)	6.5 (165)	0.75 (19)	0.55 (14)	2.83 (72)	6.38 (162)	19.25 (489)	11.02 (280)	6.5 (165)	59.7 (27.1)
TPE2/3 50-150	1 (0.75)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	2.95 (75)	3.58 (91)	1.97 (50)	3.9 (99)	4.92 (125)	4.33 (110)	6.5 (165)	0.75 (19)	0.55 (14)	2.83 (72)	6.38 (162)	17.68 (449)	11.02 (280)	6.5 (165)	56.0 (25.4)
		3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	2.95 (75)	3.58 (91)	1.97 (50)	3.9 (99)	4.92 (125)	4.33 (110)	6.5 (165)	0.75 (19)	0.55 (14)	2.83 (72)	6.38 (162)	19.25 (489)	11.02 (280)	6.5 (165)	59.7 (27.1)
TPE2/3 50-180	1.5 (1.1)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	2.95 (75)	3.58 (91)	1.97 (50)	3.9 (99)	4.92 (125)	4.33 (110)	6.5 (165)	0.75 (19)	0.55 (14)	2.83 (72)	6.38 (162)	17.68 (449)	11.02 (280)	6.5 (165)	56.0 (25.4)
		3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	2.95 (75)	3.58 (91)	1.97 (50)	3.9 (99)	4.92 (125)	4.33 (110)	6.5 (165)	0.75 (19)	0.55 (14)	2.83 (72)	6.38 (162)	19.25 (489)	11.02 (280)	6.5 (165)	59.7 (27.1)
TPE2/3 50-200	2 (1.5)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	2.95 (75)	3.58 (91)	1.97 (50)	3.9 (99)	4.92 (125)	4.33 (110)	6.5 (165)	0.75 (19)	0.55 (14)	2.83 (72)	6.38 (162)	18.46 (469)	11.02 (280)	6.5 (165)	59.7 (27.1)
		3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	2.95 (75)	3.58 (91)	1.97 (50)	3.9 (99)	4.92 (125)	4.33 (110)	6.5 (165)	0.75 (19)	0.55 (14)	2.83 (72)	6.38 (162)	20.04 (509)	11.02 (280)	6.5 (165)	63.9 (29.0)
TPE2/3 50-240	3 (2.2)	3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	2.95 (75)	3.58 (91)	1.97 (50)	3.9 (99)	4.92 (125)	4.33 (110)	6.5 (165)	0.75 (19)	0.55 (14)	2.83 (72)	6.38 (162)	20.04 (509)	11.02 (280)	6.5 (165)	65.7 (29.8)

Technical data

Flow range: [US GPM (m <sup>3</sup> /hr)]	7.0 (1.6) - 233.2 (53)	Max ambient air temperature: [°F (°C)]	122 (50)
Nominal head range:[ft (m)]	12.8 (3.9) - 64.3 (19.6)	Gross weight: [lbs (kg)]	72.5 (32.9) - 82.6 (37.45)
Maximum working pressure: [psi (bar)]	232 (16)	Motors:	SaVer 2 (FM300)
Temperature range: [°F (°C)]	BQBE: 32 (0) - +248 (120) BQQE: -13 (-25) - +248 (120)	Flanges:	2" 4 bolt with (4) .75" dia. holes

  
TPE2, TPE2 D, TPE3, TPE3 D 65

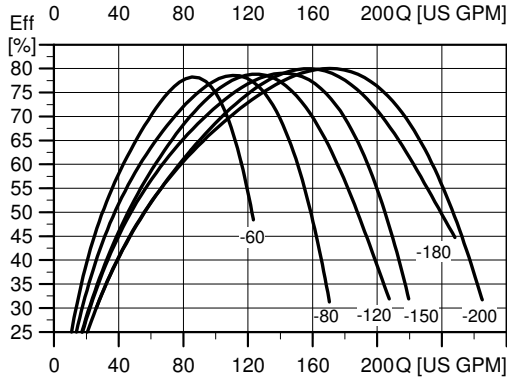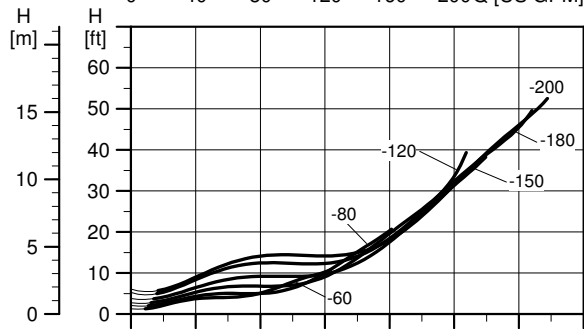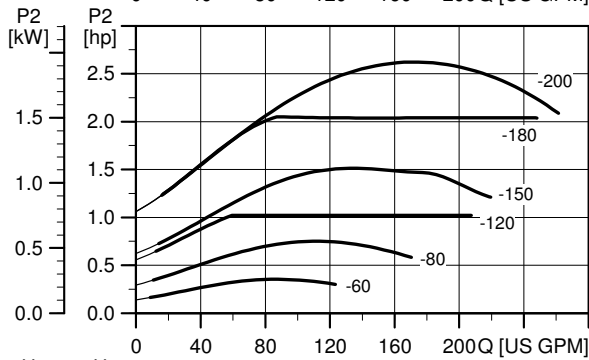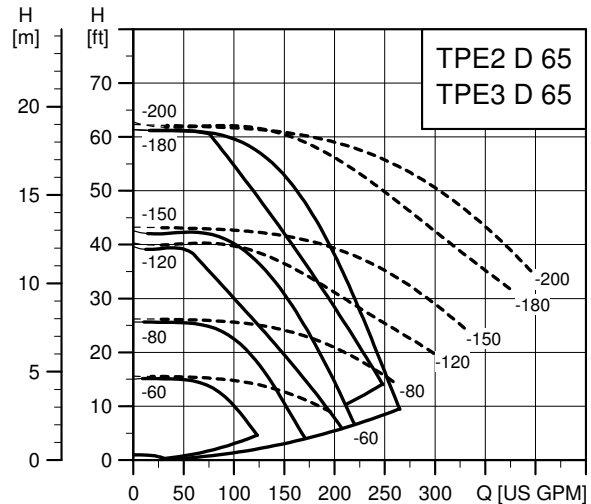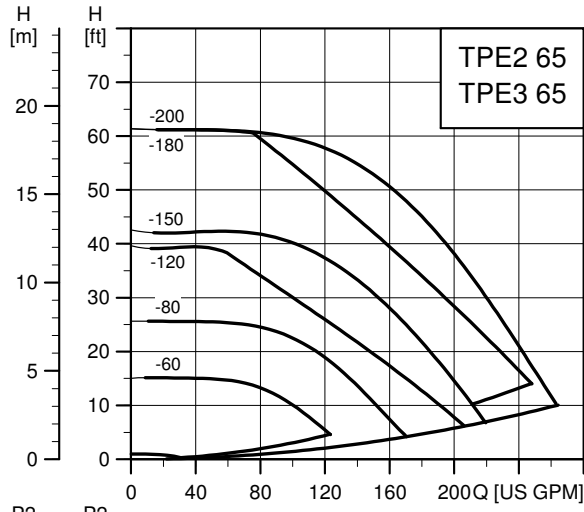

TM07 3019 4518

TM07 3018 4518

Note: The dotted QH curves apply to TPE2 D, TPE3 D in parallel operation.

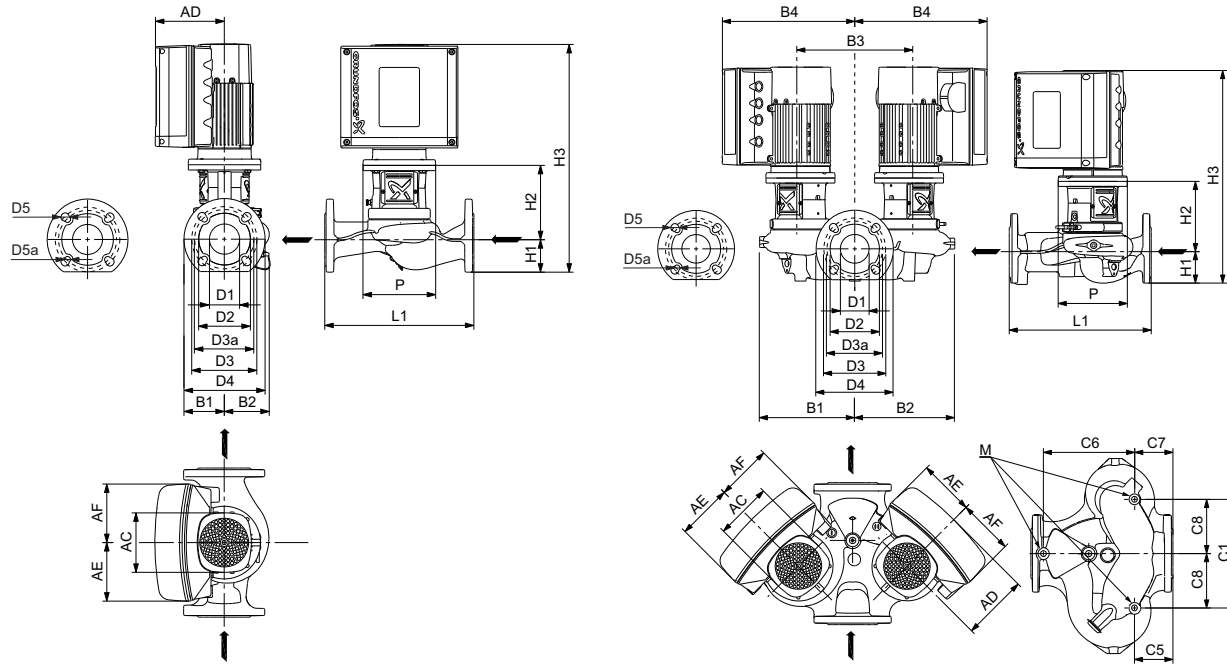

TM07 3100 4918; TM07 3102 4918

Dimensions and weights

Pump type	[hp (kW)]	Dual head Ph	Dimensions [in (mm)]																	Net weight [lbs (kg)]			
			AC	AD	AE	AF	B1	B2	D1	D2	D3	D3a	D4	D5	D5a	H1	H2	H3	L1		P		
TPE 2/3 (D) 65-60	0.5 (0.37)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	3.19 (81)	4.02 (102)	2.56 (65)	4.65 (118)	5.51 (140)	5 (127)	7.28 (185)	0.75 (19)	0.63 (16)	2.91 (74)	6.65 (169)	18.03 (458)	13.4 (340)	6.5 (165)	28.0		
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.19 (81)	4.02 (102)	2.56 (65)	4.65 (118)	5.51 (140)	5 (127)	7.28 (185)	0.75 (19)	0.63 (16)	2.91 (74)	6.65 (169)	19.61 (498)	13.4 (340)	6.5 (165)	29.7	
		D	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	8.98 (228)	9.45 (240)	2.56 (65)	4.69 (119)	5.71 (145)	5.12 (130)	7.28 (185)	0.75 (19)	0.55 (14)	3.07 (78)	6.65 (169)	18.19 (462)	13.4 (340)	6.5 (165)	52.6	
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	8.98 (228)	9.45 (240)	2.56 (65)	4.69 (119)	5.71 (145)	5.12 (130)	7.28 (185)	0.75 (19)	0.55 (14)	3.07 (78)	6.65 (169)	19.76 (502)	13.4 (340)	6.5 (165)	55.9	
		TPE 2/3 (D) 65-80	0.75 (0.55)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	3.19 (81)	4.02 (102)	2.56 (65)	4.65 (118)	5.51 (140)	5 (127)	7.28 (185)	0.75 (19)	0.63 (16)	2.91 (74)	6.65 (169)	18.03 (458)	13.4 (340)	6.5 (165)	28.0
					3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.19 (81)	4.02 (102)	2.56 (65)	4.65 (118)	5.51 (140)	5 (127)	7.28 (185)	0.75 (19)	0.63 (16)	2.91 (74)	6.65 (169)	19.61 (498)	13.4 (340)	6.5 (165)
D	1			4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	8.98 (228)	9.45 (240)	2.56 (65)	4.69 (119)	5.71 (145)	5.12 (130)	7.28 (185)	0.75 (19)	0.55 (14)	3.07 (78)	6.65 (169)	18.19 (462)	13.4 (340)	6.5 (165)	52.6	
	3			4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	8.98 (228)	9.45 (240)	2.56 (65)	4.69 (119)	5.71 (145)	5.12 (130)	7.28 (185)	0.75 (19)	0.55 (14)	3.07 (78)	6.65 (169)	19.76 (502)	13.4 (340)	6.5 (165)	55.9	
TPE 2/3 (D) 65-120	1 (0.75)			1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	3.19 (81)	4.02 (102)	2.56 (65)	4.65 (118)	5.51 (140)	5 (127)	7.28 (185)	0.75 (19)	0.63 (16)	2.91 (74)	6.65 (169)	18.03 (458)	13.4 (340)	6.5 (165)	28.0
					3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.19 (81)	4.02 (102)	2.56 (65)	4.65 (118)	5.51 (140)	5 (127)	7.28 (185)	0.75 (19)	0.63 (16)	2.91 (74)	6.65 (169)	19.61 (498)	13.4 (340)	6.5 (165)
		D	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	8.98 (228)	9.45 (240)	2.56 (65)	4.69 (119)	5.71 (145)	5.12 (130)	7.28 (185)	0.75 (19)	0.55 (14)	3.07 (78)	6.65 (169)	18.19 (462)	13.4 (340)	6.5 (165)	52.6	
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	8.98 (228)	9.45 (240)	2.56 (65)	4.69 (119)	5.71 (145)	5.12 (130)	7.28 (185)	0.75 (19)	0.55 (14)	3.07 (78)	6.65 (169)	19.76 (502)	13.4 (340)	6.5 (165)	55.9	
		TPE 2/3 (D) 65-150	1.5 (1.1)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	3.19 (81)	4.02 (102)	2.56 (65)	4.65 (118)	5.51 (140)	5 (127)	7.28 (185)	0.75 (19)	0.63 (16)	2.91 (74)	6.65 (169)	18.03 (458)	13.4 (340)	6.5 (165)	28.8
					3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.19 (81)	4.02 (102)	2.56 (65)	4.65 (118)	5.51 (140)	5 (127)	7.28 (185)	0.75 (19)	0.63 (16)	2.91 (74)	6.65 (169)	19.61 (498)	13.4 (340)	6.5 (165)
D	1			4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	8.98 (228)	9.45 (240)	2.56 (65)	4.69 (119)	5.71 (145)	5.12 (130)	7.28 (185)	0.75 (19)	0.55 (14)	3.07 (78)	6.65 (169)	18.19 (462)	13.4 (340)	6.5 (165)	54.1	
	3			4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	8.98 (228)	9.45 (240)	2.56 (65)	4.69 (119)	5.71 (145)	5.12 (130)	7.28 (185)	0.75 (19)	0.55 (14)	3.07 (78)	6.65 (169)	19.76 (502)	13.4 (340)	6.5 (165)	57.5	

Pump type	[hp (kW)]	Dual head	Ph	Dimensions [in (mm)]																	Net weight [lbs (kg)]		
				AC	AD	AE	AF	B1	B2	D1	D2	D3	D3a	D4	D5	D5a	H1	H2	H3	L1		P	
TPE 2/3 (D) 65-180	2 (1.5)	D	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	3.19 (81)	4.02 (102)	2.56 (65)	4.65 (118)	5.51 (140)	5 (127)	7.28 (185)	0.75 (19)	0.63 (16)	2.91 (74)	6.65 (169)	18.82 (478)	13.4 (340)	6.5 (165)	29.7	
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.19 (81)	4.02 (102)	2.56 (65)	4.65 (118)	5.51 (140)	5 (127)	7.28 (185)	0.75 (19)	0.63 (16)	2.91 (74)	6.65 (169)	18.82 (478)	20.39 (518)	13.4 (340)	6.5 (165)	31.5
			1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	8.98 (228)	9.45 (240)	2.56 (65)	4.69 (119)	5.71 (145)	5.12 (130)	7.28 (185)	0.75 (19)	0.55 (14)	3.07 (78)	6.65 (169)	18.98 (482)	13.4 (340)	6.5 (165)	56.1	
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	8.98 (228)	9.45 (240)	2.56 (65)	4.69 (119)	5.71 (145)	5.12 (130)	7.28 (185)	0.75 (19)	0.55 (14)	3.07 (78)	6.65 (169)	20.55 (522)	13.4 (340)	6.5 (165)	59.7	
TPE 2/3 (D) 65-200	3 (2.2)	D	3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.19 (81)	4.02 (102)	2.56 (65)	4.65 (118)	5.51 (140)	5 (127)	7.28 (185)	0.75 (19)	0.63 (16)	2.91 (74)	6.65 (169)	20.39 (518)	13.4 (340)	6.5 (165)	32.4	
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	8.98 (228)	9.45 (240)	2.56 (65)	4.69 (119)	5.71 (145)	5.12 (130)	7.28 (185)	0.75 (19)	0.55 (14)	3.07 (78)	6.65 (169)	20.55 (522)	13.4 (340)	6.5 (165)	61.3	



Pump Type	[hp (kW)]	Phase	Dimensions [in (mm)]							
			B3	B4	C1	C5	C6	C7	C8	M
TPE 2/3 D 65-60	0.5 (0.37)	1	10.24 (260)	12.48 (317)	10.24 (260)	3.62 (92)	8.58 (218)	3.62 (92)	5.12 (130)	M12
		3	10.24 (260)	13.27 (337)	10.24 (260)	3.62 (92)	8.58 (218)	3.62 (92)	5.12 (130)	M12
TPE 2/3 D 65-80	0.75 (0.55)	1	10.24 (260)	12.48 (317)	10.24 (260)	3.62 (92)	8.58 (218)	3.62 (92)	5.12 (130)	M12
		3	10.24 (260)	13.27 (337)	10.24 (260)	3.62 (92)	8.58 (218)	3.62 (92)	5.12 (130)	M12
TPE 2/3 D 65-120	1 (0.75)	1	10.24 (260)	12.48 (317)	10.24 (260)	3.62 (92)	8.58 (218)	3.62 (92)	5.12 (130)	M12
		3	10.24 (260)	13.27 (337)	10.24 (260)	3.62 (92)	8.58 (218)	3.62 (92)	5.12 (130)	M12
TPE 2/3 D 65-150	1.5 (1.1)	1	10.24 (260)	12.48 (317)	10.24 (260)	3.62 (92)	8.58 (218)	3.62 (92)	5.12 (130)	M12
		3	10.24 (260)	13.27 (337)	10.24 (260)	3.62 (92)	8.58 (218)	3.62 (92)	5.12 (130)	M12
TPE 2/3 D 65-180	2 (1.5)	1	10.24 (260)	12.48 (317)	10.24 (260)	3.62 (92)	8.58 (218)	3.62 (92)	5.12 (130)	M12
		3	10.24 (260)	13.27 (337)	10.24 (260)	3.62 (92)	8.58 (218)	3.62 (92)	5.12 (130)	M12
TPE 2/3 D 65-200	3 (2.2)	3	10.24 (260)	13.27 (337)	10.24 (260)	3.62 (92)	8.58 (218)	3.62 (92)	5.12 (130)	M12

### Technical data

Flow range: [US GPM (m <sup>3</sup> /hr)]	8.8 (2.0) - 264(60)	Max ambient air temperature: [°F (°C)]	122 (50)
Nominal head range:[ft (m)]	11.2 (3.4) - 47.9 (14.6)	Gross weight: [lbs (kg)]	81.6 (37) - 166.7 (75.6)
Maximum working pressure: [psi (bar)]	232 (16)	Motors:	SaVer 2 (FM300)
Temperature range: [°F (°C)]	BQBE: 32 (0) - +248 (120)	Flanges:	2.5"
	BQQE: -13 (-25) - +248 (120)		4 bolt with (4) .75" dia. holes




**TPE2, TPE2 D, TPE3, TPE3 D 80**

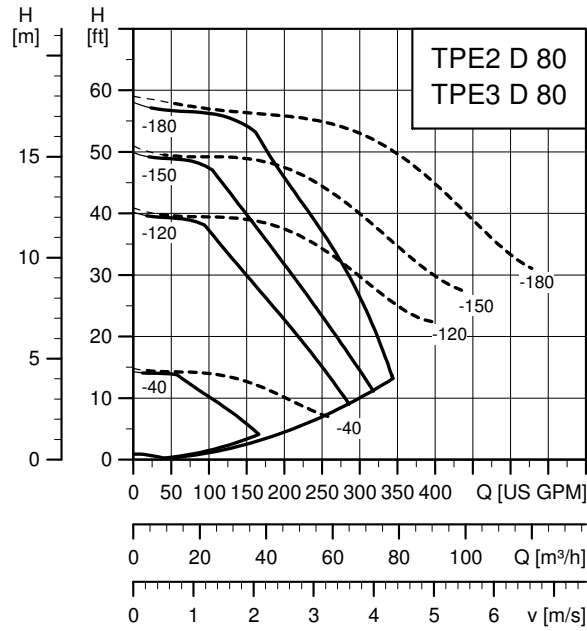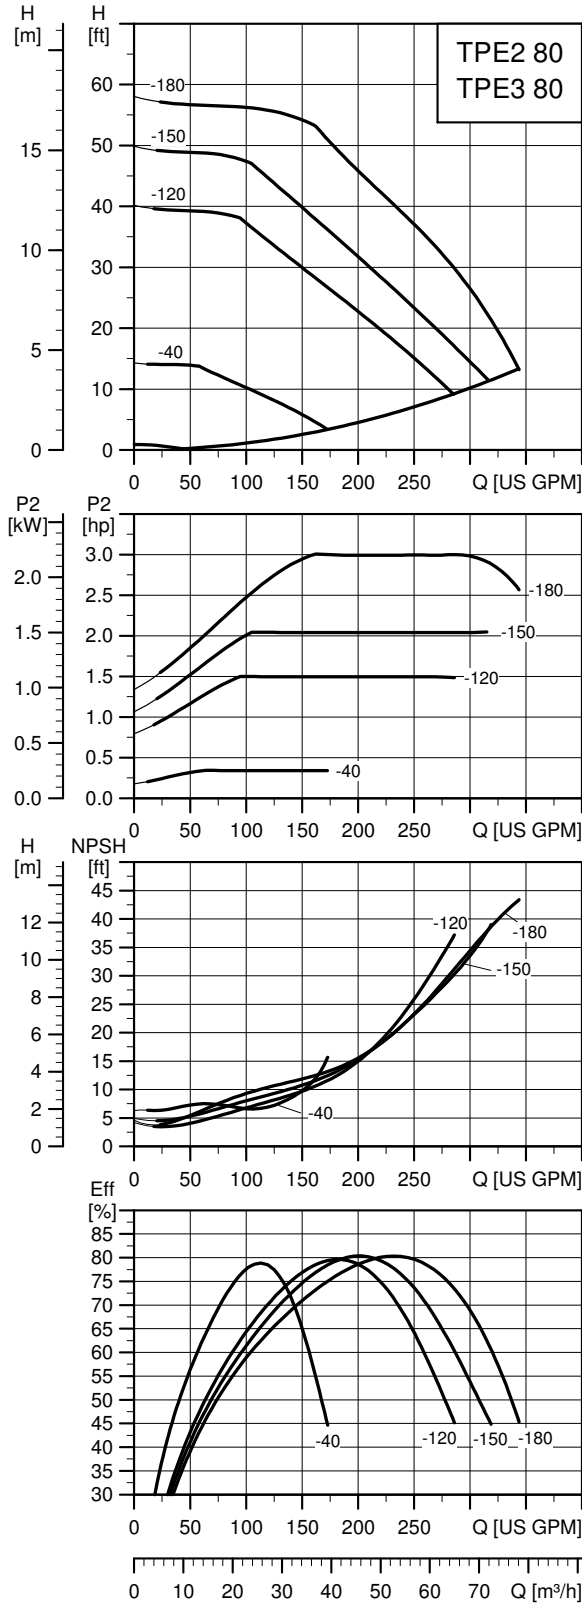

TM07 3021 4518

TM07 3020 4518

Note: The dotted QH curves apply to TPE2 D, TPE3 D in parallel operation.

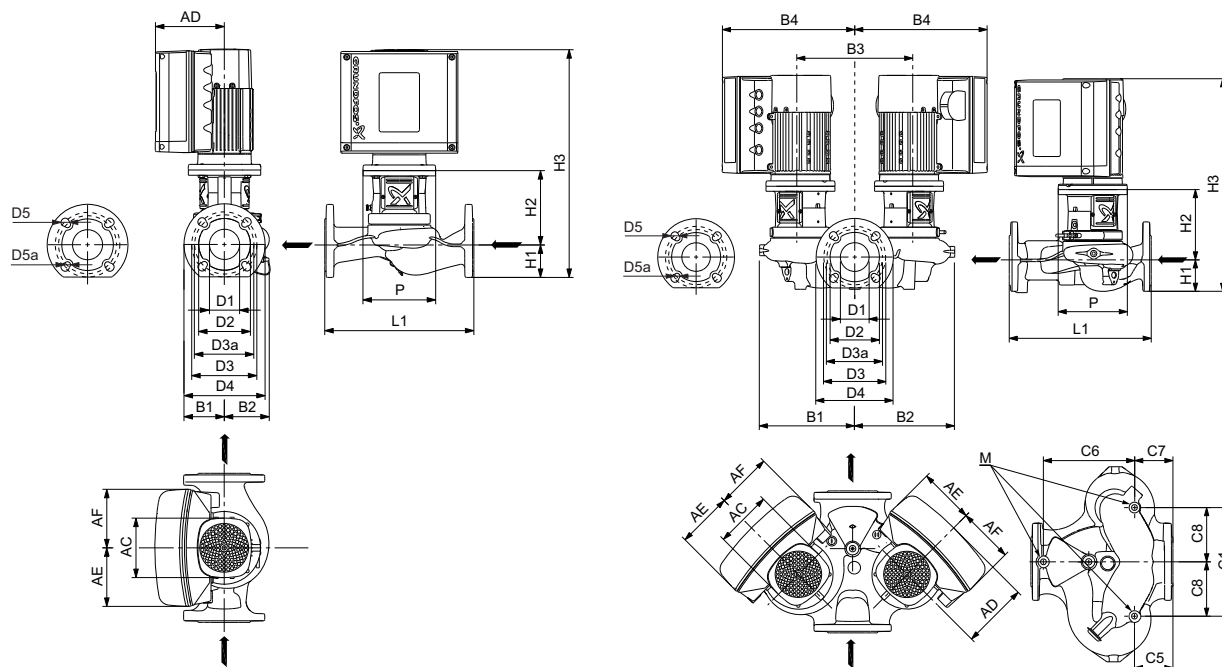

TM07 3100 4918; TM07 3102 4918

Dimensions and weights



Pump type	[hp (kW)]	Dual head Ph	Dimensions [in (mm)]																	Net weight [lbs (kg)]		
			AC	AD	AE	AF	B1	B2	D1	D2	D3	D3a	D4	D5	D5a	H1	H2	H3	L1		P	
TPE 2/3 (D) 80-40	0.33 (0.25)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	3.82 (97)	4.84 (123)	3.15 (80)	5.2 (132)	5.91 (150)	0 (0)	7.87 (200)	0.75 (19)	-	3.7 (94)	6.93 (176)	19.09 (485)	14.2 (360)	6.5 (165)	30.5	
			4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.82 (97)	4.84 (123)	3.15 (80)	5.2 (132)	5.91 (150)	0 (0)	7.87 (200)	0.75 (19)	-	3.7 (94)	6.93 (176)	20.67 (525)	14.2 (360)	6.5 (165)	32.2	
		D	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	9.61 (244)	10 (254)	3.15 (80)	5.04 (128)	6.3 (160)	5.91 (150)	7.87 (200)	0.75 (19)	-	3.82 (97)	6.93 (176)	19.21 (488)	14.2 (360)	6.5 (165)	59.7
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	9.61 (244)	10 (254)	3.15 (80)	5.04 (128)	6.3 (160)	5.91 (150)	7.87 (200)	0.75 (19)	-	3.82 (97)	6.93 (176)	20.79 (528)	14.2 (360)	6.5 (165)	63.2
TPE 2/3 (D) 80-120	1.5 (1.1)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	3.82 (97)	4.84 (123)	3.15 (80)	5.2 (132)	5.91 (150)	0 (0)	7.87 (200)	0.75 (19)	-	3.7 (94)	6.93 (176)	19.09 (485)	14.2 (360)	6.5 (165)	31.3	
			4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.82 (97)	4.84 (123)	3.15 (80)	5.2 (132)	5.91 (150)	0 (0)	7.87 (200)	0.75 (19)	-	3.7 (94)	6.93 (176)	20.67 (525)	14.2 (360)	6.5 (165)	33.0	
		D	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	9.61 (244)	10 (254)	3.15 (80)	5.04 (128)	6.3 (160)	5.91 (150)	7.87 (200)	0.75 (19)	-	3.82 (97)	6.93 (176)	19.21 (488)	14.2 (360)	6.5 (165)	61.3
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	9.61 (244)	10 (254)	3.15 (80)	5.04 (128)	6.3 (160)	5.91 (150)	7.87 (200)	0.75 (19)	-	3.82 (97)	6.93 (176)	20.79 (528)	14.2 (360)	6.5 (165)	64.7
TPE 2/3 (D) 80-150	2 (1.5)	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	3.82 (97)	4.84 (123)	3.15 (80)	5.2 (132)	5.91 (150)	0 (0)	7.87 (200)	0.75 (19)	-	3.7 (94)	6.93 (176)	19.88 (505)	14.2 (360)	6.5 (165)	33.0	
			4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.82 (97)	4.84 (123)	3.15 (80)	5.2 (132)	5.91 (150)	0 (0)	7.87 (200)	0.75 (19)	-	3.7 (94)	6.93 (176)	21.46 (545)	14.2 (360)	6.5 (165)	34.7	
		D	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	9.61 (244)	10 (254)	3.15 (80)	5.04 (128)	6.3 (160)	5.91 (150)	7.87 (200)	0.75 (19)	-	3.82 (97)	6.93 (176)	20 (508)	14.2 (360)	6.5 (165)	64.8
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	9.61 (244)	10 (254)	3.15 (80)	5.04 (128)	6.3 (160)	5.91 (150)	7.87 (200)	0.75 (19)	-	3.82 (97)	6.93 (176)	21.57 (548)	14.2 (360)	6.5 (165)	68.1
TPE 2/3 (D) 80-180	3 (2.2)	3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.82 (97)	4.84 (123)	3.15 (80)	5.2 (132)	5.91 (150)	0 (0)	7.87 (200)	0.75 (19)	-	3.7 (94)	6.93 (176)	21.46 (545)	14.2 (360)	6.5 (165)	36.1	
		D 3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	9.61 (244)	10 (254)	3.15 (80)	5.04 (128)	6.3 (160)	5.91 (150)	7.87 (200)	0.75 (19)	-	3.82 (97)	6.93 (176)	21.57 (548)	14.2 (360)	6.5 (165)	70.9	

Pump Type	[hp (kW)]	Phase	Dimensions [in (mm)]							
			B3	B4	C1	C5	C6	C7	C8	M
TPE 2/3 D 80-40	0.33 (0.25)	1	10.24 (260)	12.48 (317)	10.24 (260)	4.02 (102)	8.58 (218)	4.02 (102)	5.12 (130)	M12
		3	10.24 (260)	13.27 (337)	10.24 (260)	4.02 (102)	8.58 (218)	4.02 (102)	5.12 (130)	M12
TPE 2/3 D 80-120	1.5 (1.1)	1	10.24 (260)	12.48 (317)	10.24 (260)	4.02 (102)	8.58 (218)	4.02 (102)	5.12 (130)	M12
		3	10.24 (260)	13.27 (337)	10.24 (260)	4.02 (102)	8.58 (218)	4.02 (102)	5.12 (130)	M12
TPE 2/3 D 80-150	2 (1.5)	1	10.24 (260)	12.48 (317)	10.24 (260)	4.02 (102)	8.58 (218)	4.02 (102)	5.12 (130)	M12
		3	10.24 (260)	13.27 (337)	10.24 (260)	4.02 (102)	8.58 (218)	4.02 (102)	5.12 (130)	M12
TPE 2/3 D 80-180	3 (2.2)	3	10.24 (260)	13.27 (337)	10.24 (260)	4.02 (102)	8.58 (218)	4.02 (102)	5.12 (130)	M12

### Technical data

Flow range: [US GPM (m <sup>3</sup> /hr)]	11 (2.5) - 352 (80)	Max ambient air temperature: [°F (°C)]	122 (50)
Nominal head range: [ft (m)]	9.2 (2.8) - 42 (12.8)	Gross weight: [lbs (kg)]	87.3 (39.6) - 187.8 (85.2)
Maximum working pressure: [psi (bar)]	232 (16)	Motors:	SaVer 2 (FM300)
Temperature range: [°F (°C)]	BQBE: 32 (0) - +248 (120)	Flanges:	3"
	BQQE: -13 (-25) - +248 (120)		4 bolt with (4) .75" dia. holes


TPE2, TPE2 D, TPE3, TPE3 D 100

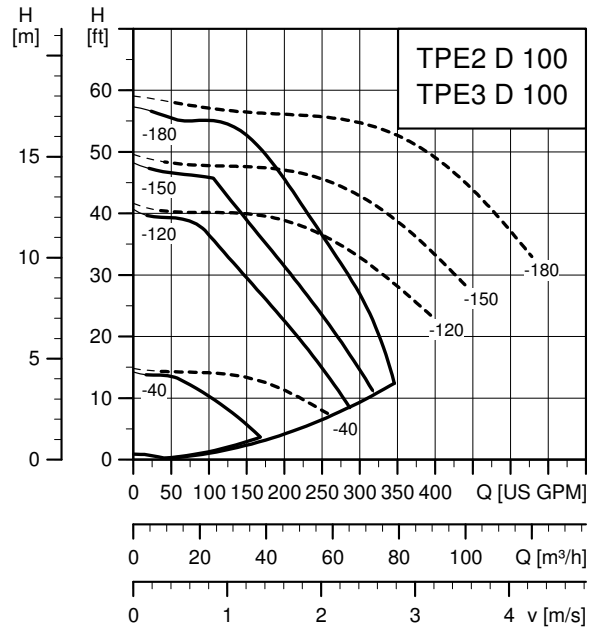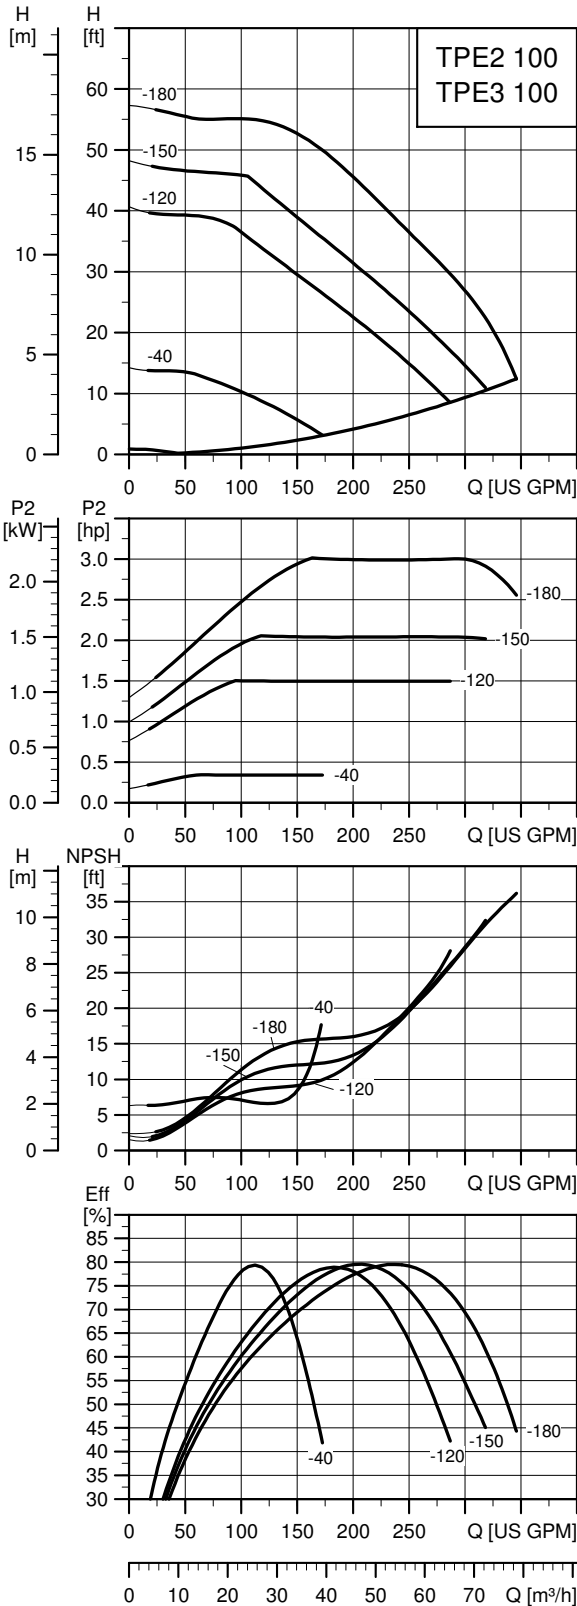

TM07 3023 4518

TM07 3022 4518

Note: The dotted QH curves apply to TPE2 D, TPE3 D in parallel operation.

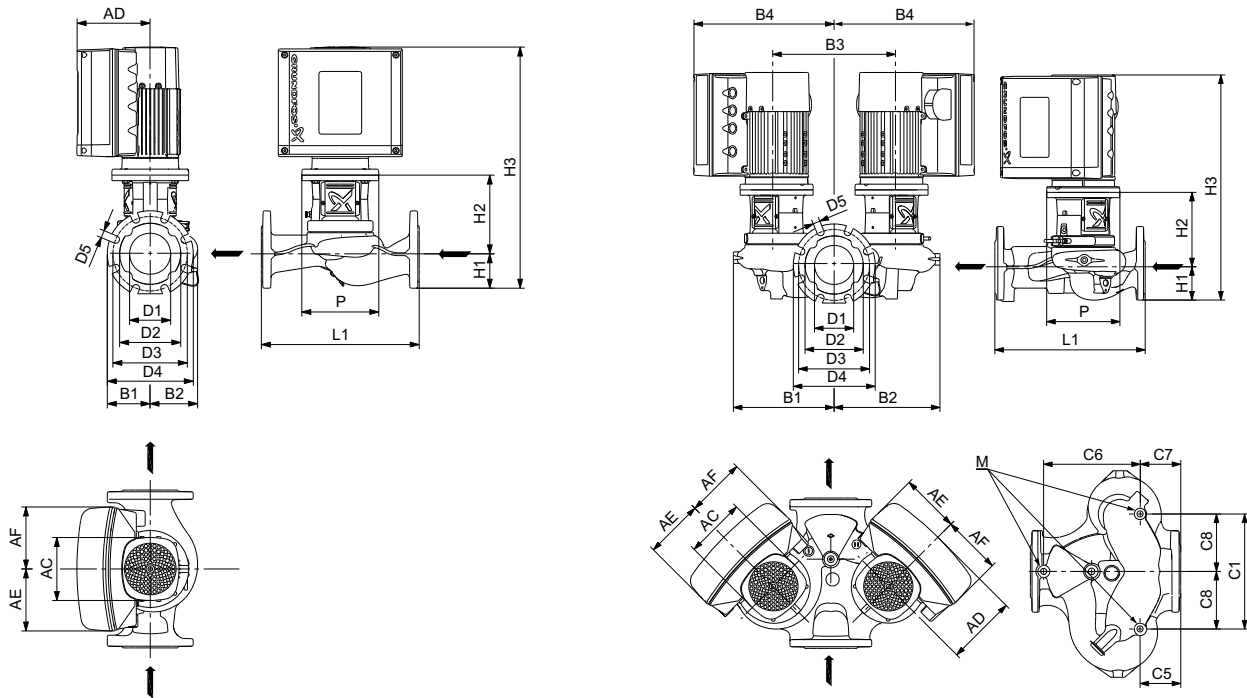

TM07 3101 4918; TM07 3103 4918

Dimensions and weights

Pump type	[hp (kW)]	Dual head	Ph	Dimensions [in (mm)]														Net weight [lbs (kg)]				
				AC	AD	AE	AF	B1	B2	D1	D2	D3	D4	D5	H1	H2	H3		L1	P		
TPE 2/3 (D) 100-40	0.33 (0.25)	D	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	3.86 (98)	4.92 (125)	3.94 (100)	6.14 (156)	7.52 (191)	8.66 (220)	0.75 (19)	4.02 (102)	7.44 (189)	19.92 (506)	17.7 (450)	6.5 (165)	35.0		
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.86 (98)	4.92 (125)	3.94 (100)	6.14 (156)	7.52 (191)	8.66 (220)	0.75 (19)	4.02 (102)	7.44 (189)	21.5 (546)	17.7 (450)	6.5 (165)	36.7		
		D	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	9.92 (252)	10.43 (265)	3.94 (100)	6.3 (160)	6.69 (170)	8.66 (220)	0.75 (19)	4.09 (104)	7.44 (189)	20 (508)	17.7 (450)	6.5 (165)	69.3		
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	9.92 (252)	10.43 (265)	3.94 (100)	6.3 (160)	6.69 (170)	8.66 (220)	0.75 (19)	4.09 (104)	7.44 (189)	21.57 (548)	17.7 (450)	6.5 (165)	72.7		
		TPE 2/3 (D) 100-120	1.5 (1.1)	D	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	3.86 (98)	4.92 (125)	3.94 (100)	6.14 (156)	7.52 (191)	8.66 (220)	0.75 (19)	4.02 (102)	7.44 (189)	19.92 (506)	17.7 (450)	6.5 (165)	35.8
					3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.86 (98)	4.92 (125)	3.94 (100)	6.14 (156)	7.52 (191)	8.66 (220)	0.75 (19)	4.02 (102)	7.44 (189)	21.5 (546)	17.7 (450)	6.5 (165)	37.5
D	1			4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	9.92 (252)	10.43 (265)	3.94 (100)	6.3 (160)	6.69 (170)	8.66 (220)	0.75 (19)	4.09 (104)	7.44 (189)	20 (508)	17.7 (450)	6.5 (165)	70.9		
	3			4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	9.92 (252)	10.43 (265)	3.94 (100)	6.3 (160)	6.69 (170)	8.66 (220)	0.75 (19)	4.09 (104)	7.44 (189)	21.57 (548)	17.7 (450)	6.5 (165)	74.3		
TPE 2/3 (D) 100-150	2 (1.5)	D	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	3.86 (98)	4.92 (125)	3.94 (100)	6.14 (156)	7.52 (191)	8.66 (220)	0.75 (19)	4.02 (102)	7.44 (189)	20.71 (526)	17.7 (450)	6.5 (165)	37.5		
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.86 (98)	4.92 (125)	3.94 (100)	6.14 (156)	7.52 (191)	8.66 (220)	0.75 (19)	4.02 (102)	7.44 (189)	22.28 (566)	17.7 (450)	6.5 (165)	39.2		
		D	1	4.8 (122)	6.22 (158)	4.17 (106)	4.17 (106)	9.92 (252)	10.43 (265)	3.94 (100)	6.3 (160)	6.69 (170)	8.66 (220)	0.75 (19)	4.09 (104)	7.44 (189)	20.79 (528)	17.7 (450)	6.5 (165)	74.4		
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	9.92 (252)	10.43 (265)	3.94 (100)	6.3 (160)	6.69 (170)	8.66 (220)	0.75 (19)	4.09 (104)	7.44 (189)	22.36 (568)	17.7 (450)	6.5 (165)	77.7		
TPE 2/3 (D) 100-180	3 (2.2)	D	3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	3.86 (98)	4.92 (125)	3.94 (100)	6.14 (156)	7.52 (191)	8.66 (220)	0.75 (19)	4.02 (102)	7.44 (189)	22.28 (566)	17.7 (450)	6.5 (165)	40.6		
			3	4.8 (122)	6.22 (158)	5.28 (134)	5.28 (134)	9.92 (252)	10.43 (265)	3.94 (100)	6.3 (160)	6.69 (170)	8.66 (220)	0.75 (19)	4.09 (104)	7.44 (189)	22.36 (568)	17.7 (450)	6.5 (165)	80.5		

Pump Type	[hp (kW)]	Phase	Dimensions [in (mm)]							
			B3	B4	C1	C5	C6	C7	C8	M
TPE 2/3 D 100-40	0.33 (0.25)	1	10.63 (270)	12.68 (322)	10.63 (270)	5.79 (147)	9.57 (243)	5.79 (147)	5.31 (135)	M12
		3	10.63 (270)	13.46 (342)	10.63 (270)	5.79 (147)	9.57 (243)	5.79 (147)	5.31 (135)	M12
TPE 2/3 D 100-120	1.5 (1.1)	1	10.63 (270)	12.68 (322)	10.63 (270)	5.79 (147)	9.57 (243)	5.79 (147)	5.31 (135)	M12
		3	10.63 (270)	13.46 (342)	10.63 (270)	5.79 (147)	9.57 (243)	5.79 (147)	5.31 (135)	M12
TPE 2/3 D 100-150	2 (1.5)	1	10.63 (270)	12.68 (322)	10.63 (270)	5.79 (147)	9.57 (243)	5.79 (147)	5.31 (135)	M12
		3	10.63 (270)	13.46 (342)	10.63 (270)	5.79 (147)	9.57 (243)	5.79 (147)	5.31 (135)	M12
TPE 2/3 D 100-180	3 (2.2)	3	10.63 (270)	13.46 (342)	10.63 (270)	5.79 (147)	9.57 (243)	5.79 (147)	5.31 (135)	M12

### Technical data

Flow range: [US GPM (m <sup>3</sup> /hr)]	1.32 (0.3) - 352 (80)	Max ambient air temperature: [°F (°C)]	122 (50)
Nominal head range: [ft (m)]	9.8 (3) - 41.7 (12.7)	Gross weight: [lbs (kg)]	97.4 (44.2) - 214.1 (97.1)
Maximum working pressure: [psi (bar)]	232 (16)	Motors:	SaVer 2 (FM300)
Temperature range: [°F (°C)]	BQBE: 32 (0) - +248 (120) BQQE: -13 (-25) - +248 (120)	Flanges:	4" 8 bolt with (8) .75" dia. holes

## 19. Weights and shipping volume

### TPE2, TPE2 D, TPE3, TPE3 D

Pump type	Connection		Weights				Shipping volume [ft <sup>3</sup> (m <sup>3</sup> )]	
	D1 <sub>D</sub>	D1 <sub>S</sub>	Net [lb (kg)]		Gross [lb (kg)]		TPE2, TPE3	TPE2 D, TPE3 D
			TPE2, TPE3	TPE2 D, TPE3 D	TPE2, TPE3	TPE2 D, TPE3 D		
TPE2, TPE2 D, TPE3, TPE3 D 40-80	ANSI 1.5"	ANSI 1.5"	55 (25)	101 (46)	73 (33)	119 (54)	1 (0.035)	4 (0.105)
TPE2, TPE2 D, TPE3, TPE3 D 40-120	ANSI 1.5"	ANSI 1.5"	55 (25)	101 (46)	73 (33)	119 (54)	1 (0.035)	4 (0.105)
TPE2, TPE2 D, TPE3, TPE3 D 40-150	ANSI 1.5"	ANSI 1.5"	55 (25)	101 (46)	73 (33)	119 (54)	1 (0.035)	4 (0.105)
TPE2, TPE2 D, TPE3, TPE3 D 40-180	ANSI 1.5"	ANSI 1.5"	55 (25)	101 (46)	73 (33)	121 (55)	1 (0.035)	4 (0.105)
TPE2, TPE2 D, TPE3, TPE3 D 40-200	ANSI 1.5"	ANSI 1.5"	55 (25)	101 (46)	73 (33)	121 (55)	1 (0.035)	4 (0.105)
TPE2, TPE2 D, TPE3, TPE3 D 40-240	ANSI 1.5"	ANSI 1.5"	60 (27)	108 (49)	77 (35)	128 (58)	1 (0.035)	4 (0.105)
TPE2, TPE2 D, TPE3, TPE3 D 50-60	ANSI 2"	ANSI 2"	60 (27)	108 (49)	77 (35)	126 (57)	1 (0.036)	4 (0.109)
TPE2, TPE2 D, TPE3, TPE3 D 50-80	ANSI 2"	ANSI 2"	60 (27)	108 (49)	77 (35)	126 (57)	1 (0.036)	4 (0.109)
TPE2, TPE2 D, TPE3, TPE3 D 50-120	ANSI 2"	ANSI 2"	60 (27)	108 (49)	77 (35)	126 (57)	1 (0.036)	4 (0.109)
TPE2, TPE2 D, TPE3, TPE3 D 50-150	ANSI 2"	ANSI 2"	60 (27)	108 (49)	77 (35)	126 (57)	1 (0.036)	4 (0.109)
TPE2, TPE2 D, TPE3, TPE3 D 50-180	ANSI 2"	ANSI 2"	60 (27)	108 (49)	77 (35)	128 (58)	1 (0.036)	4 (0.109)
TPE2, TPE2 D, TPE3, TPE3 D 50-200	ANSI 2"	ANSI 2"	64 (29)	115 (52)	82 (37)	134 (61)	1 (0.036)	4 (0.109)
TPE2, TPE2 D, TPE3, TPE3 D 50-240	ANSI 2"	ANSI 2"	66 (30)	119 (54)	84 (38)	139 (63)	1 (0.036)	4 (0.109)
TPE2, TPE2 D, TPE3, TPE3 D 65-60	ANSI 2.5"	ANSI 2.5"	64 (29)	115 (52)	84 (38)	134 (61)	2 (0.044)	4 (0.117)
TPE2, TPE2 D, TPE3, TPE3 D 65-80	ANSI 2.5"	ANSI 2.5"	64 (29)	115 (52)	84 (38)	134 (61)	2 (0.044)	4 (0.117)
TPE2, TPE2 D, TPE3, TPE3 D 65-120	ANSI 2.5"	ANSI 2.5"	64 (29)	115 (52)	84 (38)	134 (61)	2 (0.044)	4 (0.117)
TPE2, TPE2 D, TPE3, TPE3 D 65-150	ANSI 2.5"	ANSI 2.5"	66 (30)	119 (54)	86 (39)	137 (62)	2 (0.044)	4 (0.117)
TPE2, TPE2 D, TPE3, TPE3 D 65-180	ANSI 2.5"	ANSI 2.5"	68 (31)	123 (56)	88 (40)	143 (65)	2 (0.044)	4 (0.117)
TPE2, TPE2 D, TPE3, TPE3 D 65-200	ANSI 2.5"	ANSI 2.5"	71 (32)	126 (57)	90 (41)	146 (66)	2 (0.044)	4 (0.117)
TPE2, TPE2 D, TPE3, TPE3 D 80-40	ANSI 3"	ANSI 3"	77 (35)	132 (60)	97 (44)	150 (68)	2 (0.049)	5 (0.129)
TPE2, TPE2 D, TPE3, TPE3 D 80-120	ANSI 3"	ANSI 3"	79 (36)	134 (61)	99 (45)	154 (70)	2 (0.049)	5 (0.129)
TPE2, TPE2 D, TPE3, TPE3 D 80-150	ANSI 3"	ANSI 3"	84 (38)	143 (65)	101 (46)	161 (73)	2 (0.049)	5 (0.129)
TPE2, TPE2 D, TPE3, TPE3 D 80-180	ANSI 3"	ANSI 3"	86 (39)	148 (67)	106 (48)	168 (76)	2 (0.049)	5 (0.129)
TPE2, TPE2 D, TPE3, TPE3 D 100-40	ANSI 4"	ANSI 4"	88 (40)	150 (68)	106 (48)	172 (78)	2 (0.064)	6 (0.168)
TPE2, TPE2 D, TPE3, TPE3 D 100-120	ANSI 4"	ANSI 4"	88 (40)	154 (70)	108 (49)	174 (79)	2 (0.064)	6 (0.168)
TPE2, TPE2 D, TPE3, TPE3 D 100-150	ANSI 4"	ANSI 4"	93 (42)	161 (73)	112 (51)	183 (83)	2 (0.064)	6 (0.168)
TPE2, TPE2 D, TPE3, TPE3 D 100-180	ANSI 4"	ANSI 4"	95 (43)	168 (76)	115 (52)	187 (85)	2 (0.064)	6 (0.168)

## 20. Accessories


### Base plates

**Note:** TPE2, TPE3 pumps are not designed to be supplied with a base plate.

#### TPE2 D, TPE3 D


Pump type	Hexagon head screws	Product number
TPE2 D, TPE3 D 65	3 x M12 x 40 mm	99150056
TPE2 D, TPE3 D 80		
TPE2 D, TPE3 D 100	3 x M12 x 16 mm	99150057

Drawing, TPE2 D

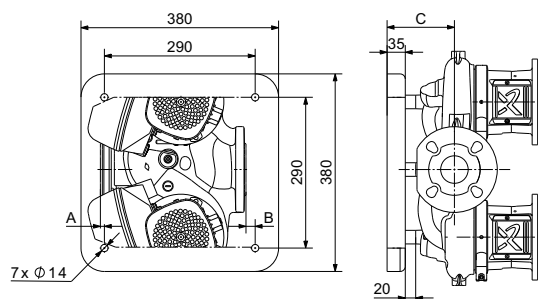


TM06 7445 3516

Drawing, TPE2 D, TPE3 D 80

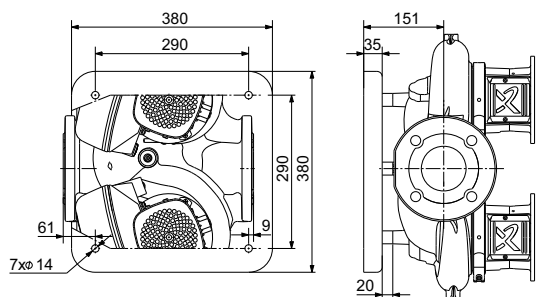

TM06 7481 3616

Drawing, TPE2 D, TPE3 D 100

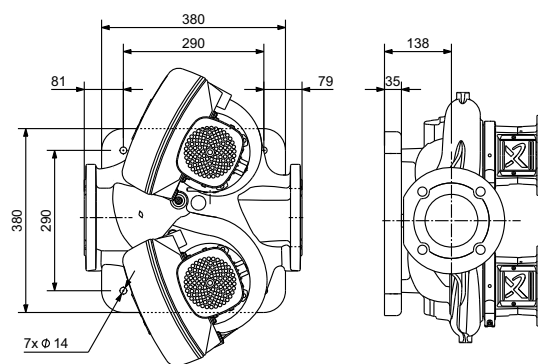

TM06 7482 3616


Pump type	Dimensions [mm]			Product number
	A	B	C	
TPE2 D, TPE3 D 65	50	0	132	99150056
TPE2 D, TPE3 D 80				99150056
TPE2 D, TPE3 D 100				99150057

### Insulating kits

Insulating kits are available for TPE2 and TPE3 pumps.

The insulating kit consists of two shells.

The insulating kit is tailored to the individual pump model and encloses the entire pump housing, thus providing optimum insulation.

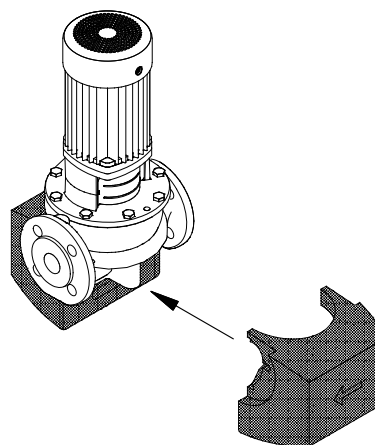

TM00 8095 2496

Fig. 73 Insulating kit


### Kits for TPE2, TPE3 pumps

Pump type	Product number
TPE2, TPE3 40-80/120/150/180/200/240	98159368
TPE2, TPE3 50-60/80/120/150/180/200/240	98159367
TPE2, TPE3 65-60/80/120/150/180/200	98159361
TPE2, TPE3 80-40/120/150/180	98159363
TPE2, TPE3 100-40/120/150/180	98159362



## Sensors

## Flow sensors

Grundfos Vortex flow sensor, VFI <sup>1</sup>	Type	Flow range [GPM (m <sup>3</sup> /h)]	Pipe connection	O-ring		Connection type		Product number	
				EPDM	FKM	Cast-iron flange	Stainless-steel flange		
 <ul style="list-style-type: none"> <li>• Sensor tube with sensor sensor tube of 1.4408 and sensor of 1.4404</li> <li>• 4-20 mA output signal</li> <li>• 2 flanges</li> <li>• 16 ft (5 m) cable with M12 connection in one end</li> <li>• quick guide.</li> </ul>	VFI 2-40 020 E	9 (2)-176 (40)	ANSI 1.5"	•		•		97686143	
	VFI 2-40 020 F				•		•		97686144
	VFI 2-40 020 E				•			•	97688299
	VFI 2-40 020 F					•		•	97688300
	VFI 3.2-64 020 E	9 (2)-282 (64)	ANSI 2"	•		•		97686145	
	VFI 3.2-64 020 F				•		•	97686146	
	VFI 3.2-64 020 E				•			•	97688301
	VFI 3.2-64 020 F					•		•	97688302
	VFI 5.2-104 020 E	23 (5.2)-458 (104)	ANSI 2.5"	•		•		97686147	
	VFI 5.2-104 020 F					•		97686148	
	VFI 5.2-104 020 E				•			•	97688303
	VFI 5.2-104 020 F					•		•	97688304
	VFI 8-160 020 E	35 (8)-704 (160)	ANSI 3"	•		•		97686149	
	VFI 8-160 020 F					•		97686150	
	VFI 8-160 020 E				•			•	97688305
	VFI 8-160 020 F					•		•	97688306
VFI 12-240 020 E	53 (12)-1056 (240)	ANSI 4"	•		•		97686151		
VFI 12-240 020 F					•		97686152		
VFI 12-240 020 E				•			•	97688308	
VFI 12-240 020 F						•	•	97688309	

<sup>1</sup> For more information about the VFI sensor, see the data booklet "Grundfos direct sensors", publication number 97790189.

## Temperature sensors

### Temperature sensor, TTA

Temperature sensor with Pt100 temperature sensor fitted in a  $\varnothing 6 \times 100$  mm measuring tube made of stainless steel, ASTM 316Ti (DIN 1.4571) and a 4-20 mA sensor built into a type B head DIN 43.729.

The connecting head is made of painted pressure die-cast aluminium with Pg 16 screwed connection, stainless screws and neoprene rubber gasket.

The sensor is built into the system either by means of a cutting ring bush or by means of one of the two matching protecting tubes  $\varnothing 9 \times 100$  mm or  $\varnothing 9 \times 50$  mm, respectively.

The protecting tube has a G 1/2 connection.

Cutting ring bush or protecting tube must be ordered separately.

### Technical data

Type	TTA (-25) 25	TTA (0) 25	TTA (0) 150	TTA (50) 100
Product number	96430194	96432591	96430195	96432592
Measuring range	-13 to +77 °F (-25 to +25 °C)	32 to +77 °F (0 to +25 °C)	32 to +302 °F (0 to +150 °C)	122 to 212 °F (50 to +100 °C)
Measuring accuracy	According to IEC 751, class B, 32.5 °F (0.3 °C) at 32 °F (0 °C)			
Response time, $\tau$ (0.9) in water 0.2 m/s	Without protecting tube:		28 seconds	
	With oil-filled protecting tube:		75 seconds	
Enclosure class	IP55			
Output signal	4-20 mA			
Supply voltage	8-35 VDC			
EMC, electromagnetic compatibility	Emission:		According to EN 50081	
	Immunity:		According to EN 50082	

### Accessories

Type	Protecting tube $\varnothing 9 \times 50$ mm	Protecting tube $\varnothing 9 \times 100$ mm	Cutting ring bush
Product number	96430201	96430202	96430203
Description	Protecting tube of stainless steel SINOX SSH 2 for $\varnothing 6$ mm measuring tube. Pipe connection G 1/2.		Cutting ring bush for $\varnothing 6$ mm measuring tube. Pipe connection G 1/2.

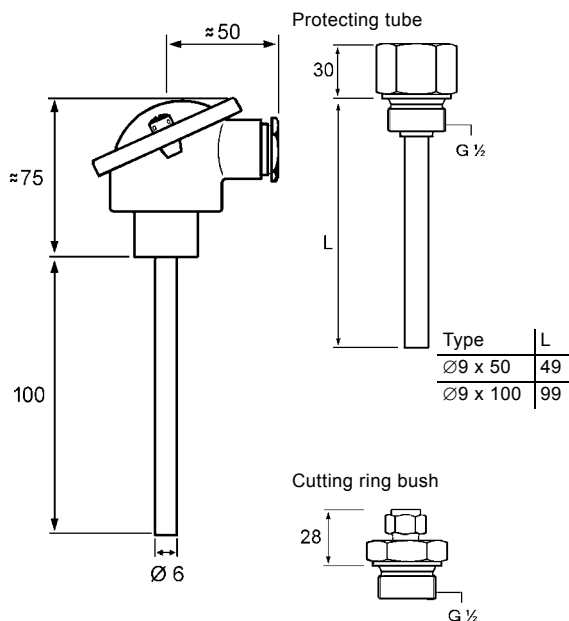


Fig. 74 Dimensional sketch

### Differential-temperature sensor, HONSBERG

The temperature sensors T1 and T2 measure the temperature in their respective location at the same time. Besides the temperature measurement, the T1 features an electronic unit calculating the temperature difference between T1 and T2 and transmitting the result as a 4-20 mA signal via a current amplifier.

As the measured signal transmitted from the T2 is also a current signal, a relatively large distance is allowed between T2 and T1.

As appears from fig. 75, it has no effect on the output signal,  $I_{out}$ , which of the sensors that measures the highest temperature.

Thus, the current signal generated will always be positive between 4 and 20 mA.

#### Technical data

Type	ETSD1-04-020K045 + ETSD2-K045	ETSD1-04-050K045 + ETSD2-K045
Product number	96409362	96409363
Measuring range: Temperature difference (T1-T2) or (T2-T1)	32 to 68 °F (0 to +20 °C)	32 to 122 °F (0 to +50 °C)
Supply voltage	15-30 VDC	
Output signal	4-20 mA	
Measuring accuracy	± 0.3 % FS	
Repeatability	± 1 % FS	
Response time, $\tau$ (0.9)	2 minutes	
Ambient temperature	-13 to 185 °F (-25 to +85 °C)	
Operating temperature of T1 and T2	-13 to 221 °F (-25 to +105 °C)	
Maximum distance between T1 and T2	984 ft (300 m) with screened cable	
Electrical connection	Between T1 and T2: M12 x 1 plug, output signal with DIN 43650-A plug type	
Storage temperature	-49 to 257 °F (-45 to +125 °C)	
Short-circuit-proof	Yes	
Protected against polarity reversal	Yes, up to 40 V	
Materials in contact with liquid	Stainless steel, ASTM 316 Ti (DIN 1.4571)	
Enclosure class	IP65	
EMC, electromagnetic compatibility	Emission: According to EN 50081	
	Immunity: According to EN 50082	

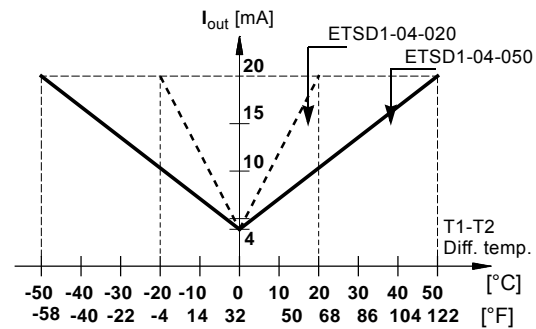


Fig. 75 Sensor characteristics

TM02 1339 1001

ETSD1- 04- 020 K 045	Specification
ETSD1-	Reference temperature, T1.
04-	32 °F (0 °C) corresponds to 4 mA.
020	68 °F (20 °C) corresponds to 20 mA.
050	122 °F (50 °C) corresponds to 20 mA.
K	Material in contact with liquid: Stainless steel, ASTM 316 Ti (DIN 1.4571).
045	Length of sensing element: 45 mm.
ETSD2- K 045	Specification
ETSD2-	Reference temperature, T2.
K	Material in contact with liquid: Stainless steel, DIN 1.4571.
045	Length of sensing element: 45 mm.

### Installing the sensor

Fit the two sensors in such a way that the sensing elements are located in the middle of the flow of the liquid to be measured.

For tightening, use only the hexagon nut.

You can turn the upper part of the sensors to any position suitable for the connection of cables.

The sensors have a G 1/2 thread. See fig. 76.

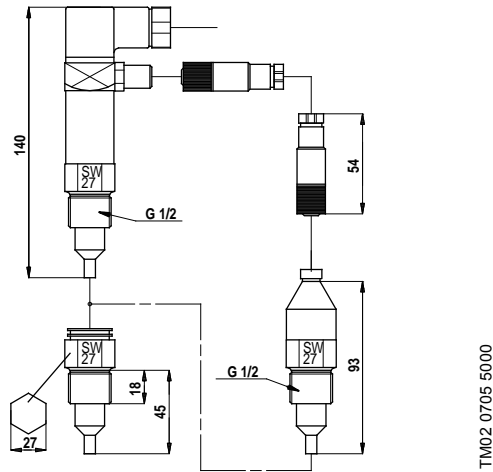


Fig. 76 Dimensional sketch

### Ambient temperature sensor

Sensor type	Type	Supplier	Measuring range	Product number
Temperature sensor, ambient temperature	WR 52	tmg DK: Plesner	-58 to 122 °F (-50 to +50 °C)	ID8295

## Pressure sensors

### Sensors for boosting applications

Danfoss pressure sensor kit	Pressure range [psi (bar)]	Product number
<ul style="list-style-type: none"> <li>• Connection: G 1/2 A, DIN 16288 - B6kt</li> <li>• Electrical connection: plug DIN 43650</li> </ul>	0-36 (2.5)	96478188
	0-58 (4)	91072075
	0-87 (6)	91072076
	0-145 (10)	91072077
	0-232 (16)	91072078
<ul style="list-style-type: none"> <li>• Pressure sensor, type MBS 3000, with 7 ft (2 m) screened cable</li> <li>• Connection: G 1/4 A, DIN 16288 - B6kt</li> <li>• 5 cable clips, black</li> <li>• Fitting instructions PT, 00400212</li> </ul>	0-36 (2.5)	405159
	0-58 (4)	405160
	0-87 (6)	405161
	0-145 (10)	405162
	0-232 (16)	405163

### Sensors for circulation applications


Grundfos differential pressure sensor, DPI	Pressure range [psi (bar)]	Product number
<ul style="list-style-type: none"> <li>• 1 sensor including 0.9 m screened cable, 7/16" connections</li> <li>• 1 original DPI bracket for wall mounting</li> <li>• 1 Grundfos bracket for mounting on motor</li> <li>• 2 M4 screws for mounting of sensor on bracket</li> <li>• 1 M6 screw, self-cutting, for mounting on MLE 90/100</li> <li>• 1 M8 screw, self-cutting, for mounting on MLE 112/132</li> <li>• 1 M10 screw, self-cutting, for mounting on MLE 160</li> <li>• 1 M12 screw, self-cutting, for mounting on MLE 180</li> <li>• 3 capillary tubes, short/long</li> <li>• 2 fittings, 1/4" - 7/16"</li> <li>• 5 cable clips, black</li> <li>• Installation and operating instructions</li> <li>• Service kit instruction</li> </ul>	0-9 (0.6)	96611522
	0-14.5 (1)	96611523
	0-23 (1.6)	96611524
	0-36 (2.5)	96611525
	0-58 (4)	96611526
	0-87 (6)	96611527
	0-145 (10)	96611550
	Fitting kit for TPED with two sensors	

Select the differential pressure sensor so that the maximum pressure of the sensor is higher than the maximum differential pressure of the pump.

## External Grundfos sensors

Sensor	Type	Supplier	Measuring range [psi (bar)]	Transmitter output [mA]	Power supply [VDC]	Process connection	Product number
Pressure transmitter	RPI	Grundfos	0-9 (0.6)	4-20	12-30	G 1/2	97748907
			0 - 14.5 (1)				97748908
			0-23 (1.6)				97748909
			0-36 (2.5)				97748910
			0-58 (4)				97748921
			0-87 (6)				97748922
			0-174 (12)				97748923
			0-232 (16)				97748924

### Sensor interface

Sensor interface, SI 001 PSU <sup>1</sup>	Description	Product number
	Grundfos Direct Sensors™, type SI 001 PSU, is an external power supply for the VFI, DPI and other transmitters with 24 VDC supply voltage. The power supply is used when the cable between transmitter and controller is more than 98 ft (30 m) long.	96915820

<sup>1</sup> For further information about the PSU sensor interface, see the installation and operating instructions, "SI 001 PSU - sensor interface" publication number 96944355, or quick guide, publication number 96944356.

## Potentiometer

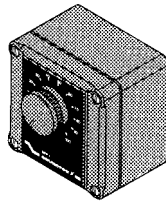


Fig. 77 Potentiometer

Potentiometer for setpoint setting and start/stop of the pump.

Product	Product number
External potentiometer with cabinet for wall mounting	625468

TM02 1630 5102

## Grundfos GO

Grundfos GO is used for wireless infrared or radio communication with the pumps.

Various Grundfos GO variants are available. The variants are described in the following.

### MI 204

MI 204 is an add-on module with built-in infrared and radio communication.

You can use MI 204 in conjunction with an Apple iPhone or iPod with Lightning connector.

MI 204 is also available together with an Apple iPod touch and a cover.



Fig. 78 MI 204

Supplied with the product:

- Grundfos MI 204
- sleeve
- quick guide
- charger cable.

TM05 7704 1513

### MI 301

MI 301 is a module with built-in infrared and radio communication. Use MI 301 in conjunction with Android or iOS-based smart devices with a Bluetooth connection. MI 301 has rechargeable Li-ion battery and you must charge it separately.



Fig. 79 MI 301

Supplied with the product:

- Grundfos MI 301
- sleeve
- battery charger
- quick guide.

### Product numbers

Grundfos GO variant	Product number
Grundfos MI 204	98424092
Grundfos MI 204 including iPod touch	98612711
Grundfos MI 301	98046408

TM05 3890 1712

## CIU communication interface units



GrA 6118

**Fig. 80** Grundfos CIU communication interface unit


The CIU units enable communication of operating data, such as measured values and setpoints, between TPE pumps and a building management system. The CIU unit incorporates a 24-240 VAC/VDC power supply module and a CIM module. You can mount the CIU unit on a DIN rail or on a wall. For further information See [Communication](#) on page 31.

We offer the following CIU units:

Description		Product number
CIU 900	CIU box without CIM	99448387
CIU 901	CIU box with IO 270 only	99448389
CIU 902	Autoadapt without CIM	97644690
CIU 903	SQFlex without CIM	98106399

For further information about data communication via CIU units and fieldbus protocols, see the CIU documentation available in Grundfos Product Center. See page 114.

## CIM communication interface modules

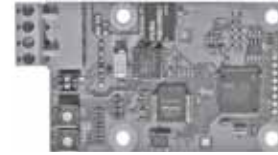

GrA6121

**Fig. 81** Grundfos CIM communication interface module

The CIM modules enable communication of operating data, such as measured values and setpoints, between TPE pumps and a building management system. The CIM modules are add-on communication modules which are fitted in the terminal box of TPE pumps. For further information see [Communication](#) on page 31.

**Note:** CIM modules must be fitted by authorized personnel.

We offer the following CIM modules:

Description	Fieldbus protocol	Product number
CIM 050	GENiBus	96824631
CIM 100	LonWorks	96824797
CIM 150	PROFIBUS DP	96824793
CIM 200	Modbus RTU	96824796
CIM 260	3G/4G cellular	99439306
CIM 280	GRM GiC 3G/4G	99439725
CIM 300	BACnet MS/TP	96893770
CIM 500	PROFINET	
CIM 500	Modbus TCP	
CIM 500	BACnet IP	98301408
CIM 500	EtherNet/IP	
CIM 500	GRM IP	

\* Antenna not included. See below.

### Antennas for CIM 260 and 280

Description	Product number
Antenna (puc) 3G/4G for CIM 260/280	99518079

For further information about data communication via CIM modules and fieldbus protocols, see the CIM documentation available in Grundfos Product Center. See page 114.

## 21. Minimum inlet pressure - NPSH

To ensure optimum and noiseless operation, we recommend that you use the minimum inlet pressure values shown on page 113.

A minimum inlet pressure is required to avoid pressure drop that may cause cavitation.

Use the following formula to calculate the minimum inlet pressure,  $p_s$  in bar relative. The pressure gauge value on the pump inlet side.

**Note:** Base the calculation of the minimum inlet pressure on the maximum required flow.

$$p_s \geq \left( \text{NPSH}_R \times \rho \times g - \frac{1}{2} \times \rho \times c^2 \right) \times 0,00001 - p_b + p_d \text{ [bar relative]}$$

- $p_s$  = Minimum inlet pressure in bar.  
 $\text{NPSH}_R$  = The required Net Positive Suction Head in m head, to be read from the NPSH curve at the highest flow the pump will be delivering.  
 $\rho$  = Density of the pumped liquid measured in  $\text{kg/m}^3$ .  
 $g$  = Gravitational acceleration measured in  $\text{m/s}^2$ . For estimated calculations use the value  $9.81 \text{ m/s}^2$ .  
 $c$  = Flow velocity of the pumped liquid at the pressure gauge. Insert the flow velocity as the unit [m/s]. See individual curve charts from page 159.  
 $p_b$  = Barometric pressure in bar. Set the barometric pressure to 0.97 bar.  
**Note:** Only occasionally the pressure is as high as 1 bar; this value is also at sea level.  
 $p_d$  = Vapor pressure in bar. See fig. 82.

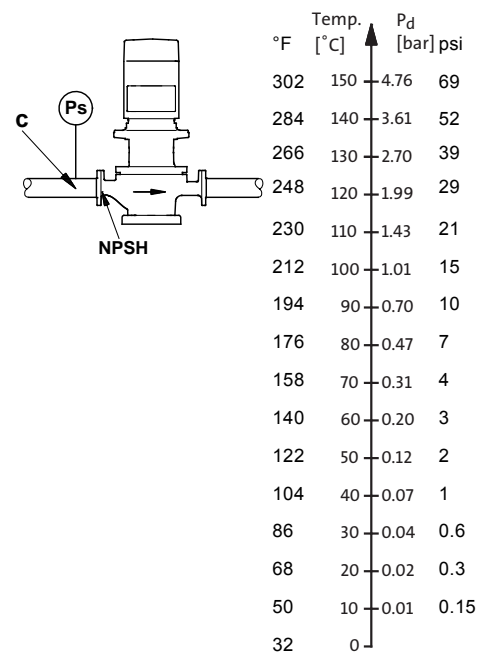


Fig. 82 Minimum inlet pressure

TM02 8491 0204 - TM03 0371 5004



## TPE2, TPE2 D, TPE3, TPE3 D

Pump type	p [psi (bar)]				
	68 °F (20 °C)	140 °F (60 °C)	194 °F (90 °C)	230 °F (110 °C)	248 °F (120 °C)
TPE2, TPE2 D, TPE3, TPE3 D 40-80	1 (0.1)	1 (0.1)	3 (0.2)	13 (0.9)	22 (1.5)
TPE2, TPE2 D, TPE3, TPE3 D 40-120	1 (0.1)	1 (0.1)	3 (0.2)	13 (0.9)	22 (1.5)
TPE2, TPE2 D, TPE3, TPE3 D 40-150	1 (0.1)	1 (0.1)	7 (0.5)	17 (1.2)	26 (1.8)
TPE2, TPE2 D, TPE3, TPE3 D 40-180	1 (0.1)	1 (0.1)	9 (0.6)	19 (1.3)	28 (1.9)
TPE2, TPE2 D, TPE3, TPE3 D 40-200	1 (0.1)	3 (0.2)	10 (0.7)	20 (1.4)	29 (2)
TPE2, TPE2 D, TPE3, TPE3 D 40-240	1 (0.1)	4 (0.3)	12 (0.8)	22 (1.5)	30 (2.1)
TPE2, TPE2 D, TPE3, TPE3 D 50-60	1 (0.1)	1 (0.1)	7 (0.5)	17 (1.2)	26 (1.8)
TPE2, TPE2 D, TPE3, TPE3 D 50-80	1 (0.1)	4 (0.3)	12 (0.8)	22 (1.5)	30 (2.1)
TPE2, TPE2 D, TPE3, TPE3 D 50-120	6 (0.4)	9 (0.6)	16 (1.1)	26 (1.8)	35 (2.4)
TPE2, TPE2 D, TPE3, TPE3 D 50-150	9 (0.6)	12 (0.8)	19 (1.3)	29 (2)	38 (2.6)
TPE2, TPE2 D, TPE3, TPE3 D 50-180	10 (0.7)	13 (0.9)	20 (1.4)	30 (2.1)	39 (2.7)
TPE2, TPE2 D, TPE3, TPE3 D 50-200	13 (0.9)	16 (1.1)	23 (1.6)	33 (2.3)	42 (2.9)
TPE2, TPE2 D, TPE3, TPE3 D 50-240	13 (0.9)	16 (1.1)	23 (1.6)	33 (2.3)	42 (2.9)
TPE2, TPE2 D, TPE3, TPE3 D 65-60	1 (0.1)	1 (0.1)	3 (0.2)	13 (0.9)	22 (1.5)
TPE2, TPE2 D, TPE3, TPE3 D 65-80	1 (0.1)	1 (0.1)	4 (0.3)	16 (1.1)	25 (1.7)
TPE2, TPE2 D, TPE3, TPE3 D 65-120	1 (0.1)	3 (0.2)	9 (0.6)	20 (1.4)	29 (2)
TPE2, TPE2 D, TPE3, TPE3 D 65-150	1 (0.1)	3 (0.2)	10 (0.7)	22 (1.5)	30 (2.1)
TPE2, TPE2 D, TPE3, TPE3 D 65-180	4 (0.3)	7 (0.5)	15 (1)	26 (1.8)	35 (2.4)
TPE2, TPE2 D, TPE3, TPE3 D 65-200	9 (0.6)	12 (0.8)	19 (1.3)	30 (2.1)	39 (2.7)
TPE2, TPE2 D, TPE3, TPE3 D 80-40	1 (0.1)	1 (0.1)	4 (0.3)	15 (1)	23 (1.6)
TPE2, TPE2 D, TPE3, TPE3 D 80-120	1 (0.1)	4 (0.3)	13 (0.9)	22 (1.5)	30 (2.1)
TPE2, TPE2 D, TPE3, TPE3 D 80-150	1 (0.1)	4 (0.3)	13 (0.9)	22 (1.5)	30 (2.1)
TPE2, TPE2 D, TPE3, TPE3 D 80-180	4 (0.3)	7 (0.5)	16 (1.1)	25 (1.7)	33 (2.3)
TPE2, TPE2 D, TPE3, TPE3 D 100-40	1 (0.1)	1 (0.1)	6 (0.4)	16 (1.1)	25 (1.7)
TPE2, TPE2 D, TPE3, TPE3 D 100-120	1 (0.1)	1 (0.1)	9 (0.6)	19 (1.3)	28 (1.9)
TPE2, TPE2 D, TPE3, TPE3 D 100-150	1 (0.1)	3 (0.2)	10 (0.7)	20 (1.4)	29 (2)
TPE2, TPE2 D, TPE3, TPE3 D 100-180	1 (0.1)	4 (0.3)	12 (0.8)	22 (1.5)	30 (2.1)

## 22. Grundfos Product Center

Online search and sizing tool to help you make the right choice.

<http://product-selection.grundfos.com>



This drop-down menu enables you to set the search function to "Products" or "Literature".

"SIZING" enables you to size a pump based on entered data and selection choices.

"REPLACEMENT" enables you to find a replacement product. Search results will include information on the following:

- the lowest purchase price
- the lowest energy consumption
- the lowest total life cycle cost.

The screenshot shows the Grundfos Product Center website. At the top, there is a navigation bar with the Grundfos logo and 'PRODUCT CENTER'. Below this is a search bar with a dropdown menu set to 'Products' and a 'SEARCH' button. The main content area features four large buttons: 'Sizing' (with a subtext 'Enter pump sizing'), 'Catalog' (with a subtext 'Product and services'), 'Replacement' (with a subtext 'Replace an old pump with a new'), and 'Liquids' (with a subtext 'Find liquid pump'). Below these buttons, there are three tabs: 'Quick sizing', 'Advanced sizing by application', and 'Guided selection'. The 'Quick sizing' tab is active, showing input fields for 'Flow (Q)' and 'Head (H)' with units 'US gpm' and 'ft' respectively. There are also radio buttons for 'Select what to size by:' with options 'Size by application', 'Size by pump design', and 'Size by pump family'. A 'START SIZING' button is located at the bottom right of the sizing section.

"CATALOGUE" gives you access to the Grundfos product catalogue.

"LIQUIDS" enables you to find pumps designed for aggressive, flammable or other special liquids.

### All the information you need in one place

Performance curves, technical specifications, pictures, dimensional drawings, motor curves, wiring diagrams, spare parts, service kits, 3D drawings, documents, system parts. The Product Center displays any recent and saved items - including complete projects - right on the main page.



### Downloads

On the product pages, you can download installation and operating instructions, data booklets, service instructions, etc. in PDF format.

## Grundfos GO

### Mobile solution for professionals on the GO!

Grundfos GO is the mobile tool box for professional users on the go. It is the most comprehensive platform for mobile pump control and pump selection including sizing, replacement and documentation. It offers intuitive, handheld assistance and access to Grundfos online tools, and it saves valuable time for reporting and data collection.

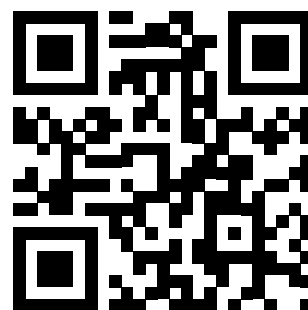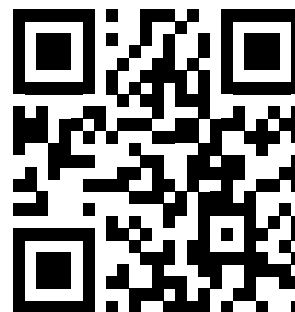

99526972 0119

ECM: 1253458

**GRUNDFOS Chicago**

3905 Enterprise Court  
P.O. Box 6620  
Aurora, IL 60598-0620  
Phone: +1-630-236-5500  
Fax: +1-630-236-5511

**GRUNDFOS Kansas City**

9300 Loiret Boulevard  
Lenexa, Kansas 6619  
Phone: +1-913-227-3400  
Fax: +1-913-227-3500

**GRUNDFOS CBS**

902 Koomey Road  
Brookshire, TX 77423  
Phone: +1-281-994-2700  
Fax: +1-800-945-4777

**GRUNDFOS Indianapolis**

2005 Dr. Martin Luther King, Jr. Street  
Indianapolis, IN 46202  
Phone: +1-317-925-9661  
Fax: +1-317-924-7388

[www.grundfos.us](http://www.grundfos.us)

**Canada**

GRUNDFOS Canada  
2941 Brighton Road  
Phone: +1-905-829-9533  
Fax: +1-905-829-9512

[www.grundfos.ca](http://www.grundfos.ca)

**México**

GRUNDFOS México  
Boulevard TLC No. 15  
Parque Industrial Stiva Aeropuerto  
Phone: +011-52-81-8144-4000  
Fax: +011-52-81-8144-4010

[www.grundfos.mx](http://www.grundfos.mx)

**GRUNDFOS** 