

## **How to transfer CUE settings to another VLSC**

Go to settings and the 0-5.

Under 0-Operation / Display

Select 0-0 Basic settings and then press OK button.

Push right arrow key over until you see LCP Copy.

Should be 0-50

Copy All to LCP

*Remove the Local Control Panel (LCP) from CUE*

Place it in the CUE to be programmed.

Go to settings and the 0-5.

Under 0-Operation / Display

Select 0-0 Basic settings and then press OK button.

Push right arrow key over until you see LCP Copy.

Should be 0-50

Copy From LCP