


BACnet for Grundfos boosters

CIM/CIU 300 BACnet MS/TP

CIM/CIU 500 BACnet IP

Functional profile and user manual

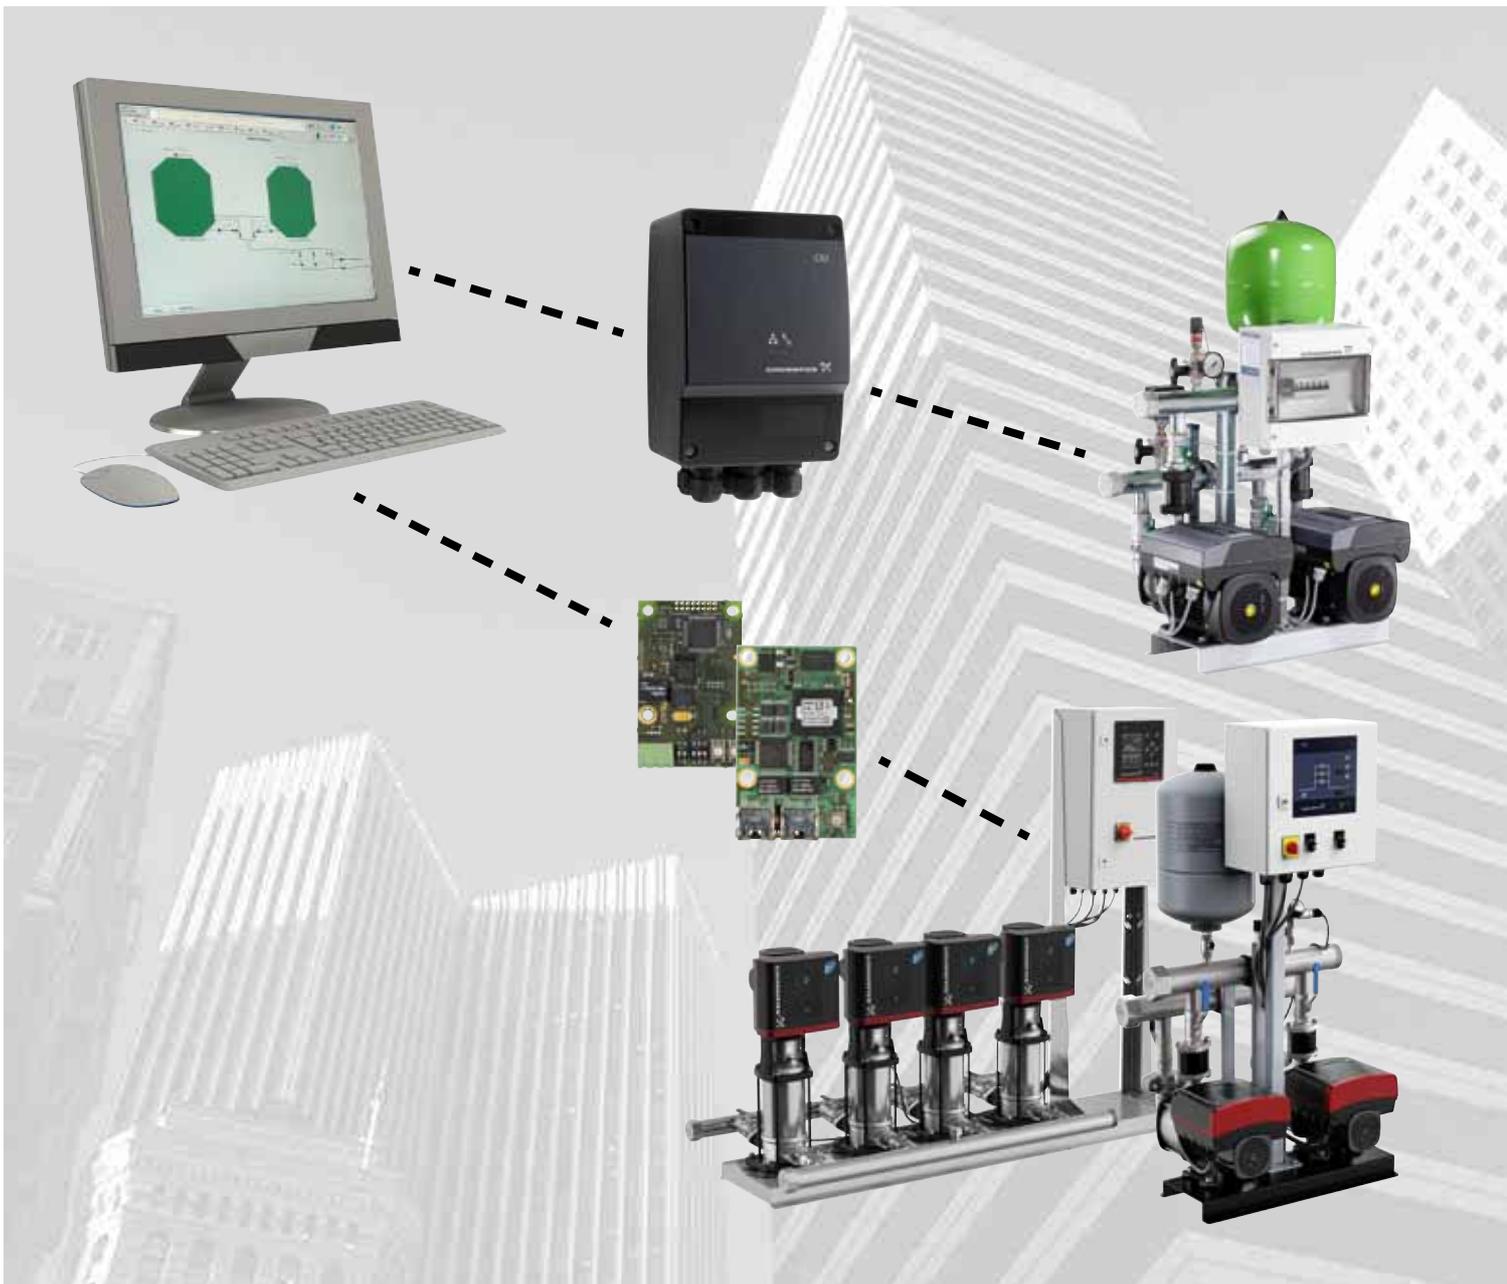

Original functional profile and user manual.

This functional profile describes Grundfos BACnet for boosters.

CONTENTS

	Page
1. General information	2
1.1 Hazard statements	2
1.2 Notes	2
2. Introduction	3
2.1 About this functional profile	3
2.2 Assumptions	3
2.3 Definitions and abbreviations	3
2.4 System diagram	4
2.5 Specifications	5
3. BACnet MS/TP, CIM 300 setup	7
3.1 BACnet bus topology	7
3.2 CIM 300 BACnet module	7
3.3 Connecting to the BACnet network	8
3.4 Setting the BACnet transmission speed	8
3.5 Selecting the Device Object Instance Number	8
3.6 Selecting the Device Object Name	9
3.7 Selecting the BACnet MAC address	9
3.8 Termination resistor	9
3.9 Cable length	9
3.10 LEDs	9
3.11 LED1, BACnet MS/TP communication	9
3.12 LED2, internal communication	9
4. BACnet IP, CIM 500 setup	10
4.1 Connecting the ethernet cable	10
4.2 Setting the Industrial Ethernet protocol	10
4.3 Setting the IP addresses	11
4.4 Establishing connection to the webserver	11
4.5 Status LEDs	11
4.6 DATA and LINK LEDs	11
5. Supported services	12
5.1 Data-sharing services	12
5.2 Device management services	12
6. Object overview	13
6.1 Device Object	13
6.2 Binary inputs	14
6.3 Binary outputs	17
6.4 Multistate inputs	18
6.5 Multistate outputs	20
6.6 Analog inputs	22
6.7 Analog outputs	25
6.8 Analog values	26
7. Detailed descriptions	28
7.1 Control modes	28
7.2 Setpoint	29
7.3 BACnet communication watchdog	30
7.4 Fault monitoring and resetting	30
7.5 Control via BACnet	31
7.6 Product simulation	31
7.7 Tank-filling applications	31
7.8 Remote sensors (CU 352)	31
8. Commissioning of hardware: step-by-step setup	32
8.1 CIM 300	32
8.2 CIU 300	32
8.3 CIM 500	32
8.4 CIU 500	33
9. Fault finding the product	34
9.1 CIM/CIU 300	34
9.2 CIM/CIU 500	35
10. BACnet telegrams	37
10.1 BACnet MS/TP telegram overview	37
10.2 Telegram types	37
11. BACnet MAC address, CIM 300	38



Read this document before installing the product. Installation and operation must comply with local regulations and accepted codes of good practice.

1. General information**1.1 Hazard statements**

The symbols and hazard statements below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.

**DANGER**

Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.

**WARNING**

Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.

**CAUTION**

Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The hazard statements are structured in the following way:

**SIGNAL WORD****Description of hazard**

Consequence of ignoring the warning.

- Action to avoid the hazard.

1.2 Notes

The symbols and notes below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



Observe these instructions for explosion-proof products.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



Tips and advice that make the work easier.

2. Introduction

2.1 About this functional profile

This functional profile describes CIM/CIU 300 for BACnet MS/TP and CIM/CIU 500 for BACnet ethernet IP as part of a communication interface with the following Grundfos booster systems:

- Grundfos Hydro Multi-B (CU 323)
- Grundfos Hydro MPC (CU 35X)
- Grundfos Control MPC (CU 35X)
- Grundfos Hydro Multi-E.



TPED twin-head pump with MGE motors model H or later in multipump mode and MAGNA3 Twin-head pump in multipump mode, requires a CIM module installed in the master pump.

The object lists for Hydro MPC and Control MPC are identical, so in the following, only Hydro MPC is mentioned. If not specifically mentioned, Hydro Multi-B, Hydro MPC and Hydro Multi-E are referred to as "booster system".

Grundfos cannot be held responsible for any problems caused directly or indirectly by using information in this functional profile.

2.2 Assumptions

This functional profile assumes that the reader is familiar with commissioning and programming BACnet devices. The reader should also have some basic knowledge of the BACnet protocol and technical specifications.

It is also assumed that an existing BACnet MS/TP or IP network is present.

2.3 Definitions and abbreviations

ARP	Address Resolution Protocol. Translates IP addresses into MAC addresses.
Auto-MDIX	Ensures that both crossover cable types and non-crossover cable types can be used.
CAT5	Ethernet cable with four twisted pairs of wires.
CAT5e	Enhanced CAT5 cable with better performance.
CAT6	Ethernet cable compatible with CAT5 and CAT5e and with very high performance.
CIM 300	Communication Interface Module 300.
CIU 300	Communication Interface Unit 300.
CRC	Cyclic Redundancy Check. A data error detection method.
CU 323	Grundfos Control Unit 323.
CU 35X	Grundfos Control Units 351 and 352.
Device	A node on the BACnet MS/TP network.
DHCP	Dynamic Host Configuration Protocol. Used to configure network devices so that they can communicate on an IP network.
DNS	Domain Name System. Used to resolve host names to IP addresses.
GENIbus	Proprietary Grundfos fieldbus standard based on RS-485.
GENIpro	Proprietary Grundfos fieldbus protocol.
Grundfos GO Remote	A Grundfos application designed to control Grundfos products via infrared or radio communication. Available for iOS and Android devices.
HTTP	Hyper Text Transfer Protocol. The protocol commonly used to navigate the world wide web.
IANA	Internet Assigned Numbers Authority.
Inter-network	A set of two or more BACnet networks interconnected by routers.
IP	Internet Protocol.
LED	Light-Emitting Diode.

MAC	Media Access Control. Unique network address for a piece of hardware.
MPC	Multi-Pump Controller.
MS/TP	Master-Slave / Token-Passing. A data protocol used for BACnet RS-485.
Ping	Packet InterNet Groper. A software utility that tests the connectivity between two TCP/IP hosts.
Router	A device that connects two or more networks at the network layer.
SELV	Separated or Safety Extra-Low Voltage.
SELV-E	Separated or Safety Extra-Low Voltage with earth connection.
SMTP	Simple Mail Transfer Protocol.
SNTP	Simple Network Time Protocol. Used for clock synchronisation between computer systems.
TCP	Transmission Control Protocol. Protocol for Internet communication and Industrial Ethernet communication.
TCP/IP	Transmission Control Protocol/Internet Protocol. Protocol for Internet communication.
Transmission speed	Bits transferred per second.
Trunk cable	Main RS-485 cable on a BACnet MS/TP network.
URL	Uniform Resource Locator. The IP address used to connect to a server.
UTC	Coordinated Universal Time. The primary time standard by which the world regulates clocks and time.
UTF-8	Unicode Transformation Format. Character encoding.
VPN	Virtual Private Network. A network using the Internet to connect nodes. These systems use encryption and other security mechanisms to ensure that only authorised users can access the network and that the data cannot be intercepted.

2.4 System diagram

Figs 1 and 2 give an overview of how to connect the module or unit to the Grundfos booster system that is to be connected to a BACnet network.

Hydro MPC, Control MPC and Multi-E boosters are available in two variants. They have different CIM/CIU connections as described below.

CIM solution

A Communication Interface Module (CIM) is an add-on communication module that you fit into these products:

- CU 352 MPC
- CU 323 Multi-B
- Multi-E based on MGE motors model H or later
- TPED twin-head pump in multipump mode
- MAGNA3-D twin-head pump in multipump mode.

In this setup, the booster system will supply power to the module. See fig. 1.

CIU solution

A Communication Interface unit (CIU) is a box incorporating a power supply module and a CIM 300 BACnet module. It can either be mounted on a DIN rail or on a wall. See fig. 2.

The unit is used with these products:

- CU 351 MPC
- Multi-E based on MGE motors before model H.

The Hydro MPC with CU 351 or Hydro Multi-E controls and monitors a number of pumps (2 to 6), all connected with RS-485 cables. If fitted with an extra GENibus module, the Hydro MPC with CU 351 can be connected to the unit via a RS-485 cable.



CU 351 must have an external GENibus module installed in order to communicate with the CIU BACnet unit.



Fig. 1 CIM solution for Hydro Multi-B

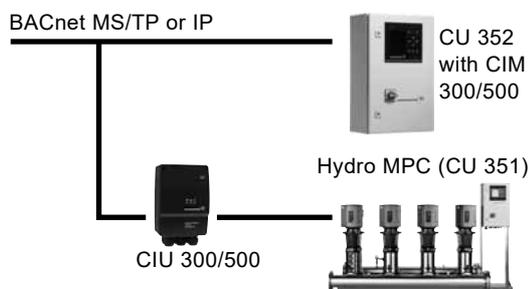


Fig. 2 Solution with CIM 300 and 500 for CU 352 and CIU for Hydro Multi-E (CU 351)

2.5 Specifications

The table below provides an overview of the specifications for Grundfos CIM/CIU 300 for BACnet MS/TP and CIM/CIU 500 for BACnet IP. For further details, please refer to the specific sections of this functional profile.

General data	Description	Comments
Ambient humidity	30-95 %	Relative, non-condensing.
Operating temperature	-20 to +45 °C	
Storage temperature	-25 to +70 °C	
GENIbus visual diagnostics	LED2	The LED will be in one of these states: Off, permanently green, flashing red, permanently red. See section 3.10 LEDs .
BACnet MS/TP	Description	Comments
BACnet connector	Screw-type terminal	3 pins. See section 3.2 CIM 300 BACnet module .
BACnet connection type	RS-485	
BACnet wire configuration	2-wire + ground	Conductors: Plus, Minus and Ground. See section 3.3 Connecting to the BACnet network .
Maximum cable length [m]	1200	Equals 4000 ft.
Recommended cross-section of BACnet cable	0.20 - 0.25 mm ²	AWG24 or AWG23
MAC address	0-127	Set via rotary switches SW6 and SW7. See section 3.7 Selecting the BACnet MAC address .
Line termination	On or Off	Set via DIP switches SW1 and SW2. See section 3.8 Termination resistor .
Supported transmission speeds [bits/s]	9600, 19200, 38400, 76800	Set via DIP switches SW4 and SW5. See section 3.4 Setting the BACnet transmission speed .
Data bits	8	Fixed value.
Stop bits	1	Fixed value.
Parity	None	Fixed value.
BACnet visual diagnostics	LED1	Red and green status LED. See section 3.11 LED1, BACnet MS/TP communication .
Maximum number of BACnet devices	32	Using repeaters, this number can be increased.
Grundfos BACnet vendor ID	227	
BACnet segmentation support	No	
Character set support	ANSI X3.4 and UTF8	Supported character sets.
BACnet device profile	B-ASC	BACnet Application-Specific Controller.
BACnet MS/TP master	Yes	CIM/CIU 300 is a BACnet MS/TP master device.
Manual slave address binding	No	
BACnet protocol revision	For hardware version R4: 4 For hardware version R8: 9	

BACnet IP	Description	Comments
Application layer	DHCP, HTTP, Ping, FTP, SMTP, SNTP, BACnet IP	Rotary switch in position 2.
Transport layer	UDP	
Internet layer	Internet protocol V4 (IPv4)	
Link layer	ARP, media access control (ethernet)	
Ethernet cable	CAT5, CAT5e or CAT6	Supports auto cable-crossover detecting (Auto-MDIX).
Maximum cable length	100 metres at 10/100 Mbits/s	Corresponds to 328 feet.
Transmission speed	10 Mbits/s, 100 Mbits/s	Auto-detected.
Industrial Ethernet protocols	PROFINET IO, Modbus TCP, BACnet IP etc.	Selected with rotary switch. See section 4.2 Setting the Industrial Ethernet protocol .
BACnet protocol revision	9	

CIM 300 and 500	Description	Comments
Dimensions [w x h x d] [mm]	50 x 19 x 80	
Power supply		Supplied by the booster system.
Connection to booster system	10-pin connection	

CIU 300 and 500	Description	Comments
CIU box dimensions (H x W x D)	182 x 108 x 82 mm	
Power supply	24-240 V AC/DC	Located in the unit.
GENIbus connection type	RS-485, 3-wire + screen	Conductors: A, B and Y.
Enclosure class	IP54	
Recommended cross-section of GENIbus cable	0.20 - 0.25 mm ²	AWG24 or AWG23

3. BACnet MS/TP, CIM 300 setup

3.1 BACnet bus topology

Grundfos CIM/CIU 300 is connected as a BACnet MS/TP master directly to the BACnet MS/TP network.

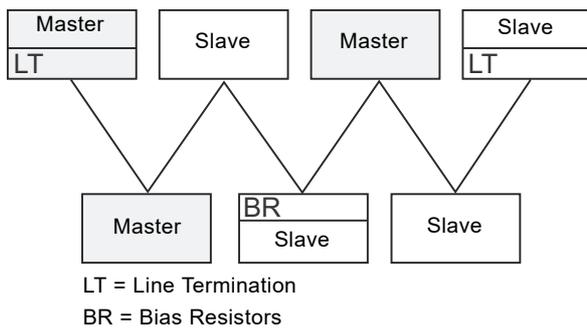


Fig. 3 Example of BACnet MS/TP network

BACnet MS/TP is a multi-master system, meaning that there can be more than one master on the network. It uses a token to control access to the bus network. A master node may initiate the transmission of a data telegram when it holds the token. Both master and slave nodes may transmit data telegrams in response to requests from master nodes, but slaves never hold the token. Master nodes pass the token between them.

A BACnet MS/TP segment is a single contiguous medium to which BACnet nodes are attached. Segments can be connected by use of repeaters or bridges, thus forming networks.

Multiple networks may be interconnected by BACnet routers to form a BACnet inter-network.

3.1.1 Line termination resistors

Line termination must be connected at each of the two ends of the segment medium. CIM/CIU 300 has optional line termination resistor on board.

3.1.2 Bias resistors

At least one set, and no more than two sets, of network bias resistors must exist for each segment so that an undriven communications line will be held in a guaranteed logical one state. The bias provides a reliable way for stations to detect the presence or absence of signals on the line. An unbiased line will take an indeterminate state in the absence of any driving node.

CIM/CIU 300 has no bias resistors.

3.2 CIM 300 BACnet module

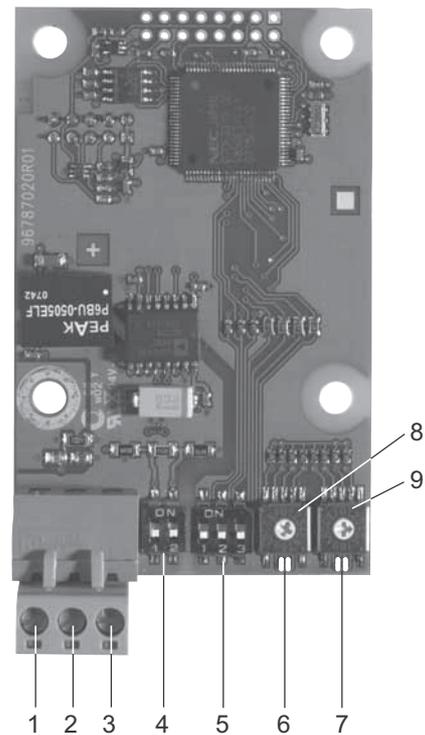


Fig. 4 CIM 300 BACnet module

Pos.	Designation	Description
1	Plus	BACnet Plus terminal, RS-485 positive data signal
2	Minus	BACnet Minus terminal, RS-485 negative data signal
3	Ground	BACnet Ground terminal
4	SW1/SW2	On and off switches for termination resistor
5	SW3/SW4/SW5	Switches for selecting the BACnet transmission speed and the default or custom Device Object Instance Number
6	LED1	Red and green status LED for BACnet communication
7	LED2	Red and green status LED for internal communication between CIM 300 and the booster system
8	SW6	Hexadecimal rotary switch for setting the BACnet MAC address (four most significant bits)
9	SW7	Hexadecimal rotary switch for setting the BACnet MAC address (four least significant bits)

3.3 Connecting to the BACnet network

Use a screened, twisted-pair cable.

BACnet terminal	Recommended colour	Data signal
Plus	Red	Positive
Minus	Green	Negative
Ground	Grey	Ground

The ANSI/ASHRAE BACnet standard states that the cable screen must only be earthed at one end of the segment to prevent earth fault currents.

3.4 Setting the BACnet transmission speed

Set the transmission speed correctly before CIM 300 is ready to communicate on the BACnet MS/TP network. Use DIP switches SW4 and SW5 to set the transmission speed.

The default transmission speed is 9600 bits/s, but we recommend higher speeds for better data throughput. All devices on the BACnet MS/TP network must communicate at the same transmission speed.

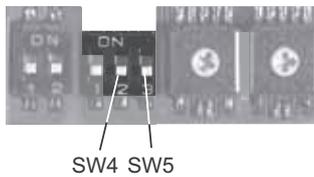


Fig. 5 BACnet transmission speed settings

3.4.1 DIP switch settings

Available transmission speeds in bits/s: 9600, 19,200, 38,400 and 76,800.

Use DIP switches SW4 and SW5 to select the desired speed.

Transmission speed [bits/s]	SW4	SW5
9600	OFF	OFF
19,200	OFF	ON
38,400	ON	OFF
76,800	ON	ON

The default transmission speed is 9600 bit/s, as per the BACnet MS/TP standard. The transmission speed will be effective immediately after setting the values of the DIP switch.

TM04 1710 0908

3.5 Selecting the Device Object Instance Number

The Device Object Identifier value consists of two components:

- a 10-bit Object Type (bits 22 to 31)
- a 22-bit Instance Number (bits 0 to 21).



Fig. 6 Bit numbers

The Object Type is fixed and determines that it is a Device Object. The Instance Number is a numeric code that is used to identify the device. It must be unique inter-network-wide, i.e. on all interconnected networks.

CIM 300 offers two different approaches to setting the BACnet Device Object Instance Number: default and custom, both described in the following subsections.

3.5.1 Default Instance Number

By default, CIM 300 uses a pre-defined Device Object Instance Number, which is 227XXX where XXX is the BACnet MAC address. This gives an Instance Number range of 227000 to 227127. See section 3.7 *Selecting the BACnet MAC address* for more information on MAC addresses.

Example

The BACnet MAC address is set to 20 via the hexadecimal rotary switches, so the Device Object Instance number is 227020.

3.5.2 Custom Instance Number

To use the complete Instance Number range, set the new Instance Number with the BACnet object Custom Device Object Instance Number (AV, 0), and set SW3 to ON. This will immediately set the new Device Object Instance Number. See fig. 7 for DIP switch location.

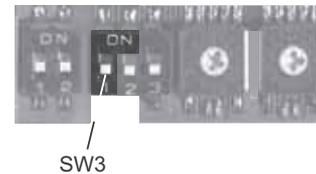


Fig. 7 Device Object Instance Number

Device Object Instance Number	SW3
Default (227000 + BACnet MAC address)	OFF
Custom, set with object (AV, 0)	ON

The default Present_Value of the Custom Device Object Instance Number is 231.

Example

The Present_Value of the Custom Device Object Instance Number (AV, 0) is 231, so the Device Object Instance Number is 231.



The Present_Value of the Custom Device Object Instance Number cannot be 4194303, as this is a reserved value.

TM04 5977 4509

TM04 1709 0908

3.6 Selecting the Device Object Name

The property Device_Name is a character string that must be unique inter-network-wide. By default, the name will be constructed as "Grundfos - XXXXXX" where XXXXXX is the current Device Object Instance Number as described in section [3.5 Selecting the Device Object Instance Number](#).

Example

The Device Object Instance Number is 227001, so the Device Object Name is "Grundfos - 227001".

If a new name is selected, it will be stored in the device and replace the default naming scheme.

3.7 Selecting the BACnet MAC address

To set the BACnet MAC address, use the two hexadecimal rotary switches, SW6 and SW7.

The value must be within the range of 0 to 127. An illegal value will result in a MAC address of 0.

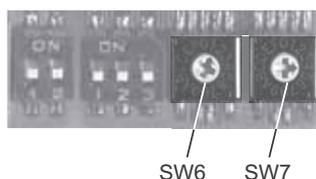


Fig. 8 Setting the BACnet MAC address

For a complete overview of BACnet addresses, see section [11. BACnet MAC address, CIM 300](#).



You must set the BACnet MAC address decimally from 0 to 127 and it must be unique on the BACnet MS/TP segment.

3.8 Termination resistor

A termination resistor for line termination is fitted on CIM 300 and has a value of 120 Ω . It is to be cut in if CIM 300 is set as the last station on the network.

CIM 300 has two DIP switches, SW1 and SW2, for cutting the termination resistor in and out. Fig. 9 shows the DIP switches in cut-out state.

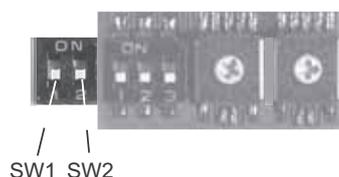


Fig. 9 Cutting the termination resistor in and out

Status	SW1	SW2
Cut in	ON	ON
	OFF	OFF
Cut out	ON	OFF
	OFF	ON

Default setting: Termination resistor cut out.

3.9 Cable length

The maximum recommended cable length within a BACnet MS/TP segment is 1200 metres (4000 ft) with 0.82 mm² (AWG 18) cable.

The connection between the BACnet modules must be made by use of a screened, twisted-pair cable with a characteristic impedance between 100 and 130 Ω .

3.10 LEDs

CIM/CIU 300 has two LEDs.

- Red and green status LED (LED1) for BACnet MS/TP communication
- Red and green status LED (LED2) for internal communication between CIM/CIU 300 and the booster system.

3.11 LED1, BACnet MS/TP communication

Status	Description
Off	No communication.
Flashing green	Communication active.
Flashing red	Fault in the BACnet communication.
Permanently red	Fault in the CIM 300 BACnet configuration.

3.12 LED2, internal communication

Status	Description
Off	CIM/CIU 300 has been switched off or is starting up.
Flashing red	No internal communication between CIM/CIU 300 and the booster system.
Permanently red	CIM/CIU 300 does not support the connected booster system.
Permanently green	Internal communication between CIM/CIU 300 and the booster system is OK.



During startup, there may be a delay of up to 5 seconds before the LED status is updated.

4. BACnet IP, CIM 500 setup



WARNING

Electric shock

Death or serious personal injury
 - Connect CIM 500 only to SELV or SELV-E circuits.

4.1 Connecting the ethernet cable

Use RJ45 plugs and ethernet cable. Connect the cable shield to protective earth at both ends.



It is important to connect the cable shield to earth through an earth clamp or to connect the cable shield to earth in the connector.

Maximum cable length

Speed [Mbits/s]	Cable type	Maximum cable length [m/ft]
10	CAT5	100/328
100	CAT5e, CAT6	100/328

CIM 500 is designed for flexible network installation. The built-in two-port switch makes it possible to daisy chain from product to product without the need of additional ethernet switches. The last product in the chain is only connected to one of the ethernet ports. Each ethernet port has its own MAC address.

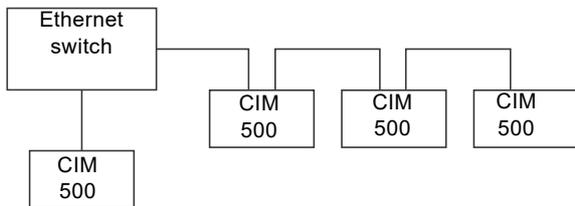


Fig. 10 Example of Industrial Ethernet network

TM05 6435 4711

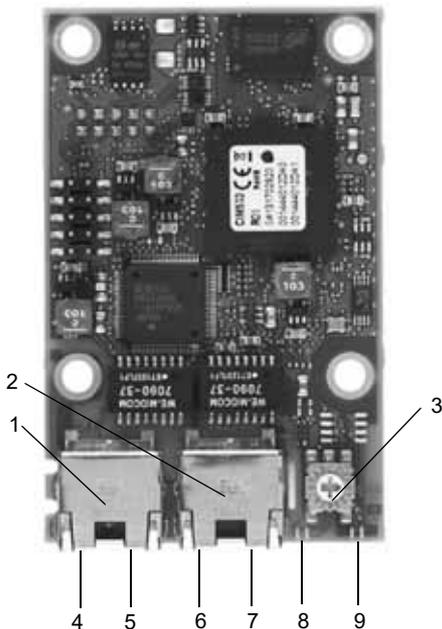


Fig. 11 Example of ethernet connection

TM05 7431 1013

Pos.	Description	Designation
1	Industrial Ethernet RJ45 connector 1	ETH1
2	Industrial Ethernet RJ45 connector 2	ETH2
3	Rotary switch for protocol selection	SW1
4	Data activity LED for connector 1	DATA1
5	Link LED for connector 1	LINK1
6	Data activity LED for connector 2	DATA2
7	Link LED for connector 2	LINK2
8	Green and red status LED for ethernet communication	LED1
9	Green and red status LED for internal communication between the module and the booster system.	LED2

4.2 Setting the Industrial Ethernet protocol

The CIM 500 ethernet module has a rotary switch for selection of the Industrial Ethernet protocol. See fig. 8.

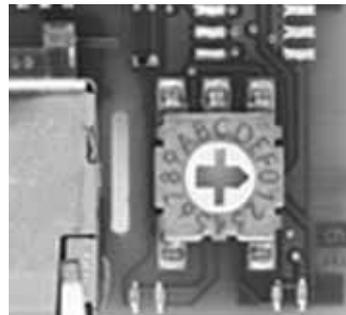


Fig. 12 Selecting the Industrial Ethernet protocol

TM05 7431 1013

Pos.	Description
0	PROFINET IO (default)
1	Modbus TCP
2	BACnet IP
3	EtherNet/IP
4	GRM IP (requires a contract with Grundfos)
5.E	Reserved, LED1 will be permanently red to indicate an invalid configuration. Reset to factory default.
F	Note: The rotary switch must be set in this position for 20 seconds to reset to factory default. During this period, LED1 flashes red and green at the same time to indicate that a reset will occur.



Every change of the rotary switch while the module is powered on will cause the module to restart.

4.3 Setting the IP addresses

The CIM 500 ethernet module is default set to a fixed IP address. You can change the IP address settings from the built-in webserver.

Default IP settings used by the webserver	IP address: 192.168.1.100	Subnet mask: 255.255.255.0	Gateway: 192.168.1.1
IP settings for BACnet IP	Make the settings via the webserver		

4.4 Establishing connection to the webserver

You can configure CIM 500 using the built-in webserver. To establish a connection from a PC to CIM 500, the following steps are required:

- Connect the PC and the CIM 500 module using an ethernet cable.
- Configure the PC ethernet port to the same subnetwork as CIM 500, for example 192.168.1.101, and the subnet mask to 255.255.255.0. See section [A.1 How to configure an IP address on your PC](#) on page 42.
- Open a standard Internet browser and type 192.168.1.100 in the URL field.
- Log in to the webserver:

User	admin (default)
Password	Grundfos (default)



User name and password may have been changed from their default values.



TM05 6436 4712

Fig. 13 CIM 500 connected to PC via ethernet cable

For further information on how to use the webserver, see section [A.2 Webserver configuration](#) on page 42.



You can use both ETH1 and ETH2 to establish a connection to the webserver.



You can access the webserver while the selected Industrial Ethernet protocol is active.

4.5 Status LEDs

The CIM 500 ethernet module has two status LEDs, LED1 and LED2. See fig. 11.

- Red and green status LED (LED1) for ethernet communication
- Red and green status LED (LED2) for internal communication between CIM 500 and the Grundfos product.

LED1

Status	Description
Off	No BACnet IP communication or switched off.
Flashing green	BACnet IP communication active.
Permanently red	CIM 500 module configuration fault. See section 9.2.1 LED status .
Permanently red and green	Error in firmware download. See section 9.2.1 LED status .
Flashing red and green	Resetting to factory default. After 20 seconds, CIM 500 restarts.

LED2

Status	Description
Off	CIM 500 is switched off.
Flashing red	No internal communication between CIM 500 and the Grundfos product.
Permanently red	CIM 500 does not support the Grundfos product connected.
Permanently green	Internal communication between CIM 500 and the Grundfos product is OK.
Permanently red and green	Memory fault.



During startup, there is a delay of up to 5 seconds before LED1 and LED2 status is updated.

4.6 DATA and LINK LEDs

The CIM 500 ethernet module has two connectivity LEDs related to each RJ45 connector. See fig. 11.

DATA1 and DATA2

These yellow LEDs indicate data traffic activity.

Status	Description
Yellow off	No data communication on the RJ45 connector.
Yellow flashing	Data communication ongoing on the RJ45 connector.
Permanently yellow	Heavy network traffic.

LINK1 and LINK2

These green LEDs show whether the ethernet cable is properly connected.

Status	Description
Green off	No ethernet link on the RJ45 connector.
Green on	Ethernet link on the RJ45 connector is OK.

5. Supported services

BACnet Interoperability Building Blocks (BIBBs) are collections of one or more BACnet services. These are described in terms of an "A" and a "B" device. Both devices are nodes on a BACnet inter-network. In most cases, the "A" device will act as the user of data (client), and the "B" device will be the provider of this data (server).

CIM/CIU 300 and 500 are BACnet Application-Specific Controllers (B-ASC) with a few additional services.

5.1 Data-sharing services

Name	BACnet BIBB code	Notes	Initiate	Execute
ReadProperty	DS-RP-B	CIM/CIU 300 and 500 can be a provider of data.	-	•
ReadPropertyMultiple	DS-RPM-B	CIM/CIU 300 and 500 can be a provider of data and return multiple values at one time.	-	•
WriteProperty	DS-WP-B	CIM/CIU 300 and 500 allow a value to be changed over the network.	-	•
WritePropertyMultiple	DS-WPM-B	CIM/CIU 300 and 500 allow multiple values to be changed over the network.	-	•
SubscribeCOV			-	•
ConfirmedCOVNotification	DS-COV-B	CIM/CIU 300 and 500 can be a provider of "Change Of Value" data. It supports up to 10 simultaneous COV subscriptions. Subscription lifetime can be limited or unlimited.	•	-
UnconfirmedCOVNotification			•	-

5.2 Device management services

Name	BACnet BIBB code	Notes	Initiate	Execute
Who-Is			•	-
I-Am	DM-DDB-A	CIM/CIU 300 and 500 can seek information about device attributes of other devices and interpret device announcements.	-	•
Who-Is			-	•
I-Am	DM-DDB-B	CIM/CIU 300 and 500 can provide information about their device attributes and responds to requests to identify themselves.	•	
Who-Has			-	•
I-Have	DM-DOB-B	CIM/CIU 300 and 500 can provide address information about their objects upon request.	•	-
DeviceCommunicationControl	DM-DCC-B	CIM/CIU 300 and 500 can respond to communication control requests. They support both limited and unlimited duration.	-	•

6. Object overview

6.1 Device Object

The following properties are supported in the Device Object (available for all booster system types).

Property identifier	Data type	Notes	Access
Object_Identifier	BACnetObjectIdentifier	See section 3.5 Selecting the Device Object Instance Number .	R
Object_Name	CharacterString	See section 3.6 Selecting the Device Object Name .	W
Object_Type	BACnetObjectType	DEVICE.	R
System_Status	BACnetDeviceStatus	OPERATIONAL.	R
Vendor_Name	CharacterString	Grundfos.	R
Vendor_Identifier	Unsigned16	227.	R
Model_Name	CharacterString	Will show the Grundfos booster system model to which CIM/CIU 300 is connected.	R
Firmware_Revision	CharacterString	Revision of the firmware in the CIM/CIU 300.	R
Application_Software_Version	CharacterString	Software build date, DD-MM-YYYY.	R
Location	CharacterString	The user can enter a location here (maximum 200 characters).	W
Description	CharacterString	The user can enter a description here (maximum 200 characters).	W
Protocol_Version	Unsigned	Actual version of the BACnet protocol.	R
Protocol_Revision	Unsigned	Actual revision of the BACnet protocol.	R
Protocol_Services_Supported	BACnetServicesSupported	Indicates which standardised protocol services are supported.	R
Protocol_Object_Types_Supported	BACnetObjectTypesSupported	Indicates which standardised protocol object types are supported.	R
Object_List	BACnetARRAY[N] of BACnetObjectIdentifier	An array of objects available.	R
Max_APDU_Length_Accepted	Unsigned	CIM 300: The maximum number of bytes that may be contained in a single APDU. Fixed to 480. CIM 500: The maximum is 1476.	R
Segmentation_Supported	BACnetSegmentation	Indicates if segmentation of messages is possible. Will always read NO_SEGMENTATION.	R
APDU_Timeout	Unsigned	Indicates the amount of time in ms before time-out.	R
Number_Of_APDU_Retries	Unsigned	Maximum number of times an APDU is to be retransmitted.	R
Max_Master	Unsigned	Specifies the highest possible MAC address for master nodes and must be between 1 and 127. The default value is 127, but this value can be lowered by the user. The Max_Master value must be higher than or equal to the highest MAC address used by a master node in an MS/TP network.	W
Max_Info_Frames	Unsigned	Specifies the maximum number of information frames that are sent before the token is passed on. Fixed to 1.	R
Device_Address_Binding	List of BACnetAddress-Bindings	Holds address bindings to other devices, if any.	R
Database_Revision	Unsigned	Logical revision number for the device database.	R

6.2 Binary inputs

Binary objects that provide information from the Grundfos booster system.

ID	Object name	R/W	Notes	MGE model H and later Twin-head pump +			
				MAGNA3 Twin-head pump	Hydro Multi-B	Hydro MPC	Hydro Multi-E
Bl, 0	Control source status	R	Status of the actual control source. 0: Local control 1: Bus control.	•	•	•	•
Bl, 2	Rotation status	R	Rotation status. 0: No rotation 1: Rotation (one or more pumps running).	•	•	•	•
Bl, 3	At minimum speed	R	0: Not running at minimum speed 1: Running at minimum speed.	•	-	•	•
Bl, 4	At maximum speed	R	0: Not running at maximum speed 1: Running at maximum speed.	•	-	•	•
Bl, 5	Standby pumps active	R	0: Standby pumps not active 1: Standby pumps active.	-	-	•	-
Bl, 6	Pressure relief active	R	0: Pressure relief not active 1: Pressure relief active.	-	-	•	-
Bl, 7	Soft pressure active	R	0: Soft pressure not active 1: Soft pressure active.	-	-	•	-
Bl, 8	Low-flow boost active	R	0: Low-flow boost not active 1: Low-flow boost active.	-	-	•	-
Bl, 9	Low-flow stop active	R	0: Low-flow stop not active 1: Low-flow stop active.	•	•	•	-
Bl, 10	Alternative setpoint active	R	0: Alternative setpoint not active 1: Alternative setpoint active.	-	-	•	-
Bl, 11	Digital input 1 status	R	0: Not active 1: Active.	•	•	•	•
Bl, 12	Digital input 2 status	R	0: Not active 1: Active.	•	•	•	•
Bl, 13	Digital input 3 status	R	0: Not active 1: Active.	H	•	•	•
Bl, 14	Digital output 1 status	R	0: Not active 1: Active.	•	•	•	•
Bl, 15	Digital output 2 status	R	0: Not active 1: Active.	•	•	•	•
Bl, 16	Subpump 1 presence	R	0: Subpump not present 1: Subpump present.	H	•	•	•
Bl, 17	Subpump 1 communication status	R	0: Communication OK 1: Communication fault.	H	•	•	•
Bl, 18	Subpump 2 presence	R	0: Subpump not present 1: Subpump present.	H	•	•	•
Bl, 19	Subpump 2 communication status	R	0: Communication OK 1: Communication fault.	H	•	•	•
Bl, 20	Subpump 3 presence	R	0: Subpump not present 1: Subpump present.	-	•	•	•
Bl, 21	Subpump 3 communication status	R	0: Communication OK 1: Communication fault.	-	•	•	•
Bl, 22	Subpump 4 presence	R	0: Subpump not present 1: Subpump present.	-	•	•	•
Bl, 23	Subpump 4 communication status	R	0: Communication OK 1: Communication fault.	-	•	•	•

ID	Object name	R/W	Notes	MGE model H and later Twin-head pump +			
				MAGNA3 Twin-head pump	Hydro Multi-B	Hydro MPC	Hydro Multi-E
Bl, 24	Subpump 5 presence	R	0: Subpump not present 1: Subpump present.	-	-	•	•
Bl, 25	Subpump 5 communication status	R	0: Communication OK 1: Communication fault.	-	-	•	•
Bl, 26	Subpump 6 presence	R	0: Subpump not present 1: Subpump present.	-	-	•	•
Bl, 27	Subpump 6 communication status	R	0: Communication OK 1: Communication fault.	-	-	•	•
Bl, 28	Fault simulation status	R	Fault simulation status. 0: Fault simulation disabled 1: Fault simulation enabled.	-	•	•	H
Bl, 31	At power limit	R	At power limit status. 0: Not at power limit 1: At power limit	•	-	-	-
Bl, 32	Subpump 1 auto mode	R	0: Manual control 1: Auto-control.	-	•	•	-
Bl, 33	Subpump 2 auto mode	R	0: Manual control 1: Auto-control.	-	•	•	-
Bl, 34	Subpump 3 auto mode	R	0: Manual control 1: Auto-control.	-	•	•	-
Bl, 35	Subpump 4 auto mode	R	0: Manual control 1: Auto-control.	-	•	•	-
Bl, 36	Subpump 5 auto mode	R	0: Manual control 1: Auto-control.	-	-	•	-
Bl, 37	Subpump 6 auto mode	R	0: Manual control 1: Auto-control.	-	-	•	-
Bl, 38	Setpoint influence active	R	0: No influence on setpoint 1: Setpoint influence active.	•	-	•	H
Bl, 39	Max flow limit enabled	R	0: Max flow limit disabled 1: Max flow limit enabled	M	-	-	H
Bl, 40	Pilot pump auto mode	R	0: Manual control 1: Auto-control.	-	-	•	-
Bl, 41	Pilot pump presence	R	0: Pilot pump not present 1: Pilot pump present.	-	-	•	-
Bl, 42	Pilot pump communication status	R	0: Communication OK 1: Communication fault.	-	-	•	-
Bl, 43	Back-up pump auto mode	R	0: Manual control 1: Auto-control.	-	-	•	-
Bl, 44	Back-up pump presence	R	0: Backup pump not present 1: Backup pump present.	-	-	•	-
Bl, 45	Back-up pump communication status	R	0: Communication OK 1: Communication fault.	-	-	•	-
Bl, 46	Subpump 1 running	R	0: not running, 1: running	H	-	•	-
Bl, 47	Subpump 2 running	R	0: not running, 1: running	H	-	•	-
Bl, 48	Subpump 3 running	R	0: not running, 1: running	-	-	•	-
Bl, 49	Subpump 4 running	R	0: not running, 1: running	-	-	•	-
Bl, 50	Subpump 5 running	R	0: not running, 1: running	-	-	•	-
Bl, 51	Subpump 6 running	R	0: not running, 1: running	-	-	•	-
Bl, 52	Pilot pump running	R	0: not running, 1: running	-	-	•	-
Bl, 53	Backup pump running	R	0: not running, 1: running	-	-	•	-

ID	Object name	R/W	Notes	MGE model H and later Twin-head pump + MAGNA3 Twin-head pump	Hydro Multi-B	Hydro MPC	Hydro Multi-E
BI, 54	Subpump 1 fault	R	1: fault	H	-	•	-
BI, 55	Subpump 2 fault	R	1: fault	H	-	•	-
BI, 56	Subpump 3 fault	R	1: fault	-	-	•	-
BI, 57	Subpump 4 fault	R	1: fault	-	-	•	-
BI, 58	Subpump 5 fault	R	1: fault	-	-	•	-
BI, 59	Subpump 6 fault	R	1: fault	-	-	•	-
BI, 60	Pilot pump fault	R	1: fault	-	-	•	-
BI, 61	Backup pump fault	R	1: fault	-	-	•	-
BI, 62	Flow estimation below range	R	0: Flow estimation not below range 1: Flow estimation below range	M	-	-	-
BI, 63	Flow estimation ABOVE range	R	0: Flow estimation not above range 1: Flow estimation above range	M	-	-	-
BI, 64	Forced to local	R	0: Not forced to local 1: Forced to local	M	-	-	-
BI, 65	Digital Input 3 status	R	0: not active 1: active	-	-	•	-
BI, 66	Digital Input 4 status	R	0: not active 1: active	-	-	•	-
BI, 67	Digital Input 5 status	R	0: not active 1: active	-	-	•	-
BI, 68	Digital Input 6 status	R	0: not active 1: active	-	-	•	-
BI, 69	Digital Input 7 status	R	0: not active 1: active	-	-	•	-
BI, 70	Digital Input 8 status	R	0: not active 1: active	-	-	•	-

H: For MGE model H and later only.

M: For MAGNA3 only.

6.3 Binary outputs

Binary objects for control of the Grundfos booster system.

ID	Object name	R/W	Notes	MGE model H and later Twin-head pump + MAGNA3 Twin-head pump	Hydro Multi-B	Hydro MPC	Hydro Multi-E
BO, 0	Set control source	W	Sets the control source. Set to 1 to enable control via BACnet. 0: Local control (default) 1: Bus control.	•	•	•	•*
BO, 1	Relay 1 control	W	Controls relay 1 if bus control is enabled and relay 1 is set to be controlled via bus. 0: Closed (default) 1: Open.	H	-	-	H
BO, 2	Relay 2 control	W	Controls relay 2 if bus control is enabled and relay 2 is set to be controlled via bus. 0: Closed (default) 1: Open.	H	-	-	H
BO, 4	Reset fault	W	Resets alarm if bus control is enabled. (Triggered on rising edge). 0: No resetting (default) 1: Resetting.	•	•	•	•*
BO, 5	Fault simulation	W	Enables fault simulation. 0: Disabled (default) 1: Enabled.	-	•	•	H
BO, 6	Copy settings to local	W	Copies remote settings to local pump settings. 0: Disabled 1: Enabled. If enabled, change BO, 0 to "1: Bus control"	•	-	-	H*
BO, 7	Relay 3 control	W	Controls relay 3 if bus control is enabled and relay 3 is set to be controlled via bus. 0: Closed (default) 1: Open.	H	-	-	H
BO, 8	Relay 4 control	W	Controls relay 4 if bus control is enabled and relay 4 is set to be controlled via bus. 0: Closed (default) 1: Open.	H	-	-	H
BO, 9	Enable max flow limit	W	Used to limit the flow. 0: No flow limitation 1: Flow limit active	•	-	-	H*

H: For MGE model H only.

*

- For Multi-E with a CIM module in the master pump. only set the master pump to CopyToLocal object BO,6 to value '1'.
- For Multi-E with a CIM module in two pumps. always set CopyToLocal object BO,6 to value '1' in both pumps. Any writings to control objects must be written to each pump.
- A TPED model H is essentially a Multi-E model H with two pumps. Mount a CIM module in each pump head. Always set CopyToLocal object BO,6 to value '1' in both pump heads. Any writings to control objects must be written to each pump head.

6.4 Multistate inputs

Objects that contain an enumeration value from the booster system.

ID	Object name	R/W	Notes	MGE model H and later Twin-head pump + MAGNA3 Twin-head pump	Hydro Multi-B	Hydro MPC	Hydro Multi-E
MI, 0	Actual control mode	R	<p>Reads the current control mode.</p> <p>1: Constant speed 2: Constant pressure 3: Proportional pressure 4: AUTO_{ADAPT} 5: Constant flow 6: Constant temperature 7: Constant level 8: Constant percentage 9: FLOW_{ADAPT} 10: Closed-loop sensor control 11: Constant diff. pressure 12: Constant diff. temperature See section 7.1 Control modes for details on the control modes.</p>	•	•	•	•
MI, 1	Actual operating mode	R	<p>Reads the current operating mode.</p> <p>1: Start (normal) 2: Stop 3: Minimum 4: Maximum.</p>	•	•	•	•
MI, 3	CIM status	R	<p>Reads the status of the CIM module, useful for fault finding.</p> <p>1: OK 2: EEPROM fault 3: Memory fault.</p>	•	•	•	•
MI, 4	Subpump 1 control source	R	<p>1: Buttons 2: GENIbus 3: GENIlink 4: External control.</p>	-	•	•	H
MI, 5	Subpump 2 control source	R	<p>1: Buttons 2: GENIbus 3: GENIlink 4: External control.</p>	-	•	•	H
MI, 6	Subpump 3 control source	R	<p>1: Buttons 2: GENIbus 3: GENIlink 4: External control.</p>	-	•	•	H
MI, 7	Subpump 4 control source	R	<p>1: Buttons 2: GENIbus 3: GENIlink 4: External control.</p>	-	•	•	H
MI, 8	Subpump 5 control source	R	<p>1: Buttons 2: GENIbus 3: GENIlink 4: External control.</p>	-	-	•	H
MI, 9	Subpump 6 control source	R	<p>1: Buttons 2: GENIbus 3: GENIlink 4: External control.</p>	-	-	•	H

ID	Object name	R/W Notes	MGE model H and later Twin-head pump + MAGNA3 Twin-head pump	Hydro Multi-B	Hydro MPC	Hydro Multi-E
MI, 10	Application type	R 1: Pressure boosting 2: Heating pumps on hot side 3: Heating pumps on cold side 4: AirCon pumps on hot side 5: AirCon pumps on cold side 6: MPC S2000 heating pumps on hot side 7: MPC S2000 heating pumps on cold side 8: MPC S2000 AirCon pumps on hot side 9: MPC S2000 AirCon pumps on cold side 10: Tank filling 11: Tank filling (float switches) 12: Undefined.	-	•	•	-
MI, 11	Feedback sensor unit	R 1: Unknown 2: bar 3: mbar 4: m 5: kPa 6: psi 7: ft 8: m ³ /h 9: m ³ /s 10: l/s 11: gpm 12: °C 13: °F 14: % 15: K 16: l/h.	•	•	•	H
MI, 12	Pilot pump control source	1: Buttons 2: GENIbus 3: GENIlink 4: External control.	-	-	•	-
MI, 13	Back-up pump control source	1: Buttons 2: GENIbus 3: GENIlink 4: External control.	-	-	•	-

6.5 Multistate outputs

Objects that set an enumeration value in the booster system.

ID	Object name	R/W	Notes	MGE model H and later Twin-head pump + MAGNA3 Twin-head pump	Hydro Multi-B	Hydro MPC	Hydro Multi-E
MO, 0	Set control mode	W	<p>Sets the control mode if bus control is enabled.</p> <p>1: Constant speed (default) 2: Constant pressure 3: Proportional pressure 4: AUTO_{ADAPT} 5: Constant flow 6: Constant temperature 7: Constant level 8: Constant percentage 9: FLOW_{ADAPT} 10: Closed-loop sensor control 11: Constant diff. pressure 12: Constant diff. temperature</p> <p>See section 7.1 Control modes for details on the control modes.</p>	•	-	•	H*
MO, 1	Set operating mode	W	<p>Sets the operating mode if bus control is enabled.</p> <p>1: Start (normal) 2: Stop (default) 3: Minimum 4: Maximum (Hydro MPC and Hydro Multi-E only).</p>	•	•	•	•*
MO, 2	Product simulation	W	<p>Enables product simulation (for commissioning and testing purposes, can only be enabled when no physical booster system is present).</p> <p>1: Disabled 5: Hydro Multi-E (Model G and earlier) 6: Hydro MPC 7: Hydro Multi-B. 10: Hydro Multi-E (MGE model H/I)</p> <p>See section 7.6 Product simulation for details.</p>	-	•	•	•
MO, 3	Control subpump 1	W	<p>Manual control of subpump 1.</p> <p>1: Automatic control (default) 2: Forced start (not available) 3: Forced stop.</p>	-	•	•	-
MO, 4	Control subpump 2	W	<p>Manual control of subpump 2.</p> <p>1: Automatic control (default) 2: Forced start (not available) 3: Forced stop.</p>	-	•	•	-
MO, 5	Control subpump 3	W	<p>Manual control of subpump 3.</p> <p>1: Automatic control (default) 2: Forced start (not available) 3: Forced stop.</p>	-	•	•	-
MO, 6	Control subpump 4	W	<p>Manual control of subpump 4.</p> <p>1: Automatic control (default) 2: Forced start (not available) 3: Forced stop.</p>	-	•	•	-
MO, 7	Control subpump 5	W	<p>Manual control of subpump 5.</p> <p>1: Automatic control (default) 2: Forced start (not available) 3: Forced stop.</p>	-	-	•	-

ID	Object name	R/W	Notes	MGE model H and later Twin-head pump + MAGNA3 Twin-head pump	Hydro Multi-B	Hydro MPC	Hydro Multi-E
MO, 8	Control subpump 6	W	Manual control of subpump 6. 1: Automatic control (default) 2: Forced start (not available) 3: Forced stop.	-	-	•	-
MO, 9	Control pilot pump	W	Manual control of pilot pump. 1: Automatic control (default) 2: Forced start (not available) 3: Forced stop.	-	-	•	-
MO, 10	Control back-up pump	W	Manual control of back-up pump. 1: Automatic control (default) 2: Forced start (not available) 3: Forced stop.	-	-	•	-

*

- For Multi-E with a CIM module in the master pump, only set the master pump to CopyToLocal object BO,6 to value '1'.
- For Multi-E with a CIM module in two pumps, always set CopyToLocal object BO,6 to value '1' in both pumps. Any writings to control objects must be written to each pump.
- A TPED model H is essentially a Multi-E model H with two pumps. Mount a CIM module in each pump head. Always set CopyToLocal object BO,6 to value '1' in both pump heads. Any writings to control objects must be written to each pump head.

6.6 Analog inputs

Objects with measured values and status information from the booster system.

ID	Object name	R/W	Notes	Unit	MGE model H and later Twin-head pump + MAGNA3 Twin-head pump	Hydro Multi-B	Hydro MPC	Hydro Multi-E
AI, 0	Fault code	R	Grundfos fault code. See section 12. <i>Grundfos alarm and warning codes</i> .	-	•	•	•	•
AI, 1	Warning code	R	Grundfos warning code. See section 12. <i>Grundfos alarm and warning codes</i> .	-	•	•	•	•
AI, 3	Capacity	R	Actual capacity value (process feedback).	%	•	•	•	•
AI, 4	Head	R	Actual system head/pressure.	bar	•	-	S	S
AI, 5	Flow	R	Actual system flow.	m ³ /h	•	-	S	S
AI, 6	Relative performance	R	Performance relative to maximum performance.	%	•	•	•	•
AI, 9	Actual setpoint	R	Actual setpoint.	%	M	•	•	•
AI, 13	Power	R	Total power consumption of the system.	W	•	•	•	•
AI, 15	Inlet pressure	R	System inlet pressure.	bar	H	S	S	H
AI, 16	Remote pressure	R	Measured pressure at external sensor.	bar	•	-	S	H
AI, 20	Remote temperature	R	Temperature at external sensor.	°C	H	-	S	S
AI, 22	Fluid temperature	R	Liquid temperature.	°C	•	-	-	H
AI, 25	Auxiliary sensor input	R	Auxiliary sensor input.	%	H	S	-	S
AI, 26	Specific energy	R	Specific energy of the system.	kWh/m ³	•	-	S	H
AI, 27	Runtime	R	Total operating time of the system.	h	•	•	•	•
AI, 30	Energy consumption	R	Total energy consumption of the system.	kWh	•	•	•	•
AI, 33	Ambient temperature	R	Ambient temperature.	°C	-	-	S	H
AI, 34	Forward temperature	R	Flow-pipe temperature.	°C	-	-	S	H
AI, 35	Return temperature	R	Return-pipe temperature.	°C	-	-	S	-
AI, 36	Differential temperature	R	Differential temperature.	°C	-	-	S	-
AI, 37	Outlet pressure	R	System outlet pressure.	bar	-	S	S	H
AI, 38	Feed tank level	R	Actual level in the feed tank.	m	H	-	S	H
AI, 39	Subpump 1 fault code	R	Fault code, subpump 1.	-	H	•	•	•
AI, 40	Subpump 1 runtime	R	Total operating time, subpump 1.	h	H	•	•	•
AI, 41	Subpump 1 speed	R	Actual speed, subpump 1.	%	H	•	•	H
AI, 42	Subpump 2 fault code	R	Fault code, subpump 2.	-	H	•	•	•
AI, 43	Subpump 2 runtime	R	Total operating time, subpump 2.	h	H	•	•	•
AI, 44	Subpump 2 speed	R	Actual speed, subpump 2.	%	H	•	•	H
AI, 45	Subpump 3 fault code	R	Fault code, subpump 3.	-	-	•	•	•
AI, 46	Subpump 3 runtime	R	Total operating time, subpump 3.	h	-	•	•	•
AI, 47	Subpump 3 speed	R	Actual speed, subpump 3.	%	-	•	•	H
AI, 48	Subpump 4 fault code	R	Fault code, subpump 4.	-	-	•	•	•
AI, 49	Subpump 4 runtime	R	Total operating time, subpump 4.	h	-	•	•	•
AI, 50	Subpump 4 speed	R	Actual speed, subpump 4.	%	-	•	•	H
AI, 51	Subpump 5 fault code	R	Fault code, subpump 5.	-	-	-	•	•
AI, 52	Subpump 5 runtime	R	Total operating time, subpump 5.	h	-	-	•	•
AI, 53	Subpump 5 speed	R	Actual speed, subpump 5.	%	-	-	•	H
AI, 54	Subpump 6 fault code	R	Fault code, subpump 6.	-	-	-	•	•
AI, 55	Subpump 6 runtime	R	Total operating time, subpump 6.	h	-	-	•	•

ID	Object name	R/W	Notes	Unit				
					MGE model H and later Twin-head pump + MAGNA3 Twin-head pump	Hydro Multi-B	Hydro MPC	Hydro Multi-E
AI, 56	Subpump 6 speed	R	Actual speed, subpump 6.	%	-	-	•	H
AI, 57	Remote temperature 2	R	Temperature at external temperature sensor 2.	°C	•	-	-	H
AI, 58	User setpoint	R	User-defined setpoint.	%	•	•	•	-
AI, 59	Analogue influence	R	Analog setpoint influence.	%	H	•	•	H
AI, 60	Power-on counter	R	Number of power-on cycles.	-	-	•	•	-
AI, 61	Subpump 1	R	Line current, subpump 1.	A	H	•	•	H
AI, 62	Subpump 1	R	Power consumption, subpump 1.	W	H	•	•	H
AI, 63	Subpump 1	R	Motor temperature, subpump 1.	°C	-	•	•	H
AI, 64	Subpump 1	R	Number of starts, subpump 1.	-	H	•	•	H
AI, 65	Subpump 2	R	Line current, subpump 2.	A	H	•	•	H
AI, 66	Subpump 2	R	Power consumption, subpump 2.	W	H	•	•	H
AI, 67	Subpump 2	R	Motor temperature, subpump 2.	°C	-	•	•	H
AI, 68	Subpump 2	R	Number of starts, subpump 2.	-	H	•	•	H
AI, 69	Subpump 3	R	Line current, subpump 3.	A	-	•	•	H
AI, 70	Subpump 3	R	Power consumption, subpump 3.	W	-	•	•	H
AI, 71	Subpump 3	R	Motor temperature, subpump 3.	°C	-	•	•	H
AI, 72	Subpump 3	R	Number of starts, subpump 3.	-	-	•	•	H
AI, 73	Subpump 4	R	Line current, subpump 4.	A	-	•	•	H
AI, 74	Subpump 4	R	Power consumption, subpump 4.	W	-	•	•	H
AI, 75	Subpump 4	R	Motor temperature, subpump 4.	°C	-	•	•	H
AI, 76	Subpump 4	R	Number of starts, subpump 4.	-	-	•	•	H
AI, 77	Subpump 5	R	Line current, subpump 5.	A	-	-	•	H
AI, 78	Subpump 5	R	Power consumption, subpump 5.	W	-	-	•	H
AI, 79	Subpump 5	R	Motor temperature, subpump 5.	°C	-	-	•	H
AI, 80	Subpump 5	R	Number of starts, subpump 5.	-	-	-	•	H
AI, 81	Subpump 6	R	Line current, subpump 6.	A	-	-	•	H
AI, 82	Subpump 6	R	Power consumption, subpump 6.	W	-	-	•	H
AI, 83	Subpump 6	R	Motor temperature, subpump 6.	°C	-	-	•	H
AI, 84	Subpump 6	R	Number of starts, subpump 6.	-	-	-	•	H
AI, 85	Minimum of feedback sensor	R	Minimum of feedback sensor.	(see MI, 11 for unit)	•	-	•	•
AI, 86	Maximum of feedback sensor	R	Maximum of feedback sensor.	(see MI, 11 for unit)	•	-	•	•
AI, 87	Actual tank-filling tank height	R	Tank height in tank-filling mode. See section 7.7 Tank-filling applications .	m	-	•	-	-
AI, 88	Actual tank-filling start limit	R	Start limit in percentage of tank height.	%	-	•	-	-
AI, 89	Actual tank-filling stop limit	R	Stop limit in percentage of tank height.	%	-	•	-	-
AI, 90	Actual tank-filling alarm high-limit	R	Alarm high-limit in percentage of tank height.	%	-	•	-	-
AI, 91	Actual tank-filling warning low-limit	R	Warning low-limit in percentage of tank height.	%	-	•	-	-
AI, 92	Load percent	R	Motor current in percentage of rated motor current.	%	•	-	-	H
AI, 93	Differential pressure	R	Pressure between pump flanges.	Bar	•	-	-	H

ID	Object name	R/W	Notes	Unit				
					MGE model H and later MAGNA3 Twin-head pump	Hydro Multi-B	Hydro MPC	Hydro Multi-E
AI, 94	Remote pressure 2	R	Pressure measured at remote sensor 2.	Bar	H	-	-	H
AI, 95	Actual flow limit	R	Actual maximum flow limit.	m ³ /h	●	-	-	H
AI, 96	Specific energy average	R	Average specific energy.	kWh/m ³	-	-	S	-
AI, 97	Flow measurement 1	R	Flow measurement 1.	m ³ /h	-	-	S	-
AI, 98	Flow measurement 2	R	Flow measurement 2.	m ³ /h	-	-	S	-
AI, 99	Flow measurement 3	R	Flow measurement 3.	m ³ /h	-	-	S	-
AI, 100	Pilot pump fault code	R	Fault code, pilot pump.	-	-	-	●	-
AI, 101	Pilot pump runtime	R	Total operating time, pilot pump.	h	-	-	●	-
AI, 102	Pilot pump speed	R	Actual speed, pilot pump.	%	-	-	●	-
AI, 103	Pilot pump line current	R	Line current, pilot pump.	A	-	-	●	-
AI, 104	Pilot pump power consumption	R	Power consumption, pilot pump.	W	-	-	●	-
AI, 105	Pilot pump motor temperature	R	Motor temperature, pilot pump.	°C	-	-	●	-
AI, 106	Pilot pump number of starts	R	Number of starts, pilot pump.	-	-	-	●	-
AI, 107	Back-up pump fault code	R	Fault code, backup pump.	-	-	-	●	-
AI, 108	Back-up pump runtime	R	Total operating time, backup pump.	h	-	-	●	-
AI, 109	Back-up pump speed	R	Actual speed, backup pump.	%	-	-	●	-
AI, 110	Back-up pump line current	R	Line current, backup pump.	A	-	-	●	-
AI, 111	Back-up pump power consumption	R	Power consumption, backup pump.	W	-	-	●	-
AI, 112	Back-up pump motor temperature	R	Motor temperature, backup pump.	°C	-	-	●	-
AI, 113	Back-up pump number of starts	R	Number of starts, backup pump.	-	-	-	●	-
AI, 114	Remote diff. temperature	R	Differential temperature at remote sensor	°C	-	-	-	H
AI, 115	Inlet diff. pressure	R	Differential pressure at the inlet pipe	Bar	H	-	-	H
AI, 116	Outlet diff. pressure	R	Differential pressure at the outlet pipe	Bar	H	-	-	H
AI, 117	Remote diff. pressure	R	Differential pressure at remote sensor	Bar	H	-	-	H
AI, 118	Storage tank Level	R	Water level in the storage tank	m	H	-	-	H
AI, 119	Heat energy counter	R	Life time accumulated heat energy Ext. temp. sensor required	1 kWh	●	-	-	-
AI, 120	Heat power	R	Current heat power External temperature sensor required	0.1 W	●	-	-	-
AI, 121	Heat differential temperature	R	Differential temperature External temperature sensors required	0.01 °C	●	-	-	-
AI, 122	Subpump 1	R	Energy consumption	kWh	-	-	●	H
AI, 123	Subpump 2	R	Energy consumption	kWh	-	-	●	H
AI, 124	Subpump 3	R	Energy consumption	kWh	-	-	●	H
AI, 125	Subpump 4	R	Energy consumption	kWh	-	-	●	H
AI, 126	Subpump 5	R	Energy consumption	kWh	-	-	●	H
AI, 127	Subpump 6	R	Energy consumption	kWh	-	-	●	H
AI, 128	Pilot pump	R	Energy consumption	kWh	-	-	●	-
AI, 129	Backup pump	R	Energy consumption	kWh	-	-	●	-

●: Always available.

H: Only for MGE model H and later

S: Sensor required.

6.7 Analog outputs

Object for setting a new setpoint in the booster system.

ID	Object name	R/W	Notes	Unit	MGE model H and later Twin-head pump + MAGNA3 Twin-head pump			
					Hydro Multi-B	Hydro MPC	Hydro Multi-E	
AO, 0	Set setpoint	W	Sets the booster system setpoint if bus control is enabled. A value of 0 does not imply a stop. See section 7.2 Setpoint .	%	●	●	●	●*
AO, 1	Tank-filling start limit	W	Sets the start limit in percentage of tank height.	%	-	●	-	-
AO, 2	Tank-filling stop limit	W	Sets the stop limit in percentage of tank height.	%	-	●	-	-
AO, 3	Tank-filling alarm high-limit	W	Sets the alarm high-limit in percentage of tank height.	%	-	●	-	-
AO, 4	Tank-filling warning low-limit	W	Sets the warning low-limit in percentage of tank height.	%	-	●	-	-
AO, 5	Set max. flow limit	W	Sets the maximum flow limit value.	m ³ /h	●	-	-	H*

*

- For Multi-E with a CIM module in the master pump, only set the master pump to CopyToLocal object BO,6 to value '1'.
- For Multi-E with a CIM module in two pumps, always set CopyToLocal object BO,6 to value '1' in both pumps. Any writings to control objects must be written to each pump.
- A TPED model H is essentially a Multi-E model H with two pumps. Mount a CIM module in each pump head. Always set CopyToLocal object BO,6 to value '1' in both pump heads. Any writings to control objects must be written to each pump head.

6.8 Analog values

Objects for configuration of the CIM/CIU 300 and 500 and the booster system.

ID	Object name	R/W	Notes	Unit	MGE model H and later Twin-head pump + MAGNA3 Twin-head pump	Hydro Multi-B	Hydro MPC	Hydro Multi-E
AV, 0	Custom Device Object Instance Number	R/W	Value for Custom Device Object Instance Number. Used in conjunction with DIP switch SW3. See section 3.5 Selecting the Device Object Instance Number . Present_Value range: 0-0x3FFFFE. Default Present_Value: 0xE7.	-	•	•	•	•
AV, 1	BACnet watchdog	R/W	Time in seconds before BACnet communication watchdog times out, and sets the booster system to use its local settings. See section 7.3 BACnet communication watchdog . 0: Disabled (default). Set to a value between 5 and 3600 to enable.	s	•	-	-	H
AV, 2	Simulation fault code	R/W	Fault code to simulate. See section 12. Grundfos alarm and warning codes . Can be cleared by writing a value of 0.	-	-	-	-	H
AV, 3	Simulation warning code	R/W	Warning code to simulate. See section 12. Grundfos alarm and warning codes . Can be cleared by writing a value of 0.	-	-	-	-	H
AV, 4	Simulation event code	R/W	Event code to simulate. The following event code values are available for simulation of CU 35X, among others: 000: No alarm 003: External fault 010: Booster system communication alarm 089: Closed-loop feedback sensor signal fault 088: General (measuring) sensor signal fault 203: All pumps in alarm 210: Pressure high 211: Pressure low 214: Water shortage 231: No ethernet address from DHCP server.	-	-	•	•	-
AV, 5	Simulation device type	R/W	Device type of simulated event. 0: Controller 2: Pump 3: IO 351 4: Primary sensor 7: IO 351 8: System 9: Analog input 10: Pilot booster system 11: Limit-exceeded function.	-	-	•	•	-
AV, 6	Simulation device number	R/W	Device number of simulated event. If the device type is "Pump", the device number indicates the pump number [1-6]. If the device type is "Analog input", the device number indicates the sensor that generated the event [1-7].	-	-	•	•	-

ID	Object name	R/W	Notes	Unit	MGE model H and later Twin-head pump + MAGNA3 Twin-head pump	Hydro Multi-B	Hydro MPC	Hydro Multi-E
AV, 7	Simulation event action type	R/W	The associated action to the event. 0: Go to operating mode "Stop". 1: Go to operating mode "Stop" (delay). 2: Go to operating mode "Minimum". 3: Go to operating mode "User-defined". 4: Go to operating mode "Maximum". 5: Set pumps in source mode to "Local control". 6: No action (warning only). 7: Go to operating mode "Emergency run".	-	-	-	•	-
AV, 8	Simulation event reset type	R/W	Resetting type for simulated event. Manual or automatic. 0: Manual resetting 1: Automatic resetting.	-	-	-	•	-
AV, 9	Product time and date	R/W	Pump time and date in UNIX format (seconds since 00:00 01-01-1970).	s	•	-	-	H
AV, 10	Proportional-control reduction	R/W	Reduction in % to be used in proportional-pressure control mode.	%	H	-	•	H
AV, 11	Proportional-control flow max.	R/W	Max. flow in m ³ /h to be used in proportional-pressure control mode.	m ³ /h	H	-	•	H
AV, 13	Remote Sensor 1	R/W	Remote Sensor 1 via BACnet (CU 352)	%	-	-	•	-
AV, 14	Remote Sensor 2	R/W	Remote Sensor 2 via BACnet (CU 352)	%	-	-	•	-
AV, 15	Remote Sensor 3	R/W	Remote Sensor 3 via BACnet (CU 352)	%	-	-	•	-
AV, 16	Remote Sensor 4	R/W	Remote Sensor 4 via BACnet (CU 352)	%	-	-	•	-
AV, 17	Remote Sensor 5	R/W	Remote Sensor 5 via BACnet (CU 352)	%	-	-	•	-
AV, 18	Remote Sensor 6	R/W	Remote Sensor 6 via BACnet (CU 352)	%	-	-	•	-

7. Detailed descriptions

7.1 Control modes

Control modes	Description	Illustration
Constant speed	<p>Open loop</p> <p>The setpoint of the booster system is interpreted as the setpoint for the system performance.</p> <p>The setpoint value is a percentage of the maximum performance of the pumps.</p> <p>No sensor is required.</p>	
Constant pressure Constant diff. pressure	<p>Closed loop</p> <p>The setpoint of the booster system is interpreted as the setpoint for the pressure.</p> <p>The controller in the booster system adapts the pump speed so that the pressure is constant, regardless of the flow.</p> <p>A pressure sensor is required.</p>	
Constant flow Constant level Constant temperature Constant diff. temperature Constant percentage Closed-loop sensor control	<p>Closed loop</p> <p>You can obtain these control modes by replacing the main pressure sensor by another relevant sensor. For example a flow sensor for flow control, a level sensor for level control and a temperature sensor for temperature control.</p> <p>Constant flow is illustrated to the right.</p>	
Proportional pressure	<p>Closed loop</p> <p>The setpoint of the booster system is interpreted as the setpoint for proportional-pressure mode (the black dot in the illustration).</p> <p>A pressure sensor is required. In this control mode, the booster system automatically adjusts the setpoint according to changes in flow, in order to save energy.</p>	
AUTO _{ADAPT}	<p>AUTO_{ADAPT}</p> <p>For this control mode, the optimum setpoint is automatically estimated and used. This also means that any setpoint value is ignored.</p> <p>A pressure sensor is required.</p> <p>Not supported by all products.</p>	
FLOW _{ADAPT}	<p>FLOW_{ADAPT} with flow limitation</p> <p>For this control mode, the optimum setpoint is automatically estimated and used, but the flow is limited by the maximum flow-limit value set by the user.</p> <p>Set the value with AO, 5.</p> <p>Not supported by all products.</p>	

H = Pressure (Head)

Q = Flow

For tank filling, see section [7.7 Tank-filling applications](#).

7.2 Setpoint

This object accepts values ranging from 0 to 100 (0 % to 100 %). The setpoint value can represent speed, pressure, flow, etc., depending on the selected control mode.

A setpoint of 0 does not imply a stop.

7.2.1 Setpoint in closed-loop control

Hydro MPC and Multi-E

The setpoint is written to AO, 0 Setpoint as a percentage value of the sensor maximum value, called FeedbackSensorMax.

The sensor minimum value is always 0. The selected setpoint is reflected in AI, 58 UserSetpoint with the same scaling.


The actual setpoint, whether it has been set with Grundfos GO Remote, the pump display, the pump buttons or the fieldbus, can be read from AI, 9 ActualSetpoint. It is a percentage value of FeedbackSensorMax.

Generally, the actual setpoint value represents head, pressure, flow, temperature and so on depending on how the feedback sensor has been set to measure. The unit of measure can be read from MI, 11 FeedbackSensorUnit.

Unless a setpoint influencing function, like proportional influence, is active, ActualSetpoint equals UserSetpoint.

It is possible to calculate back and forth between the setpoint in percent and its scaled value:

$$X_{act}[\text{unit}] = X_{set}[\%] \times \text{FeedbackSensorMax} \times \text{FeedbackSensorUnit}$$

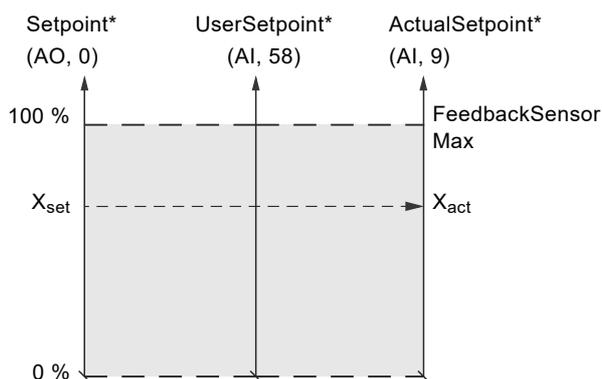

* Percentage of sensor maximum.

Fig. 14 Setpoint in closed-loop control for Hydro MPC and Multi-E

TPED and MAGNA3-D

The setpoint is written to AO, 0 Setpoint as a percentage value of the setpoint range $[r_{min}; r_{max}]$. The selected setpoint is reflected in AI, 58 UserSetpoint with the same scaling.


The actual setpoint, whether it has been set with Grundfos GO Remote, the pump display, the pump buttons or the fieldbus, can be read from AI, 9 ActualSetpoint. It is a percentage value of FeedbackSensorMax.

The actual setpoint value will in general represent head, pressure, flow, temperature and so on depending on how the feedback sensor has been set to measure. The unit of measure can be read from MI, 11 FeedbackSensorUnit.

It is possible to calculate back and forth between AI, 9 ActualSetpoint in percent and its scaled value:

$$X_{act}[\text{unit}] = X_{act}[\%] \times \text{FeedbackSensorMax} \times \text{FeedbackSensorUnit}$$

The setpoint range limits r_{min} and r_{max} cannot be read from the fieldbus, but can be found in the pump data sheet or they can be seen in the Grundfos GO Remote "Setpoint" menu.

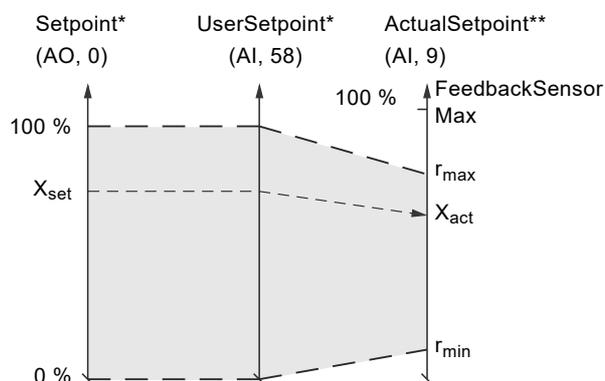

* Percentage of setpoint range.

** Percentage of sensor maximum.

Fig. 15 Setpoint in closed-loop control for TPED and MAGNA3-D

TM07 0147 4317


TM07 0148 4317

7.2.2 Setpoint in open-loop control

Hydro MPC and Multi-E

The setpoint is written to AO, 0 Setpoint as a percentage value of the maximum performance. The selected setpoint is reflected in AI, 58 UserSetpoint with the same scaling.

The actual setpoint, whether it has been set with Grundfos GO Remote, the pump or controller display or buttons, or the fieldbus, can be read from AI, 9 ActualSetpoint, and it reflects whatever limitations, for example power or frequency limits, that might be active in the system. It equals the value that the booster system actually uses.

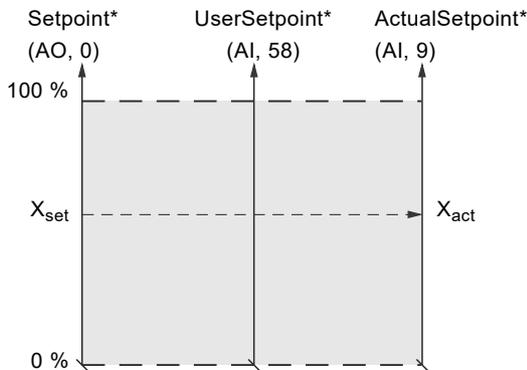

TM07 0149 4317


* Percentage of system performance.

Fig. 16 Setpoint in open-loop control for Hydro MPC and Multi-E

TPED and MAGNA3-D

The setpoint is written to AO, 0 Setpoint as a percentage value of the nominal pump frequency, f_{nom} . The selected setpoint is reflected in AI, 58 UserSetpoint with the same scaling. From fieldbus, it will get whatever value written to Setpoint but from pump display and Grundfos GO Remote, it is truncated to the internal pump frequency limits [f_{min} ; f_{max}].

The actual setpoint, whether it has been set with Grundfos GO Remote, the pump display, the pump buttons or the fieldbus, can be read from AI, 9 ActualSetpoint, and it always reflects the frequency limitations. It equals the value that the pump actually uses. Values of f_{min} , f_{max} and f_{nom} can be read in Grundfos GO Remote.

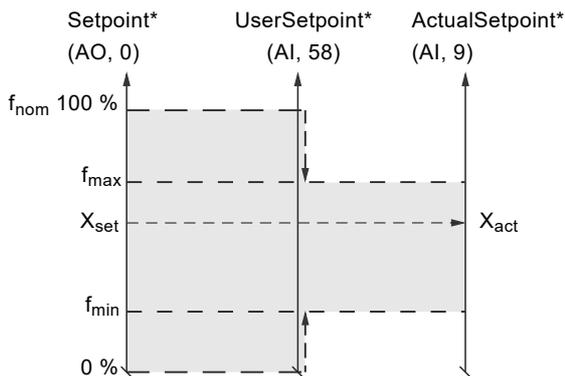

TM07 0150 4317

* Percentage of f_{nom} .

Fig. 17 Setpoint in open-loop control for TPED and MAGNA3-D

7.3 BACnet communication watchdog

A BACnet communication watchdog is implemented in CIM/CIU 300 and CIM/CIU 500. If no BACnet communication is detected for the time period defined by the BACnet watchdog object (AV, 1), and the control source of the booster system is set to Bus control (BO, 0), CIM 300 will make the booster system run with the settings defined in local mode.

This functionality can be used to define the booster system behaviour in case of a BACnet communication breakdown. Before enabling the watchdog, the local booster system settings must be made with either a Grundfos PC Tool or the Grundfos GO Remote (for Hydro Multi-E only). This ensures that the booster system behaves as expected if the BACnet communication breaks down.

When BACnet communication is re-established after a watchdog time-out, the booster system will run with the remote settings again.

When the Present_Value of the AV, 1 object is set to 0, the watchdog is disabled (default). To enable the watchdog, set the Present_Value to [5-3600] seconds.

7.4 Fault monitoring and resetting

The following example shows how to monitor faults or warnings in the booster system and how to manually reset a fault. This option is not available on CIM/CIU 500.

The Fault code object (AV, 0) and the Warning code object (AV, 1) can both hold a Grundfos-specific fault code. See section [12. Grundfos alarm and warning codes](#) for code interpretation.

Warnings are notifications only, and a warning will normally not stop the booster system.

If a fault is to be manually reset, use the Reset fault object (BO, 4). When the Present_Value of this object is set to 1, a Reset fault command is sent to the device.

Example:

Fault simulation can be helpful for testing alarm behaviour for a Hydro MPC booster system. The system will behave exactly as if a real alarm was present.

This example shows how to simulate a "Pressure high" alarm on a Hydro MPC that will result in a stop of all pumps, and require manual resetting.

- Set "Simulation event code" (AV, 4) to 210 (Pressure high).
- Set "Simulation device type" (AV, 5) to 8 (System).
- Set "Simulation device number" (AV, 6) to 1 (System).
- Set "Simulation event action type" (AV, 7) to 0 (Stop).
- Set "Simulation event reset type" (AV, 8) to 0 (Manual resetting).
- Set "Fault simulation" (BO, 5) to 1 (Enabled).
- The CU 35X will now enter into the system mode "Event action", and in this case stop all pumps, and the red LED on CU 35X will be on. On the CU 35X display, the "Pressure high" alarm is indicated.
- Read "Fault simulation status" (BI, 28), and see that it is set to 1 (Fault simulation enabled).
- Remove the simulated alarm settings by setting "Fault simulation" (BO, 5) to 0 (Disabled).
- Reset the alarm via the CU 35X display or via the BACnet object "Reset fault" (BO, 4), and CU 35X will go back to normal operation.

7.5 Control via BACnet

This example shows how to set a Hydro MPC to 50 % setpoint, constant-pressure mode and bus control.

Before enabling control via BACnet, values for setpoint, control mode and operating mode must be set.

- Enable bus control via the CU 35X display. Select "Settings" > "Secondary functions" > "Control source" and select "Controlled from bus").
- Set operating mode with Multistate output 1 (MO, 1). In this example, the value for operating mode must be 1 (Start).
- Set control mode with Multistate output 0 (MO, 0). A value of 2 corresponds to Constant pressure.
- Set the setpoint to a value of 50 with Analog output 0 (AO, 0). See section 7.2 *Setpoint* for details on setpoint.
- To enable bus control via BACnet, set the Binary output 0 (BO 0) to a value of 1.

Now the Hydro MPC should be running at 50 % in constant-pressure mode with bus control.

7.6 Product simulation

Product profile simulation, or booster system simulation, can be useful for testing and pre-commissioning purposes. It is possible to simulate a booster system profile when using a CIM/CIU 300 that is not connected to any product. CIM/CIU 300 will behave as if a booster system was connected on the GENibus, even if that is not the case. The objects supported by the simulated product will be available, although the data will only be dummy values that do not simulate real booster system behaviour.

Product simulation is enabled by setting the Multistate output object "Product simulation" (MO, 2):

Product to simulate	Value
Disabled (no simulation)	1
Hydro Multi-E before MGE model H	5
Hydro MPC (CU 352)	6
Hydro Multi-B (CU 323)	7
Hydro Multi-E (MGE model H and later)	10



Product simulation will always be disabled on power-up.



If a physical booster system is detected on GENibus at power-up, it will not be possible to enable product simulation.

7.7 Tank-filling applications

Normally, the Hydro Multi-B runs in pressure-boosting mode, but it can also be set to run in tank-filling mode.

Proceed as follows:

1. Set the application to tank-filling mode on CU 323 via a Grundfos PC Tool E-Products. This cannot be set via BACnet.
2. To enable bus control via BACnet, set the Binary output 0 (BO, 0) to the value of 1.
3. Set the tank height with Analog output 0 (AO, 0), Setpoint.
4. Set start and stop levels as well as alarm and warning limits with (AO, 1), (AO, 2), (AO, 3) and (AO, 4). Note that these values are set in percentage of the total tank height.

7.8 Remote sensors (CU 352)

A PLC fieldbus master with 1-6 connected analogue sensors can send the sensor readings to the Grundfos Hydro MPC via a CIM fieldbus. The MPC can display the values and use them for different planned functions like setpoint influencing.

8. Commissioning of hardware: step-by-step setup

8.1 CIM 300

Step	Action
1	Fit CIM 300 in CU 352 of the Hydro MPC or in CU 323 of the Hydro Multi-B booster system. With a Multi-E system using MGE motors model H or later, CIM 300 is installed in the master pump (typically where the system sensors are attached). Secure the module with screws.
2	Complete the booster configuration, for example sensor configuration, via the operating panel or PC Tool.
3	Select the BACnet MAC address (0-127) on CIM 300. See section 3.7 Selecting the BACnet MAC address .
4	Select the transmission speed of CIM 300. See section 3.4 Setting the BACnet transmission speed .
5	Select Device Object Instance Number. See section 3.5 Selecting the Device Object Instance Number .
6	If necessary, set line termination. See section 3.8 Termination resistor .
7	Connect the necessary cables from CIM 300 to the BACnet network. See section 3.3 Connecting to the BACnet network .
8	Confirm that the GENIbus LED is permanently green and that the BACnet LED is either off or flashing green, indicating communication. See section 3.10 LEDs .

CIM 300 is now configured and ready.

8.2 CIU 300

Step	Action
1	Complete the booster configuration, for example sensor configuration, via the operating panel or PC Tool.
2	Select the BACnet MAC address (0-127) on CIM 300. See section 3.7 Selecting the BACnet MAC address .
3	Select the transmission speed of CIM 300. See section 3.4 Setting the BACnet transmission speed .
4	Select Device Object Instance Number. See section 3.5 Selecting the Device Object Instance Number .
5	If necessary, set line termination. See section 3.8 Termination resistor .
6	Connect the GENIbus cable from CIU 300 to the booster system.
7	Connect the necessary cables from CIU 300 to the BACnet network. See section 3.3 Connecting to the BACnet network .
8	Connect the power cable to CIU 300, and switch it on.
9	Confirm that the GENIbus LED is permanently green and that the BACnet LED is either off or flashing green, indicating communication. See section 3.10 LEDs .

CIU 300 is now configured and ready.

8.3 CIM 500

Step	Action
1	Install CIM 500 in the Grundfos booster system according to the booster system documentation.
2	Select position 2 at the protocol rotary switch (see section 4.2 Setting the Industrial Ethernet protocol).
3	Power on the booster system, and observe LED2 turning permanently green and LED1 remaining off.
4	Complete the booster system configuration, for example sensor configuration and selection of local Operating mode, local Control mode and local Setpoint, for example with Grundfos GO Remote.
5	Connect one of the CIM 500 ethernet ports (RJ45) to a PC using an ethernet cable.
6	Configure the PC ethernet port to the same subnetwork as CIM 500, for example 192.168.1.1, and the subnet mask to 255.255.255.0. See section A.1 How to configure an IP address on your PC on page 42.
7	Open your internet browser and make contact to the CIM 500 webserver. Factory default address: 192.168.1.100
8	Log in to the webserver. Default: User: admin Password: Grundfos
9	In the menu column to the left, select "Configuration" > "Real time ethernet protocol".
10	Type in an IP address belonging to the same subnet as your PC, for example 192.168.1.2.
11	Type in the subnet mask 255.255.255.0, and leave the rest of the settings at their factory default values.
12	Click [Submit] to transfer the new settings, and close the web browser.

CIM 500 is now ready to be accessed from a BACnet IP master via one of its ethernet ports. Use the IP address selected under step 9.

- The CIM 500 LED1 flashes green when BACnet IP communication takes place.
- You can use the two ethernet ports for daisy chaining of CIM 500 modules.
- It is possible to have connection to the webserver simultaneously with a connection to a BACnet IP master.
- It is possible to have connection to more BACnet IP masters simultaneously, for example to have connection to PC Tool CIM/CIU while connected to another BACnet IP master.

8.4 CIU 500

Step	Action
1	Check that both the CIU 500 unit and the booster system are powered off.
2	Remove the front cover of the CIU 500 unit.
3	Select position 2 at the CIM 500 module protocol rotary switch (See section 4.2 Setting the Industrial Ethernet protocol).
4	Connect the GENibus cable from CIU 500 to the booster system. See fig. 5 in "CIU, Communication Interface Unit installation and operating instructions" or see the CIU quick guide)
5	Power on CIU 500 and the booster system, and observe LED2 turning permanently green and LED1 remaining off.
6	Connect one of the CIU 500 ethernet ports (RJ45) to a PC using an ethernet cable.
7	Configure the PC ethernet port to the same subnetwork as CIM 500, for example 192.168.1.1, and the subnet mask to 255.255.255.0. See section A.1 How to configure an IP address on your PC on page 42.
8	Open your internet browser, and make contact to the CIM 500 webserver. Factory default address: 192.168.1.100
9	Log in to the webserver. Default: User: admin Password: Grundfos
10	In the menu column to the left, select "Configuration" > "Real time ethernet protocol".
11	Type in an IP address belonging to the same subnet as your PC, for example 192.168.1.2.
12	Type in the subnet mask 255.255.255.0, and leave the rest of the settings at their factory default values.
13	Click [Submit] to transfer the new settings and close the web browser.

CIM 500 is now ready to be accessed from a BACnet IP master via one of its ethernet ports. Use the IP address selected under step 10.

- The CIU 500 LED1 flashes green when BACnet IP communication takes place.
- You can use the two ethernet ports for daisy chaining of CIM 500 modules.
- It is possible to have connection to the webserver simultaneously with a connection to a BACnet IP master.
- It is possible to have connection to more BACnet IP masters simultaneously, for example to have connection to PC Tool CIM/CIU while connected to another BACnet IP master.

9. Fault finding the product

9.1 CIM/CIU 300

9.1.1 LED status

You can detect faults in a CIM/CIU 300 by observing the status of the two communication LEDs. See the table below.

Fault (LED status)	Possible cause	Remedy
1. LED1 and LED2 remain off when the power supply is connected, and 5 seconds have passed.	a) CIM 300 is defective.	Replace CIM 300.
2. LED2 for internal communication is flashing red.	a) No internal communication between CIM/CIU 300 and the Grundfos booster system.	<ul style="list-style-type: none"> Check the cable connection between the booster system and CIU 300 (CIU only). Check that the individual conductors have been fitted correctly. Check the power supply to the booster system.
3. LED2 for internal communication is permanently red.	a) CIU 300 does not support the connected booster system.	Contact the nearest Grundfos company.
4. BACnet LED1 is permanently red.	a) Fault in the CIM 300 BACnet configuration.	<ul style="list-style-type: none"> Ensure that the BACnet MAC address has a valid setting. See section 3.7 Selecting the BACnet MAC address. Ensure that the Device Object Instance Number is within the allowed range. See section 3.5 Selecting the Device Object Instance Number.
5. BACnet LED1 is flashing red.	a) Fault in the BACnet communication (cyclic redundancy check).	<ul style="list-style-type: none"> Check the transmission speed, switches SW4 and SW5. See section 3.4 Setting the BACnet transmission speed. Check the cable connection between CIM 300 and the BACnet network. Check the termination resistor settings, switches SW1 and SW2. See section 3.8 Termination resistor.

9.1.2 BACnet faults

Fault	Possible cause	Remedy
1. CIM/CIU 300 does not communicate on the BACnet MS/TP network.	a) Configuration or wiring fault.	<p>Ensure that the cable between the BACnet MS/TP devices is connected correctly. See section 3.3 Connecting to the BACnet network.</p> <p>Ensure that the BACnet MAC address and Device Object Instance Number are configured correctly and are unique on the network. See section 3.7 Selecting the BACnet MAC address and 3.5 Selecting the Device Object Instance Number for address selection.</p> <p>Ensure that the transmission speed is configured correctly. See section 3.4 Setting the BACnet transmission speed.</p> <p>Ensure that each end of the BACnet MS/TP trunk cable is terminated, if necessary. See section 3.8 Termination resistor for line termination of Grundfos CIM/CIU 300.</p> <p>Ensure that the bus topology for a BACnet MS/TP network is correct.</p>
	b) CIM/CIU 300 is instructed to not communicate on the BACnet network via the DeviceCommunicationControl service.	Use the Device Communication Control service to enable communication from the device.
2. The booster system does not react to control commands from the bus.	a) The booster system is running in local mode.	<ul style="list-style-type: none"> Set the booster system to bus control by setting the Present_Value of BO, 0 to 1. Set bus control on the CU 35X display. Select "Settings" > "Secondary functions" > "Control source" and select "Controlled from bus".
3. There are only a few BACnet objects available, and the GENIbus LED flashes red.	a) There is no communication between CIM/CIU 300 and the booster system.	<p>Ensure that the GENIbus cable between CIM/CIU 300 and the booster system is connected correctly.</p> <p>Ensure that the booster system is switched on and able to communicate on GENIbus.</p>

9.2 CIM/CIU 500

You can detect faults in CIU 500 by observing the status of the two communication LEDs. See the table below.

9.2.1 LED status

CIU 500 fitted in a Grundfos booster system

Fault (LED status)	Possible cause	Remedy
1. LED1 and LED2 remain off when the power supply is connected.	a) CIM 500 is fitted incorrectly in the Grundfos product.	Check that CIM 500 is fitted and connected correctly.
	b) CIM 500 is defective.	Replace CIM 500.
2. LED2 is flashing red.	a) No internal communication between CIM 500 and the Grundfos product.	Check that CIM 500 is fitted correctly in the Grundfos product.
3. LED2 is permanently red.	a) CIM 500 does not support the Grundfos product connected.	Contact the nearest Grundfos company.
4. LED1 is permanently red.	a) Fault in the CIM 500 BACnet IP configuration.	Check that the rotary switch SW1 is set to 2. Check that the BACnet IP address configuration is correct. See section 4. BACnet IP, CIM 500 setup .
5. LED1 is permanently red and green at the same time.	a) Error in firmware download.	Use the webserver to download the firmware again.
6. LED2 is permanently red and green at the same time.	a) Memory fault.	Replace CIM 500.

CIM 500 fitted in CIU 500

Fault (LED status)	Possible cause	Remedy
1. LED1 and LED2 remain off when the power supply is connected.	a) CIU 500 is defective.	Replace CIU 500.
2. LED2 is flashing red.	a) No internal communication between CIU 500 and the Grundfos product.	<ul style="list-style-type: none"> • Check the cable connection between the Grundfos product and CIU 500. • Check that the individual conductors have been fitted correctly, for example not reversed. • Check the power supply to the Grundfos product.
3. LED2 is permanently red.	a) CIM 500 does not support the Grundfos product connected.	Contact the nearest Grundfos company.
4. LED1 is permanently red.	a) Fault in the CIM 500 BACnet IP configuration.	Check that the rotary switch SW1 is set to 2. Check that the BACnet IP address configuration is correct. See section 4. BACnet IP, CIM 500 setup .
5. LED1 is permanently red and green at the same time.	a) Error in firmware download.	Use the webserver to download the firmware again.
6. LED2 is permanently red and green at the same time.	a) Memory fault.	Replace CIM 500.

9.2.2 CIM/CIU 500 BACnet IP communication faults

Fault	Possible cause	Remedy
1. The slave does not respond to telegrams.	a) Configuration or wiring error.	<ul style="list-style-type: none"> Check the visual diagnostics on the BACnet slave. Normal conditions are that the Grundfos GENibus LED (LED2) is permanently green and that the BACnet IP LED (LED1) is off or flashing green. If this is not fulfilled, see section 9.2.1 LED status. Ensure that the cable between the BACnet IP master and the BACnet slave is connected correctly. See section 4.1 Connecting the ethernet cable.
2. The slave returns data value 0xFFFF (65535).	a) The value is unavailable. A data value of 0xFFFF does not necessarily indicate an error condition. It means that the value is unavailable from the booster system.	See section 6. Object overview for available data.
	b) The booster system is not configured to show the value or lacks a sensor to read the value.	See section 6.8 Analog values for data values that require a sensor.
3. The slave does not react to control actions or to writing of settings.	The booster system might be in "Local" mode, in which case Operating mode, Control mode and Setpoint cannot be changed from the bus.	Set the booster system in "Remote mode" by setting register BACnetBO,0 to "1" (=Remote). The booster system should show "Controlled from bus" on the booster display. Select "Settings" > "Secondary function" > "Control source" and select "Controlled from bus".

10. BACnet telegrams

10.1 BACnet MS/TP telegram overview

All BACnet MS/TP telegrams have the following format:

Preamble	Telegram type	Destination	Source	Length	Header CRC	Data	Data CRC	Pad
2 bytes: 0x55 0xFF	1 byte	1 byte	1 byte	2 bytes, MSB first	1 byte	Variable, [0-501] bytes	2 bytes, LSB first	At most 1 byte 0xFF

For BACnet MS/TP, the destination address and source address are MAC addresses. See section [3.7 Selecting the BACnet MAC address](#). A destination address of 255 (0xFF) denotes broadcast. The length field specifies the length in bytes of the data field which must be between 0 and 501 bytes long.

10.2 Telegram types

The available telegram types are listed below.

Type	Name	Description
00	Token	Used to pass network mastership to the destination device.
01	Poll for master	Discovers the presence of other master devices on the network.
02	Reply to poll for master	Used by a master to indicate a wish to enter the token ring.
03	Test request	Used to initiate a loopback test.
04	Test response	A reply to a test request telegram.
05	BACnet data, expecting reply	Used for data transmission where a reply is expected.
06	BACnet data, not expecting reply	Used for data transmission where no reply is expected.
07	Reply postponed	Used by master devices to defer sending a BACnet data reply.

11. BACnet MAC address, CIM 300

BACnet address	SW6	SW7
0	0	0
1	0	1
2	0	2
3	0	3
4	0	4
5	0	5
6	0	6
7	0	7
8	0	8
9	0	9
10	0	A
11	0	B
12	0	C
13	0	D
14	0	E
15	0	F
16	1	0
17	1	1
18	1	2
19	1	3
20	1	4
21	1	5
22	1	6
23	1	7
24	1	8
25	1	9
26	1	A
27	1	B
28	1	C
29	1	D
30	1	E
31	1	F
32	2	0
33	2	1
34	2	2
35	2	3
36	2	4
37	2	5
38	2	6
39	2	7
40	2	8
41	2	9
42	2	A
43	2	B
44	2	C
45	2	D
46	2	E
47	2	F
48	3	0
49	3	1
50	3	2

BACnet address	SW6	SW7
51	3	3
52	3	4
53	3	5
54	3	6
55	3	7
56	3	8
57	3	9
58	3	A
59	3	B
60	3	C
61	3	D
62	3	E
63	3	F
64	4	0
65	4	1
66	4	2
67	4	3
68	4	4
69	4	5
70	4	6
71	4	7
72	4	8
73	4	9
74	4	A
75	4	B
76	4	C
77	4	D
78	4	E
79	4	F
80	5	0
81	5	1
82	5	2
83	5	3
84	5	4
85	5	5
86	5	6
87	5	7
88	5	8
89	5	9
90	5	A
91	5	B
92	5	C
93	5	D
94	5	E
95	5	F
96	6	0
97	6	1
98	6	2
99	6	3
100	6	4
101	6	5

BACnet address	SW6	SW7
102	6	6
103	6	7
104	6	8
105	6	9
106	6	A
107	6	B
108	6	C
109	6	D
110	6	E
111	6	F
112	7	0
113	7	1
114	7	2
115	7	3
116	7	4
117	7	5
118	7	6
119	7	7
120	7	8
121	7	9
122	7	A
123	7	B
124	7	C
125	7	D
126	7	E
127	7	F

If the MAC address switches are set to an invalid MAC address value, a MAC address of 0 will be used.

12. Grundfos alarm and warning codes

This is a complete list of alarm and warning codes for Grundfos products. For the codes supported by this product, see the alarms and warnings section.

Code	Description	Code	Description	Code	Description
1	Leakage current	36	Outlet valve leakage	71	Motor temperature 2 (Pt100, t_mo2)
2	Missing phase	37	Inlet valve leakage	72	Hardware fault, type 1
3	External fault signal	38	Vent valve defective	73	Hardware shutdown (HSD)
4	Too many restarts	39	Valve stuck or defective	74	Internal supply voltage too high
5	Regenerative braking	40	Undervoltage	75	Internal supply voltage too low
6	Mains fault	41	Undervoltage transient	76	Internal communication fault
7	Too many hardware shutdowns	42	Cut-in fault (dV/dt)	77	Communication fault, twin-head pump
8	PWM switching frequency reduced	43	-	78	Fault, speed plug
9	Phase sequence reversal	44	-	79	Functional fault, add-on module
10	Communication fault, pump	45	Voltage asymmetry	80	Hardware fault, type 2
11	Water-in-oil fault (motor oil)	46	-	81	Verification error, data area (RAM)
12	Time for service (general service information)	47	-	82	Verification error, code area (ROM, FLASH)
13	Moisture alarm, analog	48	Overload	83	Verification error, FE parameter area (EEPROM)
14	Electronic DC-link protection activated (ERP)	49	Overcurrent (i_line, i_dc, i_mo)	84	Memory access error
15	Communication fault, main system (SCADA)	50	Motor-protection function, general shutdown (MPF)	85	Verification error, BE parameter area (EEPROM)
16	Other	51	Blocked motor or pump	86	Fault (add-on) I/O module
17	Performance requirement cannot be met	52	Motor slip high	87	-
18	Commanded alarm standby (trip)	53	Stalled motor	88	Sensor fault
19	Diaphragm break (dosing pump)	54	Motor-protection function, 3 sec. limit	89	Signal fault, (feedback) sensor 1
20	Insulation resistance low	55	Motor current protection activated (MCP)	90	Signal fault, speed sensor
21	Too many starts per hour	56	Underload	91	Signal fault, temperature sensor 1
22	Moisture switch alarm, digital	57	Dry running	92	Calibration fault, (feedback) sensor
23	Smart trim gap alarm	58	Low flow	93	Signal fault, sensor 2
24	Vibration	59	No flow	94	Limit exceeded, sensor 1
25	Setup conflict	60	Low input power	95	Limit exceeded, sensor 2
26	Load continues even if the motor has been switched off	61	-	96	Setpoint signal outside range
27	External motor protector activated (for example MP 204)	62	-	97	Signal fault, setpoint input
28	Battery low	63	-	98	Signal fault, input for setpoint influence
29	Turbine operation (impellers forced backwards)	64	-	99	Signal fault, input for analog setpoint
30	Change bearings (specific service information)	65	Motor temperature 1 (t_m or t_mo or t_mo1)	100	RTC time synchronisation with cellular network occurred
31	Change varistor(s) (specific service information)	66	Temperature, control electronics (t_e)	101	-
32	Overvoltage	67	Temperature too high, internal frequency converter module (t_m)	102	Dosing pump not ready
33	Soon time for service (general service information)	68	External temperature or water temperature (t_w)	103	Emergency stop
34	No priming water	69	Thermal relay 1 in motor, for example Klixon	104	Software shutdown
35	Gas in pump head, de-aerating problem	70	Thermal relay 2 in motor, for example thermistor	105	Electronic rectifier protection activated (ERP)

Code	Description	Code	Description	Code	Description
106	Electronic inverter protection activated (EIP)	141	-	176	Signal fault, temperature sensor 3 (t_mo3)
107	-	142	-	177	Signal fault, Smart trim gap sensor
108	-	143	-	178	Signal fault, vibration sensor
109	-	144	Motor temperature 3 (Pt100, t_mo3)	179	Signal fault, bearing temperature sensor (Pt100), general or top bearing
110	Skew load, electrical asymmetry	145	Bearing temperature high (Pt100), in general or top bearing	180	Signal fault, bearing temperature sensor (Pt100), middle bearing
111	Current asymmetry	146	Bearing temperature high (Pt100), middle bearing	181	Signal fault, PTC sensor (short-circuited)
112	Cosφ too high	147	Bearing temperature high (Pt100), bottom bearing	182	Signal fault, bearing temperature sensor (Pt100), bottom bearing
113	Cosφ too low	148	Motor bearing temperature high (Pt100) in drive end (DE)	183	Signal fault, extra temperature sensor
114	Motor heater function activated (frost protection)	149	Motor bearing temperature high (Pt100) in non-drive end (NDE)	184	Signal fault, general-purpose sensor
115	Too many grinder reversals or grinder reversal attempt failed	150	Fault (add-on) pump module	185	Unknown sensor type
116	Grinder motor overtemperature	151	Fault, display (HMI)	186	Signal fault, power meter sensor
117	Intrusion (door opened)	152	Communication fault, add-on module	187	Signal fault, energy meter
118	Signal fault, hydrogen sulfide H2S sensor	153	Fault, analog output	188	Signal fault, user-defined sensor
119	Signal fault, analog input AI4	154	Communication fault, display	189	Signal fault, level sensor
120	Auxiliary winding fault (single phase motors)	155	Inrush fault	190	Limit exceeded, sensor 1 (for example alarm level in WW application)
121	Auxiliary winding current too high (single-phase motors)	156	Communication fault, internal frequency converter module	191	Limit exceeded, sensor 2 (for example high level in WW application)
122	Auxiliary winding current too low (single-phase motors)	157	Real-time clock out of order	192	Limit exceeded, sensor 3 (for example overflow level in WW application)
123	Start capacitor, low (single-phase motors)	158	Hardware circuit measurement fault	193	Limit exceeded, sensor 4 (for example low level in WW/tank filling application)
124	Run capacitor, low (single-phase motors)	159	CIM fault (Communication Interface Module)	194	Limit exceeded, sensor 5
125	Signal fault, outdoor temperature sensor	160	Cellular modem, SIM card fault	195	Limit exceeded, sensor 6
126	Signal fault, air temperature sensor	161	Sensor supply fault, 5 V	196	Operation with reduced efficiency
127	Signal fault, shunt relative pressure sensor	162	Sensor supply fault, 24 V	197	Operation with reduced pressure
128	Strainer clogged	163	Measurement fault, motor protection	198	Operation with increased power consumption
129	-	164	Signal fault, LiqTec sensor	199	Process out of range (monitoring, estimation, calculation, control)
130	-	165	Signal fault, analog input 1	200	Application alarm
131	-	166	Signal fault, analog input 2	201	External sensor input high
132	-	167	Signal fault, analog input 3	202	External sensor input low
133	-	168	Signal fault, pressure sensor	203	Alarm on all pumps
134	-	169	Signal fault, flow sensor	204	Inconsistency between sensors
135	-	170	Signal fault, water-in-oil (WIO) sensor	205	Level float switch sequence inconsistency
136	-	171	Signal fault, moisture sensor	206	Water shortage, level 1
137	-	172	Signal fault, atmospheric pressure sensor	207	Water leakage
138	-	173	Signal fault, rotor position sensor (Hall sensor)	208	Cavitation
139	-	174	Signal fault, rotor origo sensor	209	Non-return valve fault
140	-	175	Signal fault, temperature sensor 2 (t_mo2)	210	High pressure

Code	Description	Code	Description	Code	Description
211	Low pressure	226	Communication fault, I/O module	241	Motor phase failure
212	Diaphragm tank precharge pressure out of range	227	Combi event	242	Automatic motor model recognition failed
213	VFD not ready	228	Night flow max. limit exceeded	243	Motor relay has been forced (manually operated or commanded)
214	Water shortage, level 2	229	Water on floor	244	Fault, On/Off/Auto switch
215	Soft pressure buildup time-out	230	Network alarm	245	Pump continuous runtime too long
216	Pilot pump alarm	231	Ethernet: No IP address from DHCP server	246	User-defined relay has been forced (manually operated or commanded)
217	Alarm, general-purpose sensor high	232	Ethernet: Auto-disabled due to misuse	247	Power-on notice, (device or system has been switched off)
218	Alarm, general-purpose sensor low	233	Ethernet: IP address conflict	248	Fault, battery/UPS
219	Pressure relief not adequate	234	Backup pump alarm	249	User-defined event 1
220	Fault, motor contactor feedback	235	Gas detected	250	User-defined event 2
221	Fault, mixer contactor feedback	236	Pump 1 fault	251	User-defined event 3
222	Time for service, mixer	237	Pump 2 fault	252	User-defined event 4
223	Time for service, mixer	238	Pump 3 fault	253	SMS data from DDD sensor not received within time limit
224	Pump fault, due to auxiliary component or general fault	239	Pump 4 fault	254	Inconsistent data model
225	Communication fault, pump module	240	Lubricate bearings (specific service information)		


Appendix

The appendix describes the parts of the CIM 500 webserver needed for the configuration of a BACnet IP ethernet connection. For other CIM 500 webserver features, not specifically related to BACnet IP, see the installation and operating instructions for CIM 500.

A.1 How to configure an IP address on your PC

For connecting a PC to CIM 500 via ethernet, the PC must be set to use a fixed (static) IP address belonging to the same subnetwork as CIM 500.

1. Open "Control Panel".
2. Enter "Network and Sharing Center".
3. Click "Change adapter settings".
4. Right-click and select "Properties" for ethernet adapter. Typically "Local Area Connection".
5. Select properties for "Internet Protocol Version 4(TCP/IPv4).
6. Select the "Alternate Configuration" tab.
7. Configure an IP address and subnet mask to be used by your PC. See fig. 1.

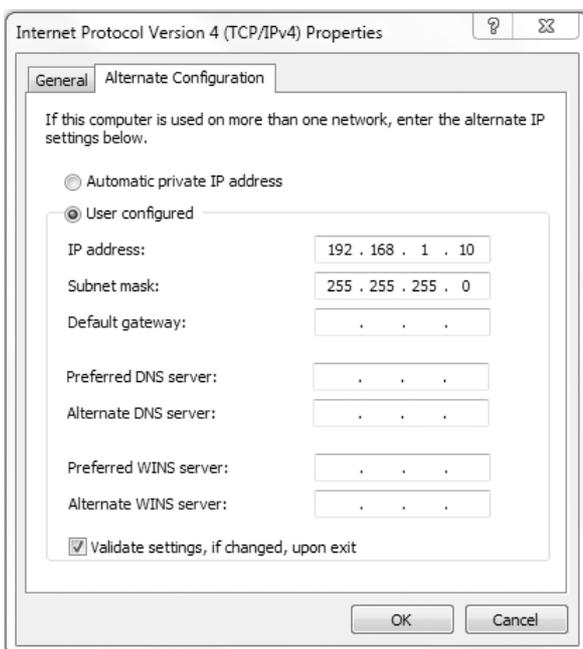

TM05 7422 1814

Fig. 1 Example from Windows 7

A.2 Webserver configuration

The built-in webserver is an easy and effective way to monitor the status of CIM 500 and configure the available functions and Industrial Ethernet protocols. The webserver also makes it possible to update the firmware of CIM 500, and store or restore settings.

To establish a connection from a PC to CIM 500, proceed as follows:


Before configuration

- Check that the PC and CIM 500 are connected via an ethernet cable.
- Check that the PC ethernet port is set to the same network as the CIM 500. For network configuration, see section [A.1 How to configure an IP address on your PC](#).

To establish a connection from a PC to CIM 500 for the first time, the following steps are required:

1. Open a standard Internet browser and type 192.168.1.100 in the URL address field.
2. Log in to the webserver.

A.3 Login

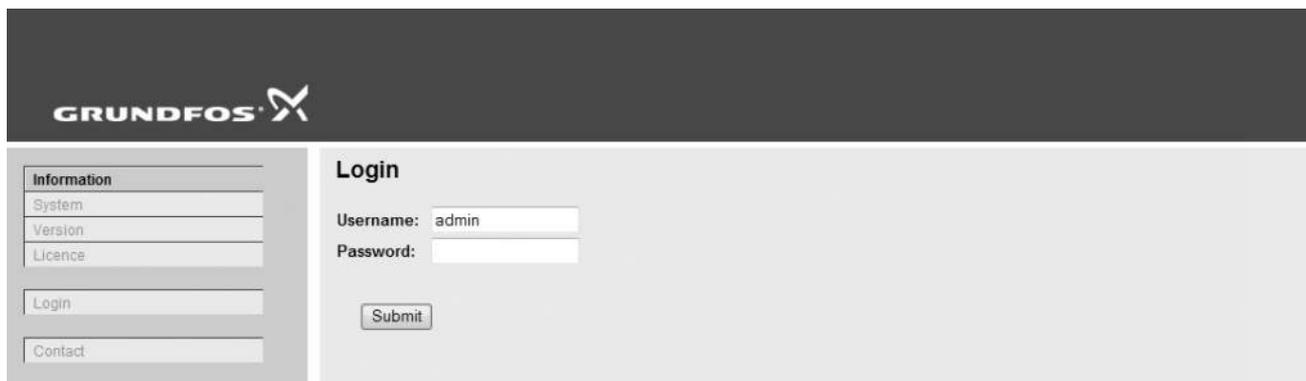

GRUNDFOS

Information

System

Version

Licence

Login

Contact

Login

Username: admin

Password:

Submit

TM05 6063 1814

Fig. 2 Login

User name Enter user name. Default: admin.

Password Enter password. Default: Grundfos.



User name and password can be changed on the webserver under "User Management"

A.4 BACnet IP configuration

GRUNDFOS

Real Time Ethernet Protocol Configuration - BACnet IP

Protocol Settings

UDP Port Number: 47808

Device Instance: 227000

Device Name:

Device Location:

Max APDU: 1476

Custom device instance enable:

Foreign Device settings

Foreign Device:

IP Address: 0.0.0.0

UDP Port : 47808

Re Register Time: 30

Submit

TM060817 1014

Fig. 3 Real Time Ethernet Protocol Configuration - BACnet IP

Object	Description
UDP Port Number	Select the UDP port number. The default number is 47808, the standard UDP port number for BACnet IP.
Device Instance	Select the Device Instance. The default number is 227000. The Device Instance must be unique in the BACnet network. Grundfos is 227 and it is fixed. The last three digits can be changed.
Device Name	You can name the device. The device name must be unique in the BACnet network (optional).
Device Location	You can name the device location for local identification (optional).
Max APDU	Select the maximum Application Protocol Data Unit, between 50 and 1476. By default it is 1476 bytes.
Custom device instance enable	If ticked, CIM 500 is configured to use a BACnet custom device instance number.
Foreign Device	If ticked, CIM 500 is configured as a foreign device.
IP Address	Enter the foreign IP address.
UDP Port	Select the UDP port number. The default number is 47808.
Re Register Time	Select the time period during which the foreign device must re-register on the BACnet network.



The IP address and subnet mask can be defined under "Network Settings".

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomssesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарьянская, 11, оф. 56, БЦ
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

COLOMBIA

GRUNDFOS Colombia S.A.S.
Km 1.5 vía Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Phone: +57(1)-2913444
Telefax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

GRUNDFOS Sales Czechia and Slovakia s.r.o.

Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Phone: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT. GRUNDFOS POMPA
Graha Intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Phone: +62 21-469-51900
Telefax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku,
Hamamatsu
431-2103 Japan
Phone: +81 53 428 4760
Telefax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de
C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia

ООО Грундфос Россия
ул. Школьная, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 8811
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D
821 09 BRATISLAVA
Phona: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Phone: +386 (0) 1 568 06 10
Telefax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

Grundfos (PTY) Ltd.
16 Lascelles Drive, Meadowbrook Estate
1609 Germiston, Johannesburg
Tel.: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentequilla, s/n
E-28110 Algiete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Telefax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloe Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
Ihsan dede Caddesi,
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столицне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс.: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
9300 Loiret Blvd.
Lenexa, Kansas 66219
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The Repre-
sentative Office of Grundfos Kazakhstan in
Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150
3291
Факс: (+998) 71 150 3292

Addresses Revised 15.01.2019

97572671 1119

ECM: 1271284

Trademarks displayed in this material, including but not limited to Grundfos, the Grundfos logo and "be think innovate" are registered trademarks owned by The Grundfos Group. All rights reserved. © 2019 Grundfos Holding A/S, all rights reserved.